# TASCAM TEAC Production Products



**SERVICE MANUAL** 

122

MASTER CASSETTE DECK


# TABLE OF CONTENTS


1 Spec	eifications	3	6-4.	Constan assembly thrust	11
	cures and controls	3	6-5.	Capstan assembly thrust	
		4		Takeup torque	
2-1.	Front panel features and controls		6-6.	Fast forward and rewind torque	
2-2.	Rear panel connections	5	6-7.	Pinch roller pressure	
	uit description		6-8.	Tape speed	
	ol section	_	_6-9.	Wow and flutter	45
3-1.	System control IC	6		ord/reproduce amplifier checks and	
3-2.	System control IC input/output		•	stments	
	circuits		7-1.	Reproduce output level setting	
3-3.	Solenoid drive circuit		7-2.	VU meter setting	47
3-4.	Reel motor drive circuit	15	7-3.	Reproduce frequency response	47
3-5.	Capstan motor circuit	18	7-4.	Bias setting adjustment	48
3-6.	Tape-end detection circuit	18	7-5.	Record level	48
3-7.	Memory circuit	20	7-6.	Overall frequency response	48
3-8.	Power supply circuits	20	7-7.	Overall signal-to-noise ratio	49
3-9.	Overall operation of the deck	24	7-8.	Overall distortion	
3-10.	Muting circuits		7-9.	Erasure	49
Ampl	ifier section		7-10.	Channel separation	50
3-11.	Reproduce circuit	30		LED lighting of VU meter (PEAK	
	Monitor circuit			indicator)	50
3-13.	Record circuits	34	7-12.	Dolby Noise Reduction effect	
	Dolby HX circuit		7-13.	Dolby HX effect	50
	s location			Headphones output level	
	ntial maintenance			Bias trap adjustment	
	pment/material	42		BIAS/REC calibration check	
	tro-mechanical checks and adjustment			oded views and parts lists	
6-1.				oards and parts lists	
6-2.	Microswitch (A) assembly	-		conductors lists	
	The second secon	43		mbling hardware coding lists	
6-3.	Microswitch (B) assembly			k-diagram	
<b>.</b>	clearance	43	.2.5100		00

NOTES: 1. In the diagram of each PC board, its pattern surface is shown.

- 2. With certain exceptions, the reference numbers in the 100's, 300's and 700's refer to the Lch, and those in the 200's, 400's and 800's to the Rch.
- 3. Parts marked with △ are safety critical components.

  They must always be replaced with components specified by TEAC.
- 4. Service data are found where they are necessary. Improvements may result in service data changes without notice.
- Dolby Noise Reduction System manufactured under license from Dolby Laboratories Licensing Corporation.
- 'Dolby' and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

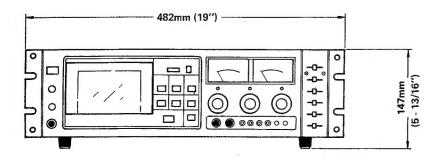

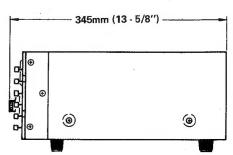

# 1. SPECIFICATIONS

MECHANICAL Philips Type Cassette C-60 and C-90 Tape: 4-Track, 2-Channel Stereo Track Format: 1-7/8 ips and 3-3/4 ips Tape Speed: ±0.5 % Deviation 1-7/8 ips Speed Accuracy: ±0.5 % Deviation 3-3/4 ips ±0.085 % peak (DIN/IEC/ANSI weighted) 1-7/8 ips 1) Wow & Flutter: ±0.18 % peak (DIN/IEC/ANSI unweighted) 0.06 % (NAB weighted) 0.11 % (NAB unweighted) ±0.055 % peak (DIN/IEC/ANSI weighted) 3-3/4 ips 2) ±0.13 % peak (DIN/IEC/ANSI unweighted) 0.04 % (NAB weighted) 0.07 % (NAB unweighted) 90 secs. for MTT-501 (C-60) Fast Wind Time: 1 FG Servo Controlled DC Motor Motor: 1 DC Reel Motor 3 Heads; Erase, Playback/Record **Head Configuration:** 482 x 147 x 345 mm (19" x 5-13/16" x 13-9/16") Dimensions (WxHxD): 19-13/16 lbs. (9 kg) net Weight: ELECTRICAL Line Input 1, 2: 50k ohms unbalanced Input Impedance: 10k ohms or less Maximum Source Impedance: -14 dBV (190 mV) Nominal Input Level: -24 dBV (60 mV) Minimum Input Level: Line Output: 25k ohms or more, unbalanced Minimum Load Impedance: 3.5k ohms or less Output Impedance: -10 dBV (0.3 V) Nominal Output Level: ~7.5 dBV (0.42 V) Maximum Output Level: 100 mW Maximum at 8 ohms Headphone Output: 100 kHz Bias Frequency: 3180  $\mu$ s. + 70  $\mu$ s. 1-7/8 ips Equalization: 3180  $\mu$ s. + 120  $\mu$ s. switchable  $3180 \mu s. + 35 \mu s.$ 3-3/4 ips 3180  $\mu$ s. + 50  $\mu$ s. switchable 35 Hz - 14 kHz ±3 dB at -20 VU Frequency Response3) 1-7/8 ips 35 Hz - 6.3 kHz ±3 dB at 0 VU (Record/reproduce): 35 Hz - 20 kHz ±3 dB at -20 VU 3-3/4 ips 35 Hz - 15 kHz ±3 dB at 0 VU 1 % at 0 VU, 1 kHz, 160 nWb/m Total Harmonic Distortion (THD)3): 3 % at 9 dB above 0 VU, 1 kHz, 451 nWb/m 1-7/8 ips 3 % at 10 dB above 0 VU, 1 kHz, 506 nWb/m 3-3/4 ips At a reference of 3 % distortion level Signal to Noise Ratio<sup>3)</sup>: 1-7/8 ips 58 dB weighted 55 dB unweighted 92 dB weighted with DBX 63 dB weighted 3-3/4 ips 58 dB unweighted 92 dB weighted with DBX Better than 35 dB at 1 kHz **Adjacent Channel Separation:** Better than 65 dB at 1 kHz + 10 VU reference Erasure: Headroom: Better than 19 dB above 0 VU Recording Amplifier:

Better than 19 dB above 0 VU

100/120/220/240 V AC, 50/60 Hz, 41 watts (General Export Model),

120 V AC, 60 Hz, 41 watts (U.S.A./Canada Model), 220 V AC, 50 Hz, 41 watts (Europe Model), 240 V AC, 50 Hz, 41 watts (U.K./Australia Model)

In these specs. 0 dBV is referenced to 1 V.

Reproduce Amplifier:

Power Requirements:

<sup>1)</sup> Specifications were determined using TEAC Test Tape MTT-111.


Specifications were determined using TEAC Test Tape MXT-111.

<sup>3)</sup> Specifications were determined using TEAC Test Tape MTT-506.

Changes in specifications and features may be made without notice or obligation.

# 2. FEATURES AND CONTROLS

# 2-1. FRONT PANEL FEATURES AND CONTROLS

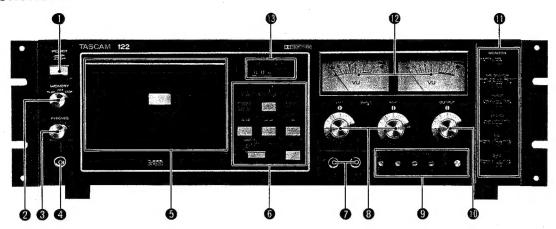

#### POWER switch

# MEMORY switch

This works in conjunction with the TAPE COUNTER and rewind function to rewind to any required part of the tape. The tape will be rewound to the 000 position on the tape counter (actually to 999, just past the 000 position). The 000 position can be reset at any position on the tape by pressing the reset button. If the ME-MORY switch is in the STOP position, when the rewind (◄) button is pressed, the tape will be rewound until the counter has counted down to 999 (just beyond 000) and the tape will stop automatically. If the MEMORY switch is in the PLAY position, when the counter has counted down to 999, the tape will stop and then be played back automatically.

## **9** PHONES control

Adjusts the output volume for the headphones.

## **O PHONES jack**

Suitable for 8-ohm stereo headphones.

#### 6 Cassette holder

The face plate of this door can be removed for easy access to the heads for cleaning, etc.

## **6** Transport controls

- ► (Play) button
- ∢ (Rewind) button
- **▶** (Fast Forward) button

STOP button

**EJECT** button

**RECORD** button

#### **PAUSE** button

# **REC MUTE (Record Muting) button**

If the REC MUTE button is pressed while a recording is being made, only an erase signal is applied to the tape.

To release the record muting mode, press either the play (►) or PAUSE button.

# **1NPUT LINE 2 jacks**

This pair of RCA jacks is provided as a convenience, and duplicates the function of the rear (LINE 1) input jacks for connecting a receiver or other line level source to the 122.

## **3** INPUT (LEFT, RIGHT) controls

These controls are used to adjust the levels of the left and right input signals to be recorded on the tape. The left and right controls are geared together to allow simultaneous adjustment of both channels. To adjust one channel independently of the other (to alter the channel balance), hold one knob while turning the other.

# BIAS/REC CALIBRATION trimmers and button switch

With the button in the PRE-SET (out) position, the bias levels suitable for recording on normal, cobalt (Co), chromium dioxide (CrO<sub>2</sub>) and metal tape can be selected using the BIAS switch, while the reference recording level is adjusted to match the average sensitivity for each type of tape. These factory-preset levels are average values for the three types of tape. For precise calibration of the bias and recording levels to exactly match a specific tape, set the button to the ADJUST (in) position and adjust the trimmers using a screwdriver.

#### 10 OUTPUT control

This knob is used to adjust the level of the signals delivered from the OUTPUT jacks on the rear panel. Both channels are adjusted together. The readings of the VU meters are not affected by this control.

# Function switches

# MONITOR switch

This switch selects the signals fed to the headphones (PHONES) jack and the OUTPUT jacks, and is indicated by the VU meters.

SOURCE: Selects the input connected to the LINE 1 (rear) or LINE 2 (front) jacks. The levels displayed by the VU meters depend on the setting of the INPUT controls.

TAPE: Selects the signal from the tape. The levels displayed by the VU meters are the levels of the signals recorded on the tape; they are not affected by the setting of the OUTPUT control.

Note: For tape playback the MONITOR switch must be in the TAPE position.

# NR SYSTEM switch

DOLBY SYSTEM/NR: Selects the built-in Dolby Noise Reduction circuit. This position is used to make a Dolbyized recording or to reproduce a Dolby-encoded cassette.

DOLBY SYSTEM/NR + HX: Selects the Dolby Noise Reduction circuit and also the Dolby Headroom Extension (HX) circuit which gives greater headroom in recording. Tapes recorded with the switch in this position can be played back with the switch in the same position or in the DOLBY SYSTEM/NR position.

dbx (EXT)/OUT: Use this position to record or reproduce without noise reduction or when USING THE OPTIONAL RX-8 DBX NOISE REDUCTION UNIT.

# INPUT switch

This switch selects the signals fed to the recording circuit for recording.

LINE 1: Selects the signals applied to the rear panel LINE IN jacks.

LINE 2: Selects the signals applied to the front panel LINE 2 jacks.

TEST: Use this position when setting the bias and recording level calibration controls using a separate signal generator.

## SPEED switch

HIGH: Selects a tape speed of 3-3/4 ips.

STANDARD: This selects the normal cassette tape speed of 1-7/8 ips.

#### EQ switch

Selects the equalization characteristics of the 122 to match the type of tape being used.

NORMAL: The equalization is 120  $\mu$ s.

Co (CrO<sub>2</sub>): The equalization will match cobalt or chromium dioxide tape.

METAL: The equalization will match metal tape. **Note:** The EQ switch should be set to match the tape for both recording and playback.

#### **BIAS** switch

Selects the factory-preset bias levels to match the type of tape being used for recording (with the BIAS/REC CALIBRATION button in the PRE-SET position).

NORMAL: The bias will match normal low-bias tape.

Co (CrO<sub>2</sub>): The bias will match cobalt or chromeequivalent tape.

METAL: The bias will match metal tape.

Note: The bias has no effect during playback, by it must be set correctly when recording to get optimum performance from the tape being used.

#### VU meters

A PEAK LED is provided in each meter; this lights to warn of overload at +8 dB input level which could result in distorted recording.

#### **®** TAPE COUNTER

# 2-2. REAR PANEL CONNECTIONS

OUTPUT (R, L) jacks

LINE 1 (R, L) jacks

#### **DBX UNIT terminals**

These eight RCA pin-terminals are used for the connection of the optional RX-8 dbx noise reduction unit. If the RX-8 is not used, the U-link plugs provided must be left in place.

# DBX UNIT CONTROL SIGNAL socket

This is a special socket which feeds the control signal to the optional RX-8 dbx noise reduction unit.

# REMOTE CONTROL socket

Allows connection of the optional TEAC RC-90 Remote Control unit.

# 3. CIRCUIT DESCRIPTION

The following conditions are assumed:

- \* The deck is initially in the stop mode unless otherwise specified.
- \* Voltages, waveforms, and operating times given in the text are typical ones for reference.
- \* In the description of amplifiers (sections 3-11 through 3-14), generally, the left channel is described.
- \* In the illustrations, circuit boards, terminals, and connectors are omitted.
- \* Part numbers are assigned as follows:
  - 100-199: Muting circuit, bias oscillator circuit, and L-channel record/reproduce circuit mounted on record/

reproduce & control PCB

- 200-299: R-channel record/reproduce circuit on record/reproduce & control PCB
- 300-399: L-channel monitor, record, and HX circuits and common L- and R-channel circuits mounted on
- lever switch PCB
  400-499: R-channel monitor, record, and
  HX circuits mounted on lever
- switch PCB 500-599: Power supply PCB circuits.
- 600-699: System control circuits and
  - mechanical parts mounted on record/reproduce & control PCB and joint PCB

700-799: L-channel meter circuit and phone

amplifier circuit mounted or

meter amplifier PCB

800-899: R-channel meter circuit and phone amplifier circuit mounted on

meter amplifier PCB

# CONTROL SECTION

# 3-1. SYSTEM CONTROL IC

## 3-1-1 Pin assignments

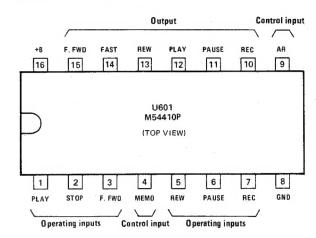


Fig. 3-1 Pin assignments

	Pin No.	Pin name	Fund	ction			
	1	PLAY	Reproduce start signal input terminal.	Signal level: L			
Operation inputs	2	STOP	Stop signal input terminal	Signal level: L			
	3	F.FWD	Fast-forward signal input terminal.	Signal level: L			
	5	REW	Rewind signal input terminal.	Signal level: L			
	6	PAUSE	Pause signal input terminal.	Signal level: L			
	7	REC	Record signal input terminal.	Signal level: L			
Control	4	MEMO	Memory input terminal (resets rewind mode when at L level)				
inputs	9	AR	Record inhibit signal input terminal (L leve	Record inhibit signal input terminal (L level: record inhibited, H level: record enabled)			
	10	REC	H-level signal output terminal during record/reproduce or record/pause mode				
	11	PAUSE	H-level signal output terminal during pause mode				
Outputs	12	PLAY	H-level signal output terminal during reproduce mode.				
power	13	REW	H-level signal output terminal during rewind mode.				
	14	FAST	H-level signal output terminal during rewind or fast-forward mode.				
	15	F.FWD	H-level signal output terminal during fast-forward mode.				
	8	GND	Ground terminal.				
Power	16	+B	Power supply terminal (standard: +5 V +/-10%, absolute maximum: +7.0 V)				

# 3-1-2 Block diagram

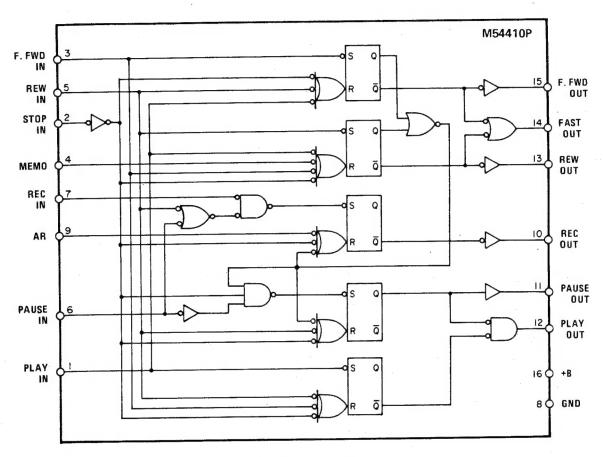


Fig. 3-2 Block diagram

# 3-1-3 Input signals and resulting modes

Output signal	REC	PAUSE	PLAY	REW	FAST	F. FWD	Operating mode
PLAY	L	L	Н	L	L	L	PLAY mode
STOP		L	L	L	L	L	STOP mode
F.FWD	1	L	L	L	Н	Н	F.FWD mode
REW	-	L	L	н	Н	L	REW mode
PAUSE	-	Н	L	L	L	L	PAUSE mode
REC and PLAY	Н	L	Н	L	L	L	REC/PLAY mode
REC and PAUSE	Н	Н	L	L	L	L	REC/PAUSE mode

Notes 1. The mode is set at the decaying edge of the input signal waveform.

2. The output retains the current mode until an input signal indicating a different mode is received.

3. Output REC remains at L as long as input AR is L.

4. Output REW remains at L as long as input MEMO is L.

## 3-1-4 Mode transition

The table below summarizes transition from one to another due to an input signal.

Current Mode Input signal	STOP	F.FWD	REW	PLAY	PAUSE	REC/PLAY	REC/PAUSE
STOP		STOP	STOP	STOP	STOP	STOP	STOP
F.FWD	F.FWD		F.FWD	F.FWD	F.FWD	F.FWD	F.FWD
REW	REW	REW		REW	REW	REW	REW
PLAY	PLAY	PLAY	PLAY		PLAY		REC/PLAY
PAUSE	PAUSE			PAUSE		REC/PAUSE	
REC and PLAY	REC/PLAY	REC/PLAY	REC/PLAY	REC/PLAY	REC/PLAY		REC/PLAY
REC and PAUSE	REC/PAUSE			REC/PAUSE	REC/PAUSE	REC/PAUSE	

Note: A diagonal line indicates that the current mode remains unchanged.

# 3-1-5 Operation with more than one input signal

When more than one input signal is received simultaneously, the deck enters the mode indicated below. When input signals applied simultaneously are removed in sequence, the mode indicated by the last signal to be removed is normally enabled. If REC and PLAY or REC

and PAUSE are combined, the record/reproduce or record/pause mode will be enabled regardless of the sequence in which the input signals are removed. If F.FWD (REW) and REC or PAUSE are combined, the fast-forward (rewind) mode will be enabled regardless of the sequence in which the input signals are removed.

Input signal A	Input signal B	Resulting mode
STOP	Any combination of F.FWD, REW, REC, PAUSE, and PLAY	STOP mode
	REW	STOP mode
F.FWD	REC and/or PAUSE	F.FWD mode
	PLAY	STOP mode
0.5147	REC and/or PAUSE	. REW mode
REW	PLAY ·	STOP mode
	PAUSE	REC/PAUSE mode
REC	PLAY	REC/PLAY mode
	PAUSE and PLAY	REC/PAUSE mode
PAUSE	PLAY	REC/PLAY mode

## 3-1-6 Input/output levels

Input/output levels and voltages are given below.

Item	Minimum	Standard	Maximum	Absolute maximum
Maximum supply voltage	_	_	_	7.0 V
Maximum input voltage	_	_	_	5.5 V
Recommended supply voltage	4.5 V	5.0 V	5.5 V	_
H-level input voltage	2.0 V	_	_	
L-level, input voltage	_	_	0.8 V	_
Open-input voltage	3.2 V	_	_	-
H-level output voltage	2.9 V	_	_	_
L-level output voltage	-	-	0.4 V	_

# 3-2. SYSTEM CONTROL IC INPUT/OUTPUT CIRCUITS

# 3-2-1 Initial reset circuit

See Fig. 3-3.

The initial reset circuit generates a signal which puts the deck in the stop mode immediately after power is turned on, preventing incorrect operation during the time the DC supply voltage is unstable.

1) When no cassette is loaded

When no cassette is loaded, cassette-in switch S695 is set to N.O., which is the state entered when the stop button is depressed. In this way the deck enters the stop mode when power is turned on.

2) When a cassette is loaded

When a cassette is loaded, cassette-in switch S695 is set to N.C. and isolated from the stop circuit. If the power is turned on at this time, current from system control IC U601 charges

the noise suppressing capacitors (C601 — C607) in the control input circuit of U601. It takes approximately 20 msec to charge C601 — C605 due to their low capacity. When the capacitors are fully charged, the PLAY, PAUSE, F.FWD, REW, and REC input terminals switch to H level. It takes approximately 100 msec for the STOP input terminal (and MEMO input terminal) to rise to H level since C606 has a large capacity. In this way, of the operation input terminals, only STOP takes longer to switch to H level. As a result, a flip-flop is reset in U601 when power is turned on and the deck enters the stop mode.

Unless C606 is fully charged and the STOP input terminal is at H level, U601 does not switch from the stop mode to another mode even if operation signals are input.

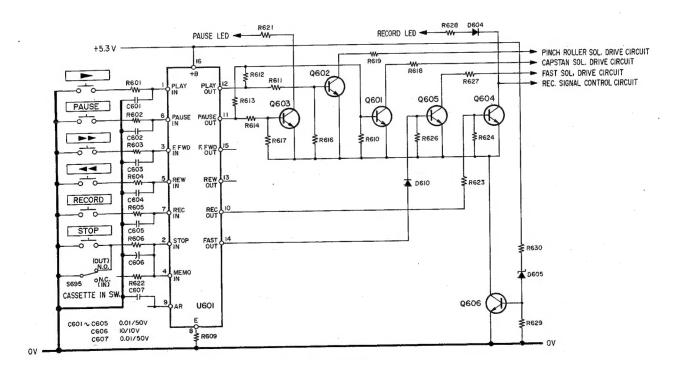


Fig. 3-3 System control IC input/output circuits

#### 3-4-2 Reproduce mode

See Fig. 3-12.

When the deck is in the stop mode, base current is supplied to transistor Q505 via R510, turning it on. In the reproduce mode, the reel motor rotates in the following sequence.

- a. When a reproduce mode signal (H level) is output from pin 12 of U601, Q601 and Q602 turn on.
- b. Q601 activates the head base solenoid drive circuit. When the head base solenoid completes operation, Q508 turns off, permitting base current to flow through Q509 and turning it on.
- c. As Q509 is on, base current flows through Q501 and turns it on. At the same time, current flowing via path ① charges capacitor C504.
- d. As Q501 is on, base current flows through transistor Q504 via path ② and turns it on.
- e. As Q504 is on, current is supplied to the reel motor via path (§) and causes the motor to run. At this time, the supply voltage of +13 V is directly applied to the reel motor so that the motor drives the reel disk with a large starting torque so that the tape is tight.
- f. As current on path ① charges C504 and its charge rises, the voltage at the base of Q506 rises and its base current increases; Q506 is turned on completely in about 80 msec. Now the base current of Q505 decreases since its base level falls from +13 V, divided by R510

and R509. This results in a decrease in Q505's collector current (the current supplied to the motor) and in the voltage applied to the motor. Thus the torque of the motor is reduced and the reproduce mode is stabilized.

#### 3-4-3 Rewind mode

See Fig. 3-12.

When the rewind mode has been enabled, a rewind mode signal (H level) is output from pin 13 of U601 and base current flows through Q501 via resistor R622, turning on Q501. Q504 turns on immediately since its base current flows along path ②. When Q504 is on, a large current is supplied to the reel motor via path ③, driving the motor at a high speed. During the rewind mode, Q506 remains off.

### 3-4-4 Fast-forward mode

See Fig. 3-13.

When the fast-forward mode has been enabled, a fast forward mode signal (H level) is output from pin 15 of U601 and base current of transistor Q502 flows via resistor R620, turning Q502 on. As Q502 is on, base current of transistor Q503 flows via path ①, turning Q503 on. Now +13 V is applied to the reel motor, the large current flowing via path ② causes the motor to run at a high speed. The direction of the current is reversed in the fast-forward mode to that in the reproduce and rewind modes so the direction of motor rotation is reversed.

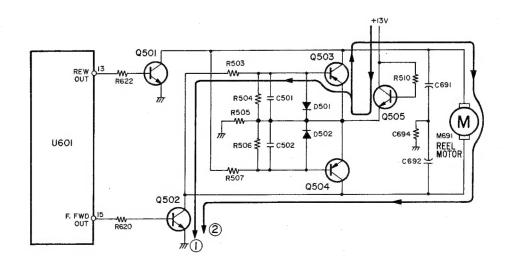


Fig. 3-13 Reel motor drive circuit (fast-forward mode)

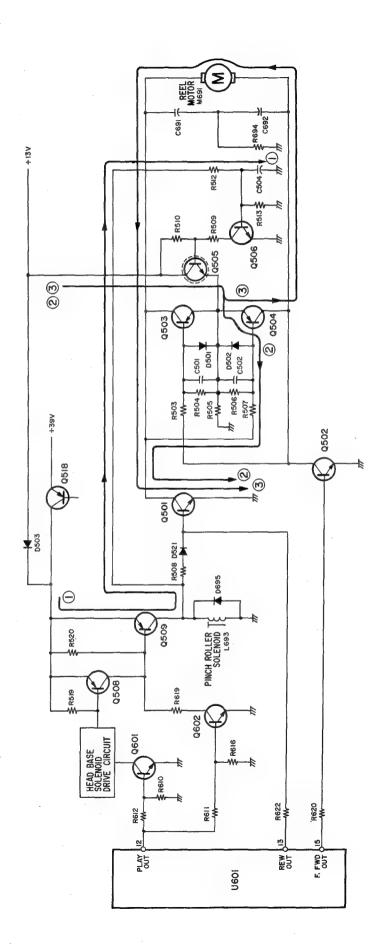


Fig. 3-12 Reel motor drive circuit (reproduce/rewind modes)

# 3-5. CAPSTAN MOTOR CIRCUIT

See Fig. 3-14.

The capstan motor rotates in the reproduce (record/reproduce) and pause (record/pause) modes. Its torque is transmitted to the flywheel by a belt to drive the flywheel and capstan shaft. In both the reproduce and pause modes, Q514 is on to energize the head base solenoid. When Q514 is on, base current flows through transistor Q692, turning it on. Now the 0 V line of the capstan motor servo amplifier is shorted to the ground line of the power supply circuit. The servo amplifier is activated and the motor starts to rotate. The speed of the capstan motor may be switched between 'standard' (tape speed: 4.76 cm/sec) and 'high' (9.5 cm/sec) by SPEED switch S4-2.

# 3-6 TAPE-END DETECTION CIRCUIT

See Fig. 3-15.

The ring magnet, shown in Fig. 3-15, is mounted on the counter pulley shaft and rotates while the tape is running. Variations in the magnetic field caused by the rotation of the ring magnet turn reed switch S693 on and off. This means that, when the tape is moving, the reed switch turns on and off repeatedly.

When the reed switch turns on while the tape is running, the charge from capacitor C609 flows through the base of transistor Q607 via path ③, turning it on. When the reed switch turns off, Q607 turns off, as its base current is cut off. At this time, C609 discharges via path ④. Thus, while the reed switch is turning on and off repeatedly, Q607 also turns on and off repeated-

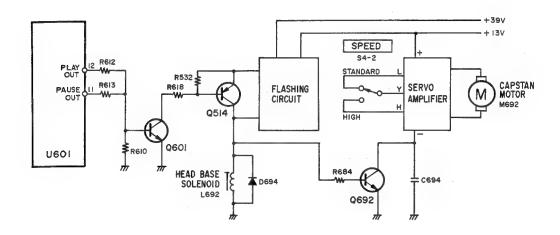


Fig. 3-14 Capstan motor circuit

ly. When Q607 is off, capacitor C610 is charged by current flowing via path ⑤. When Q607 is on, C610 discharges via path ⑥. Since the time constant of C610 and R631 is much smaller than that of C610 and R656 (or R657), the charging of C610 proceeds slowly while it discharges rapidly. As a result, the voltage at ⑥ remains below +1.5 V while Q607 is repeatedly turned on and off.

When the tape reaches its end and stops running, the counter pulley and the ring magnet stop rotating. At this time, the reed switch stops operating in either its on or off position depending on where the ring magnet has stopped. If the reed switch is on, the base current of Q607 stops flowing turning it off, and current flowing along path 5 starts to charge C610 as soon as

current from path 3 completes charging C609. If the reed switch is off, Q607 is already off because the reed switch has turned off and, therefore, current from path 5 continues to charge C610.

When the voltage across C610 (voltage at (A)) exceeds approximately 3 V, base current flows through transistor Q513 via path (7), thereby turning on Q613. Q613 turns on approximately 2.3 seconds after Q607 turns off. Since Q613 turning on is equivalent to depressing the stop button, the deck enters the stop mode.

When the deck enters the stop mode, current on path ① or ② stops flowing and C610 discharges via R656 and the fast solenoid and via R657 and the pinch roller solenoid (current flows in the direction opposite to ⑤).

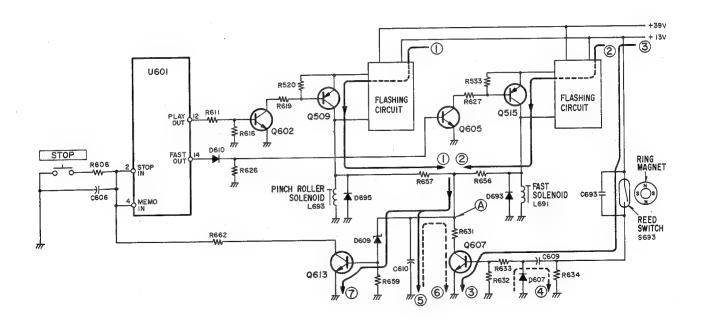


Fig. 3-15 Tape-end detect circuit

#### 3-7. MEMORY CIRCUIT

See Fig. 3-16.

Counter switch S696 is linked to the counter and is closed when the counter reads between "900" and "999".

- a. When the deck is in the rewind mode, a rewind mode signal (H level) is output from pin 13 of system control IC U601.
- b. Therefore, current flows from pin 13 of U601 to charge C507 via R502 and R518. Charging takes place slowly because of the large charging time constant.
- c. The counter counts down as the tape is rewound and, when it reaches "999", \$696 turns on.
- d. When S696 turns on, C507's charge flows to the base of Q691 via S696 and R691, turning Q691 on.
- e. If the MEMORY switch is set to STOP when Q691 has turned on, a stop signal (L level) is output from pin 2 (and pin 4) of U601 and the deck enters the stop mode.
- f. Pin 4 (MEMO IN) of U601 has the function that, if it becomes L level when U601 is in the rewind mode, the rewind mode will be released and the stop mode enabled. In the deck, this terminal is connected to the STOP IN terminal.
- g. If the MEMORY switch is set to OFF, the collector of Q691 is open and S696 is on. The tape will be rewound to the end and, when the tape-end detect circuit detects the tape end, the deck will enter the stop mode automatically.

- h. If the MEMORY switch is set to PLAY when Q691 has turned on, a reproduce mode signal (L level) is output from pin 1 of U601 and the deck enters the reproduce mode.
- The stop mode is entered automatically when the tape has been rewound to the end before the counter reaches "999", whether the MEMORY switch is set to STOP or to PLAY.

# 3-8. POWER SUPPLY CIRCUITS 3-8-1 Main regulator

See Fig. 3-17.

Transistors Q517, Q519, Q520, and zener diode D512 are the main components of the main regulator. The output of the main regulator is supplied to the amplifiers and also used as a reference voltage in the regulated power supplies of the motor and control circuits.

- 1) Equilibrium condition
  - a. The secondary voltage of the power transformer is full-wave-rectified by rectifiers D541 — D544, then smoothed by capacitor C520.
  - b. When power is not supplied to the regulated power supplies, Q517, Q519, and Q520 are off. (Q519 is the current amplifier that controls Q517 by amplifying variations of weak control current flowing through Q520 described later. Here, the operation of Q519 is not described.)
  - c. When the power supply to the regulated power supplies starts, the base current of Q517 flows via path ① . Since Q520 is still off at this time, current flowing

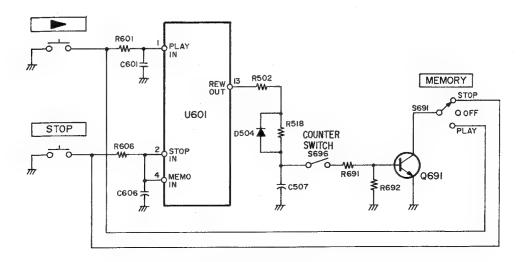


Fig. 3-16 Memory circuit

3-8-2 DC power supply system

The DC power supply system is shown in Fig. 3-18. This comprises the main regulator described in the previous section and minor regulated power supplies from independent transistors Q512, Q513, and Q507. For these transistors, the +23 V regulated output of the main regulator is used as a reference voltage to simplify the circuitry.

The output voltages of the minor power supplies are roughly given by the following equations:

$$V_{\text{OUT} (Q512)} = \frac{R527}{R526 + R527} \times (+23\text{V}) - \text{VBE}$$
 
$$V_{\text{OUT} (Q513)} = \frac{R530}{R529 + R530} \times (+23\text{V}) - \text{VBE}$$
 
$$V_{\text{OUT} (Q507)} = \frac{R515}{R514 + R515} \times (+23\text{V}) - \text{VBE}$$
 where VBE is  $0.6 - 0.7 \text{ V}$ .

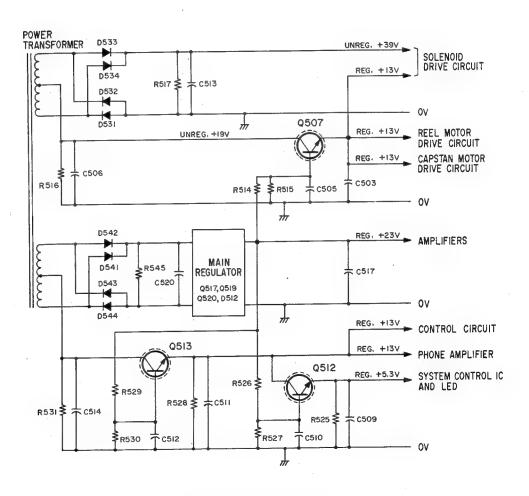


Fig. 3-18 DC power supply system

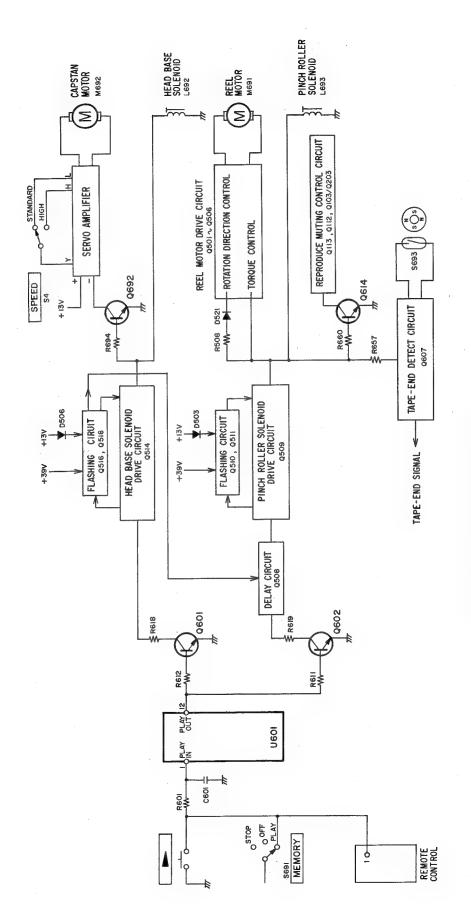


Fig. 3-19 Schematic of reproduce mode

through resistors R540 and R541 are input to the base of Q517, permitting a large collector current ② to flow through Q517. As a result, the output voltage rises rapidly.

- d. As the output voltage rises, current flows via paths ③ and ④. The emitter of Q520 is fixed at the zener voltage (VZD = 13 V) by current flowing along path ③ and the zener diode.
- e. If the output voltage rises for any reason and the current flowing along path 4 increases, the voltage drop across R544 increases and the base voltage of Q520 rises. When the base level exceeds the emitter level, collector current 5 begins to flow to Q520.
- f. The output voltage of the main regulator has been rising during this time. However, the collector current of Ω520 works to reduce the output voltage because the current on path ① decreases.
- g. When the voltage difference between the base and emitter of Q520 reaches approximately 0.7 V, the main regulator enters a state of equilibrium. That is, drift of the current on path ① tending to raise the output voltage is cancelled by the tendency to reduce the output voltage because a rise of the output voltage results in an increase in the current of Q520, an increase of the current on path ⑤ , and a decrease of the current on path ① in this sequence.

h. In the state of equilibrium, the output voltage is determined by the following equation.

$$\frac{R544}{R542 + R544} \times V_{OUT} = V_{ZD} + V_{BE}$$

$$\therefore V_{OUT} = \frac{R542 + R544}{R544} \times (V_{ZD} + V_{BE})$$

Substituting the actual values of the circuit parameters, we have the output voltage as follows.

$$V_{OUT} = \frac{4.7k\Omega + 6.8k\Omega}{6.8k\Omega} \times (13 + 0.7) = 23.1 \text{ V}$$

2) Regulating process

When the output voltage tends to rise (fall) because of reduced (increased) load, the following process stabilizes the voltage.

- a. The output voltage starts to rise (fall).
- b. The base level of Q520 rises (falls).
- c. Since the emitter of Q502 is kept at a fixed level, its base current increases (decreases) and the collector current (5) varies together with rising (falling) of the base level.
- d. As a result, the base current ① of Q517 decreases (increases) and its collector current varies similarly.
- e. Thus the output voltage falls (rises) to the initial level.

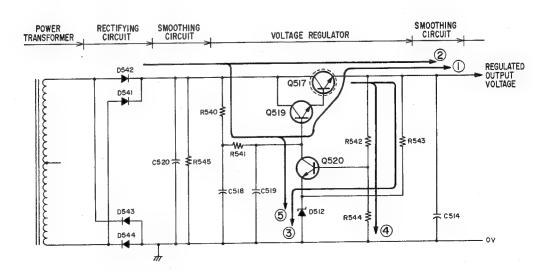


Fig. 3-17 Main regulator

#### 3-9. OVERALL OPERATION OF THE DECK

We have so far seen the separate operations of control circuits, each with a specific function. This section briefly describes the overall operation of the deck operations in the reproduce, pause, fast-forward, and rewind modes. Refer to Section 3-10-3 for operation in the record mode.

#### 3-9-1 Reproduce mode

See Fig. 3-19.

To explain operations in the reproduce mode, we divide the system into two subsystems. One is the head base subsystem that operates when Q601 is turned on by the H-level signal output from pin 12 of U601. The other is the pinch roller subsystem that operates, when Q602 is turned on.

1) Head base subsystem

This goes through the following steps when Q601 is turned on.

- a. The head base solenoid operates.
- b. A delay signal is applied to the pinch roller solenoid drive circuit via the flashing circuit of the head base solenoid.
- c. Q692 turns on and the capstan motor rotates.
- 2) Pinch roller subsystem

This goes through the following steps after a delay long enough for the operation of the head base solenoid following the turning on of Q602.

- a. The pinch roller solenoid operates.
- b. The reel motor rotates.
- c. The tape-end detection circuit becomes ready for operation.
- d. Q614 turns on and the reproduce amplifier is released from muting.

# 3-9-2 Pause mode

To explain operations in the pause mode, we divide the system into the head base subsystem (as in the reproduce mode) that operates, with Q601 turned on by the H-level signal output from pin 11 of U601, and the indicator subsystem that causes the PAUSE indicator to light when Q603 is on.

#### 3-9-3 Fast-forward mode

In the fast-forward mode, we divide the system into the fast-forward subsystem that operates when an H-level signal is output from pin 15 of U601 and the fast subsystem that operates when an H-level signal is output from pin 14 of U601.

1) Fast-forward subsystem


The reel motor rotates.

- 2) Fast subsystem
  - a. The fast solenoid operates.
  - b. The tape end detection circuit becomes ready for operation.

#### 3-9-4 Rewind mode

In the rewind mode, we divide the system into the rewind subsystem that operates when a Hlevel is output from pin 13 of U601 and the fast subsystem that operates when a H-level is output from pin 14 of U601.

- 1) Rewind subsystem
  - a. The reel motor rotates.
  - b. The memory circuit becomes ready for operation.
- 2) Fast subsystem
  - a. The fast solenoid operates.
  - b. The tape-end detection circuit becomes ready for operation.

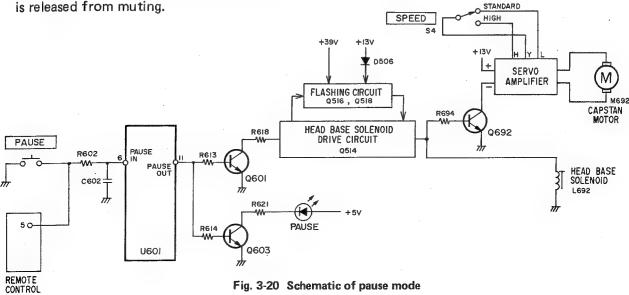

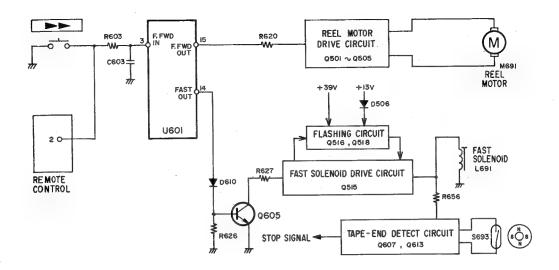


Fig. 3-21 Schematic of fast-forward mode

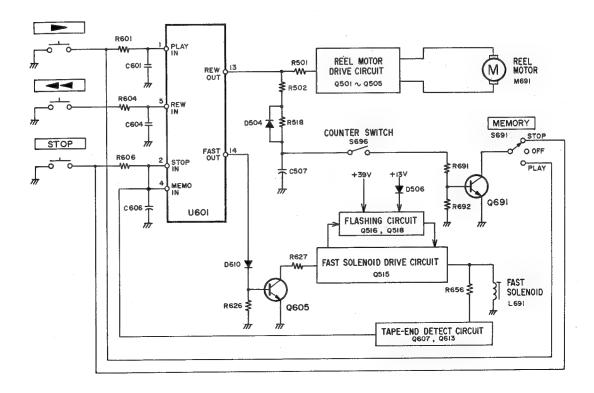


Fig. 3-22 Schematic of rewind mode

# 3-10. MUTING CIRCUITS 3-10-1 Power muting circuit

See Fig. 3-23.

The power muting circuit prevents transient click noise from being output from the OUT-PUT and PHONES terminals and the VU meter needles from deflecting when the deck's power switch is turned on or off.

1) Power-on muting

When the deck power switch has been turned on, the power muting circuit operates as follows.

- a. When power has been turned on, the power muting circuit is supplied with 7 V AC. Diodes D516 and D515 half-wave-rectify the AC voltage, charging capacitors C524 and C523 via paths ① and ② momentarily. The voltage across C523 is divided by resistors R551 and R550 and is then applied to the emitter of transistor Q522.
- b. Capacitor C522 serves as a ripple filter together with R551.
- c. The charging of C521 starts via paths ③ and ④ when the circuit's power supply starts. Since the current on path ④ is the base current of transistor Q522, it turns on.
- d. As Q522 is on, base current flows through transistor Q104 via path (§), turning it on.

As Q104 is on, the signal line of the monitor circuit is shorted to ground to prevent the generation of click noise when power is switched on.

- e. When C521 is fully charged, Q522 turns off as its base current is cut off. Q104 turns off in the same way and, as a result, muting is released.
  - Releasing power muting takes place approximately 3.5 seconds after the deck power switch is turned on.
- f. When Q522 is off, -5.3 V is applied to the based of Q104 via R128 and R553. This ensures the off state of Q104.
- 2) Power-off muting

When the deck power switch has been turned off, the power muting circuit operates as follows.

- a. When power has been turned off, the supply of 7 V AC stops. C524 and C521 discharge rapidly through the meter lamp circuit via paths (a) and (7).
- b. Therefore, the base voltage of Q522 falls and its base current flows from C523 via path (8), turning it on.
- c. As Q522 is on, C523 discharges via path
   (9), turning on Q104 so that the power amplifier is muted.

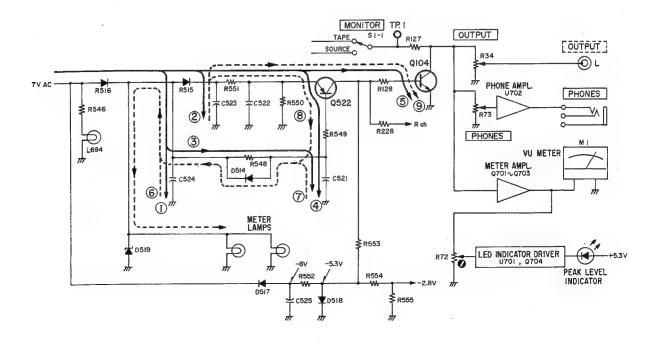


Fig. 3-23 Power muting circuit

# 3-10-2 Reproduce muting circuit

See Fig. 3-24.

The reproduce muting circuit mutes the reproduce equalizer amplifier to prevent the generation of undesirable noise in modes other than the reproduce mode.

1) Muting on

In a mode other than the reproduce mode (stop mode, for example), the reproduce muting circuit operates as follows to mute the reproduce equalizer amplifier.

a. In the stop mode, the pinch roller solenoid drive transistor Q509 is off.

b. Because of this base current is not supplied to transistor Q614 and it remains off.

c. As Q614 is off, base current of Q113 flows via path ①, therefore it is on.

d. As Q113 is on, base current of Q112 flows via path ② and it is on. At this time, capacitor C136 is charged to +23 V.

e. As Q112 is on, the base current of Q103 flows via path ③ and it is on so the reproduce equalizer amplifier is muted. Because the signal level is low in the Q103 circuit its collector is grounded to reduce muting transistor switching noise.

2) Muting off

When pinch roller solenoid drive transistor Q509 turns on in the reproduce mode, muting is released by the following process.

a. As Q509 is on, base current is applied to Q614 and it turns on.

b. As Q614 is on, Q113 turns off as its base current ① is cut off.

c. When Q113 is off, the base current ② applied to Q112 is cut off. Q112 does not go off immediately since C136's discharge current ④ flows to its base.

d. As C136 discharges, its discharge current (4) (the base current of Q112) decreases gradually, causing the collector current of Q112 to decrease gradually. Therefore, the base current of Q103 decreases and it goes off gradually.

Q103 turns off approximately 400 msec after Q509 is turned on.

e. Once Q112 turns off, the base of Q103 is fixed at a negative voltage applied through R150 to lock it in the off state. Reproduce muting is completely released in this condition.

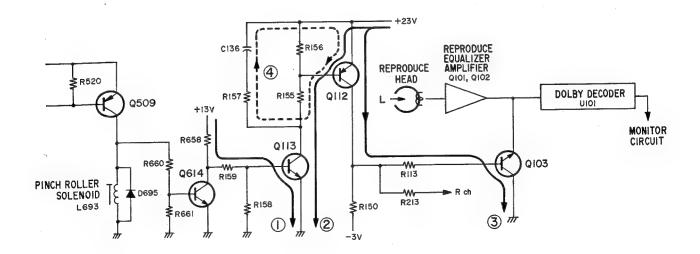


Fig. 3-24 Reproduce muting circuit

# 3-10-3 Record multing circuit

See Fig. 3-25.

Record inhibit switch S694 operates by mechanically detecting the presence or absence of a record protection tab on the cassette loaded in the deck.

S694 is in the N.O. position if the loaded cassette is protected by the tab being removed. In this case, pin 9 (AR IN) of system control IC U601 is fixed at L level. The deck will not enter the record/reproduce mode when the PLAY and RECORD buttons are depressed simultaneously if terminal AR is at L level. (The reproduce mode will be enabled in this case.)

S694 switches to N.C. when a recording-enabled cassette tape (i.e. protection tab not removed) is loaded. Now current from U601 charges capacitor C607 and terminal AR switches to H level. When terminal AR is at H level, recording can occur. Hereafter it is assumed that terminal AR is at H level.

1) Record/reproduce mode

When the deck is in the stop mode, the circuits shown in Fig. 3-25 are in the following conditions.

Pins 12 and 10 of U601: L level

Transistors: Q604, Q609, Q612, Q114, and

Q115: off

Transistors: Q608, Q610, Q611, Q110, and

Q111: on

Record muting Q116: on Record muting flip-flop: reset Bias oscillator U103: not oscillating

If the PLAY (▶) and RECORD buttons have been depressed simultaneously, H-level signals are output from pins 12 and 10 of U601. The reproduce mode signal output from pin 12 is mainly for the control of mechanical tape transport operations (see 3-9-1). The record mode signal output from pin 10 initiates the following operations.

- a. When an H-level signal is output from pin 10 of U601, base current flows through Q604 and it turns on. As Q604 is on, current flows through the RECORD LED and turns it on. At the same time, Q611 turns off as its base current is cut off.
- b. As Q611 is off, Q610 turns off as its base current is cut off. Similarly Q111 turns off, as its base current is cut off.
- c. As Q111 is off, discharge current from C135 flows through the loop consisting of C135, the emitter of Q110, the base of Q110, and C135. As the discharging of C135 proceeds, the discharging current (the

base current of Q110) decreases and Q110 turns off slowly.

- d. As Q110 turns off gradually, the base current of Q116 decreases gradually and it is turned off slowly. As a result, the record amplifier is smoothly released from muting.
- e. On the other hand, if an H-level signal is output from pin 10 of U601, base current flows through Q115 and it turns on. Therefore, base current is applied to Q114 turning it on.
- f. When Q114 has turned on, bias oscillator Q103 begins to oscillate, its output being delivered to the erase head. At the same time, it is added to the output signal (audio signal) from the record amplifier after its level has been adjusted by the bias adjust circuit and the resulting signal is supplied to the record head.

#### 2) REC/MUTE mode

If you depress the REC MUTE button when the deck is in the record/reproduce mode, the recording signal is muted to leave a blank section on the tape.

When the deck is in the record/reproduce mode the circuits shown in Fig. 3-25 are as in the following condition.

Pins 12 and 10 of U601: H level

Transistors: Q604, Q608, Q114, and Q115:

Transistors: Q609-Q612, Q110, Q111, and

Q116: off

REC MUTE flip-flop: reset Bias oscillator: oscillating Record muting: released

If the REC MUTE button has been depressed in the record/reproduce mode, the circuits operate as described below to enable the REC/MUTE mode.

- a. When the REC/MUTE button has been depressed, the REC MUTE flip-flop is reset by an L-level signal. Q608 turns off as its base current is cut off.
- b. As Q608 is off, its collector rises to H level and base current flows through Q609 turning it on. When Q609 is on, its collector is at L level. Therefore, if the REC MUTE button is released and the L-level signal is removed from the REC MUTE flip-flop, Q608 stays off and Q609 on.
- c. As Q609 is on, base current flows through Q610, turning it on. When Q610 turns on, Q111, Q110, and Q116 turn on in sequence, as opposed to on in the record/ reproduce mode, and the record amplifier

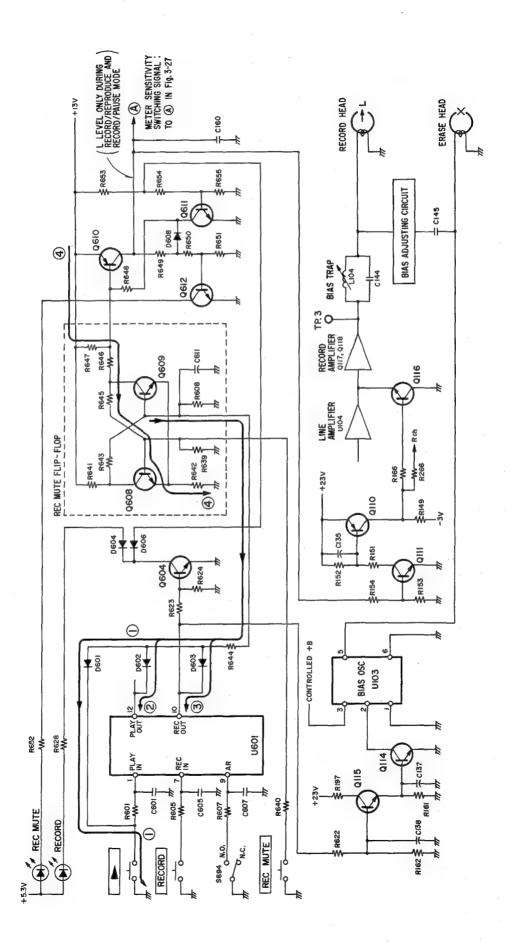


Fig. 3-25 Record muting circuit

is muted. Since the bias oscillator is working at this time, the tape runs with no signal recorded on it.

d. On the other hand, when Q610 turns on, base current flows through Q612, turning it on (Q611 is off during record mode). When Q612 turns on, the REC MUTE LED lights.

The REC/MUTE mode is released by resetting the REC MUTE flip-flop. There are three ways this can be done as below.

- i) Depress the PLAY button.

  An L-level reset signal will be applied to the base of Q609 via path ①.
- ii) Depress the PAUSE button. When the PAUSE button has been depressed, the deck changes from the record/reproduce (mute) mode to the record/pause mode. Therefore, pin 12 of U601 changes from H level to L, applyings L level signal to the base of Q609 via path ②.
- iii) Depress any of the STOP, F.FWD, and REW buttons.

The record/reproduce (mute) mode will be released and pins 12 and 10 of U601 drop to L level. As a result, a reset signal will be applied to the base of Q609 via path ② or ③.

When an L-level reset signal has been applied to the base of Q609, Q609 turns off as its base current is cut off. Since the collector of Q609 rises to H level, base current flows through Q608 and it turns on resetting the REC MUTE flip-flop. When Q609 is off, Q610 turns off as its base current is cut off. (Note: In this case, the base current of Q608 flows via path 4 . The voltage drop across R647 caused by this current (the emitter-base voltage of Q610) is approximately 0.16 V so Q610 cannot turn on.) When Q610 has turned off, Q111, Q110, and Q116 turn off in sequence to release the record amplifier from muting. Note that, when the STOP, F.FWD, or REW button is depressed during REC/ MUTE mode (case (iii)), the record mode will be released. In this case, when pin 10 of U601 drops to L level, Q604 turns off as its base current is cut off, while Q611 turns on as base current is applied to it. Therefore, even if Q609 turns off with the REC MUTE flip-flop reset, Q610 remains on because its base current flows via R648 and Q611. This means that the record amplifier is not released from muting.

# AMPLIFIER SECTION 3-11. REPRODUCE CIRCUIT

See Fig. 3-26.

a. The signal picked up by the reproduce head is amplified by reproduce equalizer amplifier transistors Q101 and Q102. The reproduce equalizer amplifier negative feedback loop determines the compensation characteristic (time constants) for reproduction as given in Table 1. The compensation curve at high frequencies is determined by the composite resistance of R301—R304, the combination of which is determined by the settings of SPEED switches S4-10 and S4-8 and EQ switch S5-2, and the capacity of C104. Table 2 summarizes the composite resistances in relation to the settings of the SPEED and EQ switches.

Table 1
Compensation characteristic for reproduction

EQ SPEED	STANDARD	HIGH
METAL	3180 + 70	3180 + 35
Co (CrO <sub>2</sub> )	3180 + 70	3180 + 35
NORMAL	3180 + 120	3180 + 50

(unit: µsec)

Table 2 Composite resistance

SPEED	STANDARD	HIGH		
METAL	$R30\dot{2} = 6.2k$	R301//R302 +3.1k		
Co (CrO <sub>2</sub> )	R302 = 6.2k	R301//R302 =3.1k		
NORMAL	R302 + R304 +10.9k	R301//R302 + R303//R304 +4.2k		

("//" represents parallel connection of resistors. unit: ohms)

- b. Capacitor C107 and coil L101 connected in series are a bias trap with a resonance frequency of 100 kHz.
- c. Semi-fixed resistor R11 adjusts reproduction level.
- d. Capacitor C108 and semi-fixed resistor R10 compensate for characteristics at high frequencies.
- Thermistor RT10 compensates for variations in the sensitivity of the reproduce head due to temperature changes.

The standard resistance of RT10 is 10k ohms at room temperature (25°C). The resistance decreases (increases) when the temperature rises (falls). On the other hand, the sensitivity of the reproduce head rises

(falls) when the temperature rises (falls). If the sensitivity of the reproduce head has risen due to a rise in temperature, for example, the output level of the reproduce equalizer amplifier increases. But the resistance of the thermistor drops at the same time and, therefore, the input level of Dolby decoder U101 drops. As a result, the input level of U101 remains constant and is independent of the temperature.

f. In the Dolby decoder, L102 and C112 form a low-pass filter with a cutoff frequency of approximately 22.5 kHz. L103 and C113 form a band-elimination filter. These filters remove undesirable frequency components outside the audio range which might cause incorrect operation of the Dolby decoder.

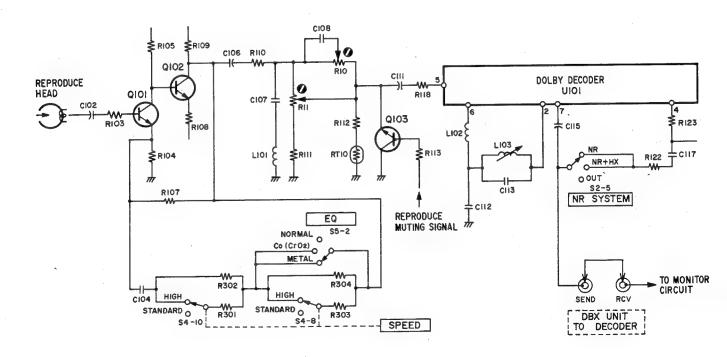


Fig. 3-26 Reproduce circuit

# 3-12. MONITOR CIRCUIT

See Fig. 3-27.

The tape reproduce signal or source signal selected by MONITOR switch S2-5 is distributed to

three lines: the output circuit, phone amplifier, and meter amplifier. The output of the meter amplifier is sent to the VU meter circuit and peak indicator circuit.

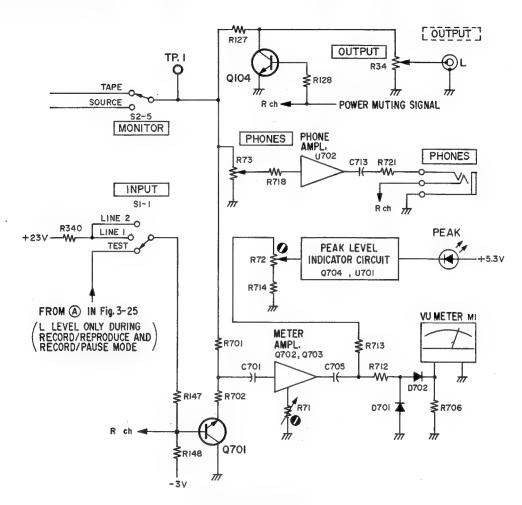


Fig. 3-27 Monitor circuit

#### 3-12-1 Output circuit

The monitor signal selected by the MONITOR switch is output to the OUTPUT terminal via resistor R127 and OUTPUT control R34.

The rated output level at the OUTPUT terminal is -7 dB when the level at TP1 is 580 mV (Dolby level). At this time the VU meter reads +3 VU.

# 3-12-2 Phone amplifier

The deck is provided with PHONES control R73. This allows the headphone monitor level to be varied independently of the VU meter reading and the output level at the OUTPUT terminal. The maximum output of the phone amplifier is 100 mW into an 8-ohm load.

#### 3-12-3 Meter circuit

1) Meter sensitivity switching circuit

The bias and equalization of the deck are adjusted for suitability with different types of tape. In addition, the deck is provided with a BIAS/REC calibration circuit that allows bias to be adjusted to the most suitable value for the individual tape used to optimize tape performance. When adjusting bias and recording level using this circuit the signal input level at the LINE 1 terminal is -30 dB, which is 20 dB lower than the rated input level of -10 dB. This low level would not normally be read by the VU meter, so a circuit which increases meter sensitivity during adjustment is provided.

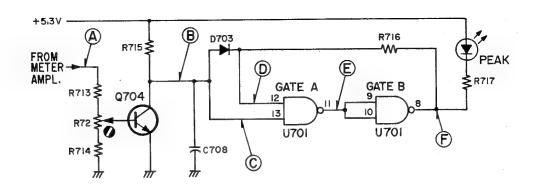


Fig. 3-28 Peak indicator circuit

When INPUT switch S1-1 is set to LINE 1 or LINE 2, base current flows through Q701 and it is on. As Q701 is on, resistor R702 is inserted in parallel to the input circuit of the meter amplifier. This setting provides the standard meter sensitivity.

When the INPUT switch is set to TEST and the deck is in the record/reproduce or record/pause mode, Q701 is off as its base current is cut off. When Q701 is off, R702 is disconnected from the input circuit of the meter amplifier. As a result, the signal input level of the meter amplifier rises by about 20 dB. This rise in the input level results in a rise of the output level by the same amount so that meter sensitivity is raised by 20 dB.

2) Peak indicator circuit

See Fig. 3-28 and 3-29.

Semi-fixed resistor R72 determines the operating level of the peak indicator.

When the signal level supplied from the meter amplifier is lower than the threshold level of Q704 determined by R72, the condition of the circuit shown in Fig. 3-28 is as follows.

Q704: off


C708: charged

Pins 12 and 13 of U701: H level Pins 11, 9, and 10 of U701: L level

Pin 8 of U701: H level Peak indicator: off

When a high-level, pulse-like signal is output from the meter amplifier, the circuit operates as follows.

a. When the input signal level exceeds the threshold level of Q704 determined by R72, base current flows to Q704 and it turns on.

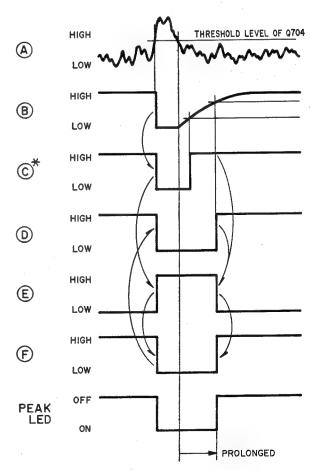

\* WHEN VOLTAGE AT (B) IS VIEWED AS LOGIC LEVEL.

Fig. 3-29 Peak indicator circuit timing diagram

- b. When Q704 turns on, its collector drops to L level and C708 discharges momentarily. Therefore, pin 13 of U701 drops to L level. This inverts gate A, causing a H level at pin 11 of U701. After inversion by gate B, an L level occurs at pin 8 of U701.
- c. When pin 8 of U701 has dropped to L level, current flows through the PEAK LED and the peak indicator lights.
- d. Alternately, the L level at pin 8 of U701 is transmitted to pin 12 of U701 via resistor R716. If R716 is open, pin 12 of U701 would not fall to L level when the collector of Q704 has dropped to L level because of the presence of diode D703. In this case, operation would not be stable.
- e. When the input level falls below the threshold level of Q704, its base current stops, turning it off.
- f. When Q704 has turned off, current flows into C708 via R715 to charge it. The voltage across C704 (the voltage at ®) rises as shown in Fig. 3-29.
- g. When the voltage at (B) has risen to a certain level (E1: approx. +2.0 V), U701 regards the input at pin 13 as H level. Waveform (C) represents the voltage at (B) as logic level.
- h. When the charging of C708 proceeds and the voltage at ® reaches E2 which is approximately 0.6 V higher than E1 (forward voltage drop of D703), U701 regards the input at pin 12 as H level. At this moment, gate A is inverted since pins 12 and 13 of U701 are both H level, and the output from pin 11 of U701 drops to L level.
- i. Therefore, gate B is also inverted and the output of U701 pin 8 turns to H level. As a result, current supplied to the PEAK LED is cut off and the peak indicator goes out.

As described above, the peak indicator circuit incorporates a pulse stretching function that keeps the peak indicator lit for a certain length of time even when the duration of the input signal is very short.

# 3-13. RECORD CIRCUITS 3-13-1 Line input circuits

See Fig. 3-30.

The deck has two line input circuits. LINE 1 is provided at the back of the deck and LINE 2 on the front panel. The INPUT switch determines which line input is used. Signals from the LINE 1 and LINE 2 input terminals cannot be mixed. To use the BIAS/REC calibration circuit, set the INPUT switch at TEST and apply input signals to the LINE 1 terminals.

With its level adjusted by the RECORD volume control, the line input signal selected by the INPUT switch is sent to Dolby encoder U301.

MPX filter U305 connected to U301 removes subcarrier and pilot signals which are mixed with line input signals when recording FM broadcasts in order to prevent the Dolby encoder from mis-operation. The MPX filter operates only when transistors Q301 and Q302 are both on. When they are off, the signals simply pass through the filter. Q301 and Q302 are on only when the NR SYSTEM switch is set to NR or NR+HX: that is, when U301 is operating as an encoder.

Whatever the position of the NR SYSTEM switch, an unmodified input signal is output from pin 3 of U301 to the monitor circuit.

When the NR SYSTEM switch is set to NR or NR+HX, an encoded signal is output from pin 7 of U301. When the switch is at OUT, an unmodified input signal is output. The output from pin 7 is input to the line amplifier via the HX variable equalizer. (Refer to 3-14 for the HX variable equalizer.)

(

# 3-13-2 Line amplifier

See Fig. 3-31.

Recording level adjusting circuit BIAS/REC CALIBRATION is included in the input circuit of the line amplifier. When the CALIBRATION switch is set at ADJUST, the recording level can be adjusted with semi-fixed resistor R30. At this time ADJUST LED D1 lights.

A temperature compensation circuit comprising thermistor RT11 is located in parallel with the output line of the line amplifier.

The output of the line amplifier is sent to the recording level adjusting circuit after the record signal level has been adjusted to match the type of tape being used.

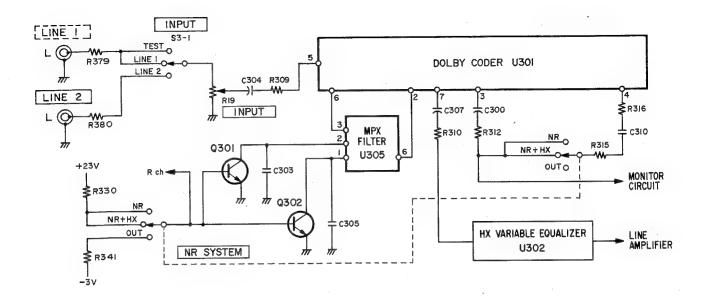


Fig. 3-30 Line input circuit

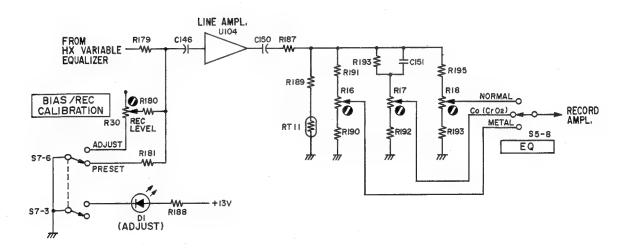


Fig. 3-31 Line amplifier

# 3-13-3 Record amplifier

See Fig. 3-32.

The output of the line amplifier is sent to the record amplifier comprising transistors Q117 and Q118. The record amplifier adjusts the recording signal depending on the speed and type of tape. The recording equalization characteristics are determined by the LC resonance circuit and CR circuit connected to the emitter of Q117. Because of this, a complementary circuitry consisting of NPN (Q117) and PNP (Q118) transistors is used in the record amplifier for more efficient operation requiring less voltage.

Resistor R176 raises the output impedance (impedance of the signal source viewed from the record head) of the record amplifier to drive the record head with constant current.

The parallel resonance circuit of L104 and C144 is a bias trap with a resonance frequency of 100

kHz. At the resonance frequency, the impedance of the resonance circuit becomes infinitely large, preventing bias current from entering the record amplifier (if this should happen, the amplifier would be saturated and the signal distorted). The record signal output from the record amplifier passes through the bias trap and, after the addition of bias current, drives the record head. Bias current is supplied by bias oscillator U103. When the BIAS/REC CALIBRATION switch S7-2 is set to PRESET, the record head is supplied with bias current adjusted by R13, R14, or R15 according to the setting of BIAS switch S6-2 for the type of tape being used. When S7-2 is at ADJUST, bias can be adjusted by turning semi-fixed resistor R35 which is accessible from the front of the deck. The supply voltage of the bias oscillator is controlled by the Dolby HX circuit. The circuit that controls the supply voltage is described in 3-14.

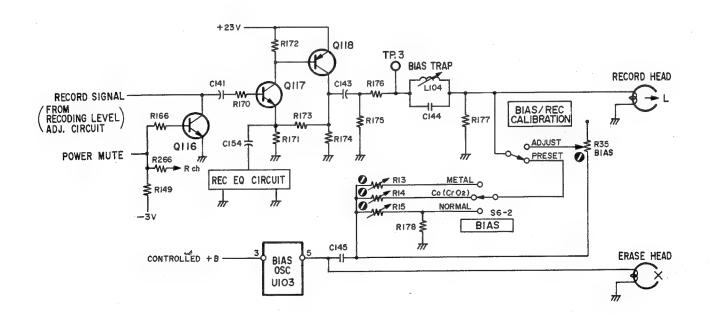


Fig. 3-32 Record amplifier

# 3-14. DOLBY HX CIRCUIT

NOTE: The Dolby Headroom Extension system (Dolby HX system) is provided in the record circuit of the deck and operates only in the following conditions.

NR SYSTEM switch: NR + HX

SPEED switch: STANDARD

BIAS switch: Co (CrO<sub>2</sub>) or NORMAL

EQ switch: Co (CrO<sub>2</sub>) or NORMAL

Mode: record/reproduce mode

#### 3-14-1 Bias characteristics

Generally tape has the bias characteristic as shown in Fig. 3-33. In the bias characteristic, (relationship of bias current to record/reproduce level) of a record signal of 315 Hz, for example, the record/reproduce output level rises with bias current and it reaches maximum at the maximum sensitivity bias current (peak bias). If bias current increases further the record/reproduce output level falls gradually. On the other hand, distortion is diminished as bias current increases. The variation of output level with bias current follows a relatively gentle curve at low frequencies but is steep at high frequencies. The output level at peak bias falls as the frequency becomes higher.

For tape having specific bias characteristics, major factors determining bias current are sensitivity, distortion, and frequency response.

Normally bias is determined in the following way. In the frequency spectrum of music signals which are most commonly recorded low and middle frequency components dominate and the spectrum drops steeply at high frequencies. Conventionally bias was determined by taking mainly sensitivity and the distortion of bass and mid-range components into consideration, sacrificing frequency response at high frequencies.

However, for maximum sensitivity at bass and mid-range frequencies, bias should be much higher than at high frequencies. Therefore, strong equalization is required for recording high frequencies. (Fig. 3-33 and 3-34 show recording equalization for 10 kHz at peak bias of 315 kHz.) When equalization during recording is too great, tape tends to be saturated by highfrequency components when the recording level is high or when the signals include many highfrequency components. This results in an increase in distortion and a degradation of frequency response (see Fig. 3-35). When bias is too low, the recording magnetic field becomes wider and, therefore, demagnetization increases at high frequencies. This phenomenon becomes more noticeable with higher signal levels. Therefore, demagnetization causes the frequency response at high frequencies to diminish as the recording level increases.

From the above facts, we determined that bias must be relatively small in order to improve frequency response at high frequencies, especially for high-level, high-frequency signals.

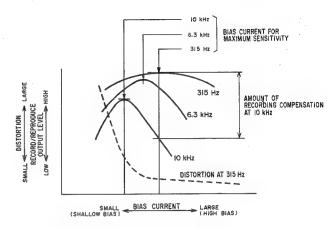


Fig. 3-33 Tape bias characteristics (1)

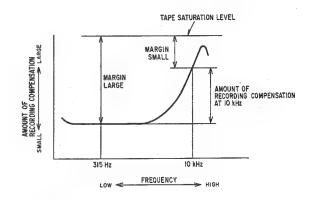


Fig. 3-34 Recording compensation characteristics (1)

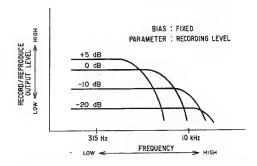


Fig. 3-35 Recording frequency response (1)

## 3-14-2 System outline

To improve the frequency response at high frequencies, especially for high-level, high-frequency signals, the Dolby HX system automatically controls bias and recording equalization for optimum levels with respect to the level of recording input signal and the relative amount of high-frequency components.

#### 1) Bias

- a. When bass and mid-range components dominate in the input signal or the overall level of the input signal is low, a fixed high bias is applied. (See (A) in Fig. 3-36.) In this case, frequency response at low frequencies can be improved by selecting a bias more suitable for lower frequency content than the conventional fixed bias.
- b. When the input signal involves high-level, high-frequency components, bias is decreased instantly depending on the frequency components and level, increasing the sensitivity at high frequencies. (See ® in Fig. 3-36.)

#### 2) Record equalizer

The Dolby HX system not only controls bias as described above but also recording equalization. This is because tape sensitivity varies at high frequencies, accompanying the change in bias.

- a. When bass and mid-range components dominate the input signal and bias is selected as A in Fig. 3-36, tape sensitivity is low at high frequencies and, therefore, the recording equalization is that of curve A shown in Fig. 3-37. With curve A, the amount of boost at high frequencies is very large but the level of high-frequency components of the input signal is low. Therefore, distortion will not occur during recording.
- b. With high-level, high-frequency signals, bias is lowered. (See ® in Fig. 3-36.) With lower bias, tape sensitivity increases at high frequencies and the amount of recording equalization may be reduced, as shown by curve ® in Fig. 3-37.

Reduction in the amount of recording equalization, i.e. boost, results in expanding the headroom of the tape saturation level of high-frequency signals. (This is the origin of the name of Dolby Headroom Extension system.) As a result, frequency response at high frequencies is greatly improved (see Fig. 3-38.) and at the same time, distortion at high frequencies is minimized.

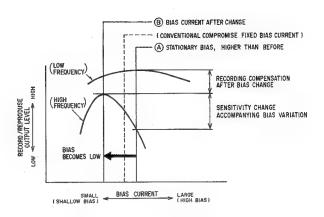


Fig. 3-36 Tape bias characteristic (2)

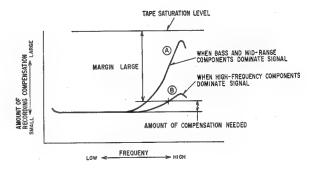


Fig. 3-37 Recording equalization characteristic (2)

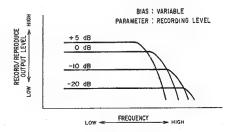


Fig. 3-38 Recording frequency response (2)

# 3-14-3 Circuits

See Fig. 3-39.

There are three circuits that control the recording bias and equalization characteristics, depending on the spectrum of the input signal. These are the control signal circuit, the variable bias circuit, and the variable equalizer.

1) Control signal circuit

The recording bias and equalization characteristics must be varied in accordance with high-frequency components of the input signal and their level. For this purpose, it is necessary to generate a signal which controls them, which is done by detecting and measuring high-frequency components in the input signal and their level.

In the Dolby B-type processor (as used in the M122), the noise reduction control signal is generated from the same parameters as those used by the Dolby HX system. This signal is taken from pin 14 of Dolby NR IC U301 (U401) and supplied to buffer amplifiers U303-a and U303-b.

- a. U303-a and U303-b select and output the higher of the two input signals without permitting the Dolby processors of the left and right channels to interfere with each other.
- b. The output of the buffer stage is applied to pin 12 of high-gain, non-inverting amplifier U303-c. Generally the DC output voltage of this amplifier rises together with the DC input voltage. A DC bias voltage adjusted by semi-fixed resistor R36 or R37 is applied to pin 13 of U303-c. This voltage determines the threshold of the control voltage where the recording bias begins to decrease due to high-frequency components contained in the recording input signal. The threshold varies with the type of tape; R36 adjusts for 'normal' tape while R37 adjusts for 'Co (CrO<sub>2</sub>)' tape.
- c. The output of DC amplifier U303-c is sent to the selector circuit which generates conditions for Dolby HX system operation. The output of U303-c is fed to the variable bias circuit and variable equalizer circuit only in the following conditions.

NR SYSTEM switch: NR+HX SPEED switch: STANDARD

BIAS switch: Co (CrO<sub>2</sub>) or NORMAL

2) Variable bias circuit

The output of the selector circuit is applied to pin 2 of U303-d.

- a. U303-d is an inverting amplifier with a gain of 1 using Vcc/2 as its reference voltage.
   The DC output voltage falls (rises) as the DC input voltage rises (falls).
  - The output of U303-d controls the base voltage of transistor Q303 which is located in series with the power supply circuit of bias oscillator U103.
- b. When the level of high-frequency components contained in the recording signal is high, the DC voltage applied to pin 2 of U303-d by the control signal circuit rises and, therefore, the DC output voltage from pin 1 of U303-d falls. When the voltage at pin 1 of U303-d falls, the base voltage of Q303 falls and its base current decreases. As a result, the collector current of Q303 decreases, the voltage drop across the collector and emitter increases, and the voltage supplied to bias oscillator U103 falls. When the supply voltage to U103 falls, the output of the oscillator falls, that is, bias is lowered. The minimum and fixed (maxi-

# and R329. 3) Variable equalizer

The output of the control signal circuit is supplied to the variable bias circuit and the variable equalizer simultaneously.

mum) bias levels are determined by R328

- a. The variable equalizer is basically a low-pass filter. A pair of variable conductance amplifiers U302s are used to provide variable cutoff time constant Tc, which is a linear function of the current flowing through resistor R335.
- b. When the level of high-frequency components in the recording signal is high, the DC output voltage of the control signal circuit rises and current flowing through R335 increases. As a result, variable cutoff time constant Tc becomes large and the turnover frequency falls.
- c. Since the variable equalizer is basically a low-pass filter, reduction in turnover frequency results in increased attenuation at high frequencies. Because of this, the recording signal passing through the variable equalizer varies as curves (A) and (B) shown in Fig. 3-37.




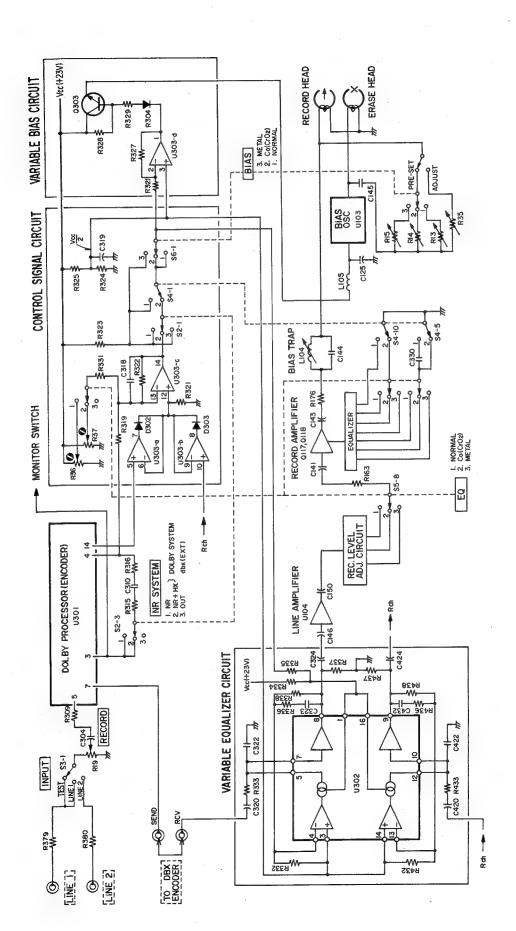


Fig. 3-39 Dolby HX system

# 4. PARTS LOCATION

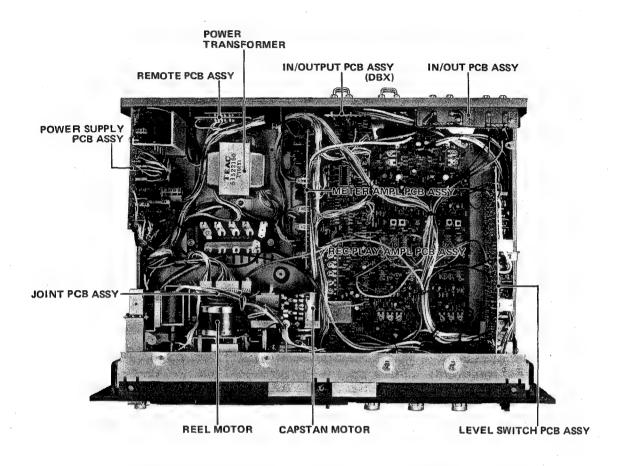

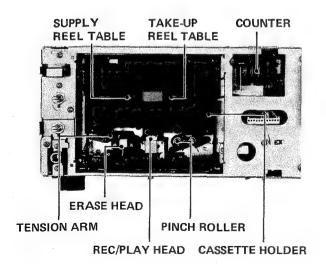

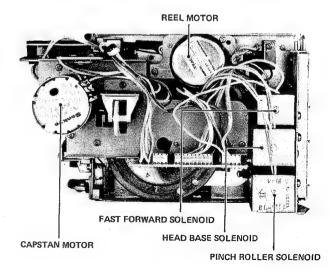

# 5. ESSENTIAL MAINTENANCE EQUIPMENT/MATERIAL

Spring scale:

Cassette torque meter:

Wow & flutter meter: Audio oscillator: Frequency counter:

Level meter:

Band pass filter: Distortion meter: Oscilloscope:

Oscilloscope: Attenuator:

Test load resistor: Head demagnetizer:

Bulk tape eraser:

Cleaner: Oil:

Test tapes:

TEAC MTT-111: TEAC MTT-150:

TEAC MTT-316:

TEAC MTT-501 or equivalent: TEAC MTT-5061 or equivalent:

**TEAC MTT-5072:** 

For pinch roller pressure check, 0 to 1 kg (2.2 lbs) For torque check, 0 to 100 g-cm (0 to 1.4 oz-inch),

0 to 160 g-cm (0 to 2.2 oz-inch)

Meguro Dempa Sokki Model MK-668B or equivalent

Hewlett Packard Model 204C or equivalent Range: 0 to 1 MHz, Sensitivity: 0.1 V RMS, Impedance: More than 1  $M\Omega$ , less than 25 pF

Range: -80 to +40 dB

Impedance: More than 1 M $\Omega$ , less than 25 pF

1 kHz narrow band pass type Basic frequency 400 Hz, 1 kHz

Ordinary type Ordinary type

Noninductive type 8 ohm/1 W

TEAC E-3

TEAC E-2A or equivalent

TEAC recorder cleaner kit or pure alcohol

TEAC oil kit or equivalent

Wow & flutter or tape speed test tape, 3000 Hz/-10 dB Dolby level calibration test tape, Dolby B-type tone

(400 Hz), 200 nWb/m

Head azimuth/frequency characteristic test tape for

EQ Co (CrO<sub>2</sub>), 3180  $\mu$ s +70  $\mu$ s

Blank test tape for BIAS/EQ NORMAL (normal-bias tape) Blank test tape for BIAS/EQ Co (CrO<sub>2</sub>) (high-bias tape)

Blank test tape for BIAS/EQ METAL

#### 6. ELECTRO-MECHANICAL CHECKS AND ADJUSTMENTS

#### 6-1. HEAD BASE PLATE POSITIONING

- 1) Set the deck in the PLAY mode.
- 2) Push the head base plate by hand in the direction of the arrow and check that the head base plate and the stopper portion of the mechanism chassis make contact.
- 3) If there is any clearance, loosen the two screws on the head base plate solenoid and reposition the solenoid until the clearance is eliminated.

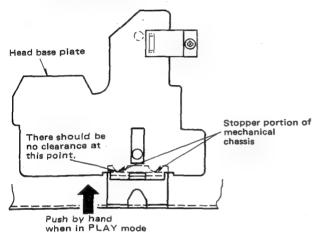


Fig. 6-1

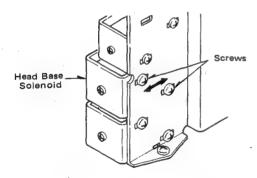


Fig. 6-2 Head base solenoid location

## 6-2. MICROSWITCH (A) ASSEMBLY CLEARANCE

- 1) Insert a blank cassette and close the cassette holder.
- 2) Loosen the two screws on the microswitch (A).
- 3) Move the switch so that actuator of the switch contacts the safety lever.
- 4) Adjust the switch position to obtain a clearance of between 0.1 mm to 0.3 mm.
- 5) Retighten the screws.

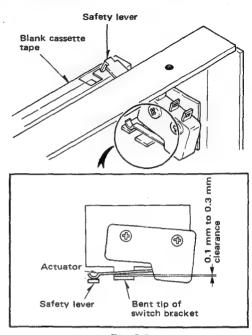


Fig. 6-3

## 6-3. MICROSWITCH (B) ASSEMBLY CLEARANCE

- Push the EJECT button to open the cassette holder.
- 2) Loosen the two screws on the microswitch (B).
- Move the switch so that switch actuator contacts the bent projecting portion of the eject lever.
- 4) Adjust the switch position to obtain a clearance of approximately 1 mm.
- 5) Retighten the screws.

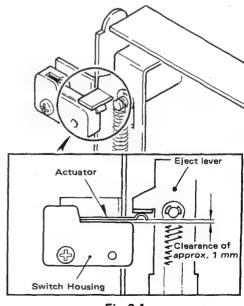


Fig. 6-4

#### 6-4. CAPSTAN ASSEMBLY THRUST

1) Turn the thrust adjusting screw so that thrust of the capstan shaft is within 0.05 mm to 0.15 mm.

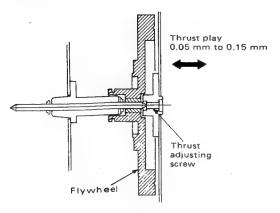


Fig. 6-5

#### 6-5. TAKEUP TORQUE

Takeup torque adjustment is critical to stabilize tape travel and reduce variations in tape speed.

- 1) Load a cassette torque meter (0 to 100 g-cm, 1.4 oz-inch) in the cassette holder.
- 2) Measure the torque by running the tape of the meter in the reproduce mode. The meter reading should be 45-65 g-cm (0.6-0.9 oz-inch).
- 3) If the reading is outside this range, clean the surface of the idler pulley in the reel table assembly which comes into contact with the tape using cleaning liquid. Also check the operation of the moving parts of the reel table assembly.
- 4) If the reading is still unsatisfactory, replace the reel table ass'y.

## 6-6. FAST FORWARD AND REWIND TORQUE

- 1) Load a cassette torque meter (0 to 160 g-cm, 2.2 oz-inch).
- 2) With the deck in the fast forward and rewind modes, read the meter. If the meter is provided with tape, note the readings with the tape fully wound on the reel taking up the tape in each mode so that the measurement is not influenced by the tape's inertia. The fast forward torque must be in the range 90 160 g-cm (1.3 2.2 oz-inch) and the rewind torque must be in the range 90 160 g-cm (1.3 2.2 oz-inch).
- If the readings are outside these ranges, clean the surface of the idler pulley with cleaning liquid and check the operation of the moving parts of the reel table ass'y.

#### 6-7. PINCH ROLLER PRESSURE

Pinch roller pressure must also be adjusted to the correct value to stabilize tape travel and reduce variation in tape speed.

- 1) Remove the cassette door cover to install the torque scale.
- 2) With the deck in the reproduce mode, attach the scale near the shaft of the pinch roller, being careful not to touch the pinch roller. See Fig. 6-6.
- Move the scale gradually in the direction of the arrow until the capstan shaft and pinch roller are completely separated.
- 4) Gradually return the pinch roller and note the reading on the scale when the pinch roller touches the capstan and starts rotating. The reading should be between 390 and 490 g (13.8 and 17.3 oz).
- 5) If the reading is outside this range, repalce the pinch roller pressure spring or adjust the pressure by bending the spring as shown in Fig. 6-6.

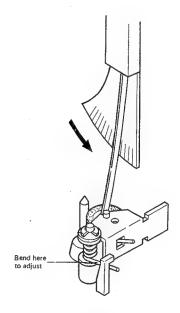


Fig. 6-6

#### 6-8. TAPE SPEED

Use the TEAC MTT-111 test tape (containing highly accurate 3-kHz signals) or its equivalent to measure tape speed.

- 1) Connect a frequency counter to the OUTPUT terminals as shown in Fig. 6-8.
- 2) Play the test tape from the start of the tape and check that the frequency counter reading is within 3 kHz ±0.5 %.
- If the reading is outside this range, clean the tape path and check the pinch roller pressure and takeup tension.
- 4) If these values are correct, adjust the resistor of the motor so that the reading is within the range 3000 Hz ±5 Hz.

NOTE: Adjust tape speed after the tape has run for about 30 sec in the reproduce mode.

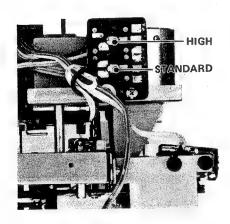


Fig. 6-7

#### 6-9. WOW AND FLUTTER

Before measuring wow and flutter, the following points should be read carefully. It is necessary to decide which of the two measurement methods should be used.

 Reproduce method: Measure while playing wow & flutter test tape MT-111 or its equivalent.

Record/reproduce method: Record a 3-kHz signal on blank tape, rewind the tape and reproduce the recorded signal.

NOTE: When measuring using the record/reproduce method, the recorded section should be reproduced repeatedly to obtain the mean value. Be careful not to read the meter for those parts of the tape in which wow & flutter components in recording and reproducing cancel each other.

- Set the flutter meter controls to the required standard. Select the DIN/IEC/ANSI peak value or the NAB RMS value, then set the weighting control as required.
- 3) Measure at the beginning and the end of the tape. The measured value will differ slightly according to the measuring method and instrument used. Standard values are:

1-7/8 ips:

±0.085 % peak (DIN/IEC/ANSI weighted)

±0.18 % peak (DIN/IEC/ANSI unweighted)

0.06 % (NAB weighted) 0.11 % (NAB unweighted)

3-3/4 ips:

±0.055 % peak (DIN/IEC/ANSI weighted) ±0.13 % peak (DIN/IEC/ANSI unweighted)

0.04 % (NAB weighted) 0.07 % (NAB unweighted)

NOTE: Measure after cleaning the tape path, especially the capstan shaft, pinch roller and head surfaces.



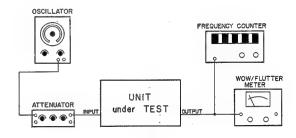


Fig. 6-8



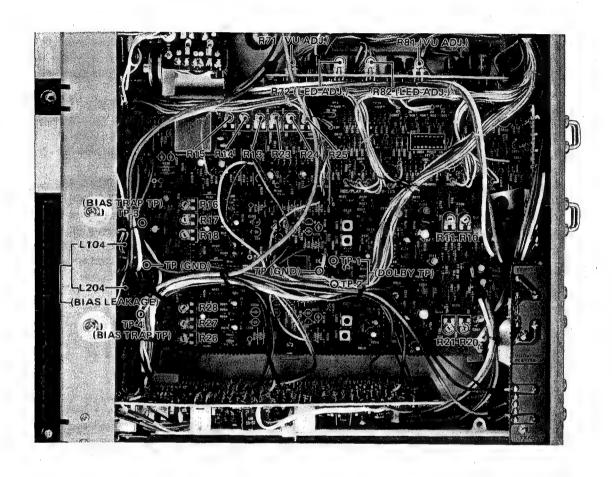

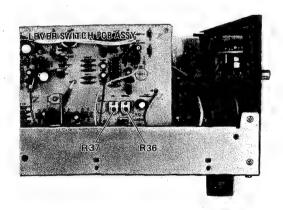

#### 7. RECORD/REPRODUCE AMPLIFIER CHECKS AND ADJUSTMENTS

Remove the top cover by unscrewing the screws securing it. When the top cover is removed, the record/reproduce amplifier PCB ASSY can be seen. When adjusting the azimuth of the record/reproduce head, remove the cassette holder door cover.

The following points should be observed before starting the record/reproduce amplifier checks or adjustments.

- \* Before adjusting the amplifier, the erase head, record/reproduce head and tape path should be demagnetized and cleaned with cleaning fluid.
- \* Adjust the left channel first, then the right channel. In the circuit diagrams, 100-series numbers refer to left channel components and 200-series numbers refer to right channel components. For example, R180 is a left channel resistor while R280 is the equivalent right channel resistor.

Left channel/Right channel components are shown as R180/R280.

- \* 0 dB = 1 V
- \* Unless otherwise specified, set the switches as follows:

Switches	Positions
MONITOR	TAPE
DOLBY NR	OUT
INPUT	LINE 1 or 2
SPEED	STANDARD
EQ.	METAL
BIAS	METAL
MEMORY	OFF
CAL	PRESET

\* If characteristics such as frequency response and crosstalk are found to be unsatisfactory, it is necessary to check and adjust the azimuth of the record/reproduce head first prior to performing amplifier adjustment.

## Record/reproduce head azimuth check and adjustment

Connect an oscilloscope and a VTVM to the OUTPUT terminals as shown in Fig. 7-1. Play test tape MTT-150 to check that the phase difference between the L and R channels is less than 45°.

Reproduce the 10-kHz/-10 dB signal from test tape MTT-316 and turn the azimuth adjusting nut to maximize the levels of both channels.

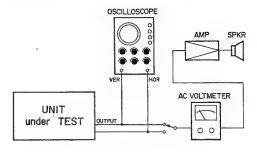


Fig. 7-1




Fig. 7-2

## 7-1. REPRODUCE OUTPUT LEVEL SETTING

- 1) Load test tape MTT-150 and play it.
- 2) Connect the HOT terminal of the VTVM to DOLBY T.P. (TP.1/TP.2) and the COLD terminal of the VTVM to TP (GND) and check that the DOLBY T.P. voltage is 580 mV (-2.5 dB).
- 3) If this value cannot be obtained, adjust semi-fixed resistors R11/R21.
- 4) Also connect the VTVM to the OUTPUT terminal and confirm that the OUTPUT level is -4.5 dBV ±2 dB when the OUTPUT level control is maximum.

#### 7-2. VU METER SETTING

- 1) Load test tape MTT-150 and play it.
- 2) Check that the VU meter reading is +3 VU ±1 VU.
- 3) If the VU meter reading is not correct, adjust semi-fixed resistors R71/R81.

#### 7-3. REPRODUCE FREQUENCY RESPONSE

- 1) Connect a VTVM to the OUTPUT terminal.
- Play test tape MTT-316 and check the output level. Confirm that the level at 10 kHz is within ±2 dB of the level at 315 Hz.
- 3) If the response is unsatisfactory, adjust semifixed resistors R10/R20. If the result is still unsatisfactory, check the tape travel and head
- 4) Play the 10-kHz signal from the test tape and change the EQ switch setting to NORMAL. Confirm that the output level is about 4.5 dB  $^{+1}_{-1}$  higher than with the switch in the METAL position.

#### 7-4. BIAS SETTING ADJUSTMENT

Before adjusting the bias setting:

- a. Connect the measuring instruments as shown in Fig. 7-3.
- b. Load a blank tape and put the deck in the record/pause mode.
- c. Apply a -14 dBV/400 Hz signal to the LINE 1 or 2 terminal.
- d. Adjust the INPUT (LEFT/RIGHT) level control until the VU meter reads 0 VU.
- e. Adjust the OUTPUT level control so that the OUTPUT terminal level is -10 dBV.

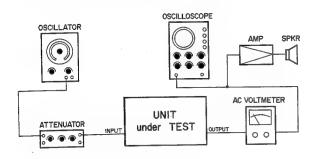


Fig. 7-3

Bias setting at position METAL

- 1) Set the EQ and BIAS switches to METAL.
- 2) Alternately record -44 dBV signals at 400 Hz then 10 kHz on blank tape (MTT-5072) and reproduce them.
- NOTE: The level -44 dBV is 30 dB lower than the standard level.
- 3) Note readings of the OUTPUT level at the OUTPUT terminal and check that the output levels are identical for both frequencies.
- 4) If the result is unsatisfactory, adjust semifixed resistors R15/R25.
- NOTE: Turning the semi-fixed resistors clockwise increases bias current and decreases high frequency response; turning them counterclockwise increases high frequency response.

## Bias settings at NORMAL and Co (CrO<sub>2</sub>) positions

This is done in the same way as for the metal bias setting. Refer to the following table:

Positions	EQ/BIAS switches	Blank tape	Adjusting points
BIAS METAL	METAL	MTT-5072	R15/R25
BIAS Co(CrO <sub>2</sub> )	Co(CrO <sub>2</sub> )	MTT-5061	R14/R24
BIAS NORMAL	NORMAL	MTT-501	R13/R23

#### 7-5. RECORD LEVEL

Adjust this after the setting of the reproduce and bias levels (7-1 and 7-4) and VU meter (7-2) is complete.

The following items 1) - 5) indicate the standards levels and setting orders of each control.

#### **METAL**

- 1) Connect the measuring instruments as shown in Fig. 7-3.
- 2) Set the BIAS and EQ switches to METAL and the MONITOR switch to SOURCE.
- 3) Load blank tape (MTT-5072) and set the deck in the record/pause mode.
- 4) Apply -14 dBV/400 Hz signals to LINE 1 or 2
- 5) Adjust the INPUT (LEFT/RIGHT) level control until the VU meter reads 0 VU. Adjust the OUTPUT level control so that the OUTPUT terminal level is set to -10 dBV.
- 6) Set the MONITOR switch to TAPE. Record and play the blank tape to check that the OUTPUT level is -10 dBV ±1 dB.
- 7) If satisfactory values are not obtained, adjust semi-fixed resistors R16/R26.

#### Co(CrO<sub>2</sub>) and NORMAL

This is done in the same way for metal tape. Perform adjustment referring to the following table.

Positions	EQ/BIAS switches	Plank tange	Adjusting points
Positions	EG/DIA9 2MICCIES	Digity rapes	Aujusting points
METAL	METAL	MTT-5072	R16/R26
Co(CrO <sub>2</sub> )	Co(CrO <sub>2</sub> )	MTT-5061	R17/R27
NORMAL	NORMAL	MTT-501	R18/R28

## 7-6. OVERALL FREQUENCY RESPONSE METAL

Obtain the standard setting according to procedures 1) - 6) of 7-5. and check the record/reproduce signals.

1) Obtain -44 dBV by decreasing the input signal level by 30 dB and record and play it on blank tape (MTT-5072).

Change the input signal level and confirm that the level at 12 kHz is within ±2 dB of the level at 400 Hz. Also confirm at high tape speed.

If the response is unsatisfactory, check whether the record/reproduce head is dirty or set correctly. It is also necessary to check the bias level setting.

NOTE: Perform this adjustment with the NR SYSTEM switch set OUT.

#### Co(CrO<sub>2</sub>) and NORMAL

Take the same procedures as for metal tape. Refer to Table under paragraph 7-5 for the tapes to be used and the switch settings.

#### 7.7. OVERALL SIGNAL-TO-NOISE RATIO

Obtain the standard setting according to procedures 1) — 6) of 7-5. to check record/reproduce level.

- 1) Recording input signal of -14 dBV/400 Hz on a blank tape for a short time. Then mute the signal and record with no input signal.
- 2) Rewind the tape to the start of the recorded section.
- 3) Play back the recorded section and measure the output level of the section with the signal, then, at the point where the signal stops, increase the sensitivity of the VTVM and measure the output level of the no-signal section. The output level measurement should be weighted.
- 4) Calculate the level ratio of noise with respect to the recorded signal and confirm that they are identical to the values shown in the table below.

For the tapes to be used and the switch settings, refer to Table under paragraph 7-5.

If the values are unsatisfactory, proceed as follows:

- \* Demagnetize and clean the erase and record/ reproduce heads.
- \* Check that erasing is being done effectively.
- \* Check and adjust reproduce and record/reproduce frequency response.
- \* Check and adjust the bias trap.
- \* Replace the tape.

SPEED	STANDARD	HIGH
METAL Co(CrO <sub>2</sub> )	More than 48 dB	More than 49 dB
NORMAL	More than 45 dB	More than 46 dB

#### 7-8. OVERALL DISTORTION

- 1) Connect the measuring instruments as shown in Fig. 7-4.
  - Obtain the standard setting according to procedures 2) 6) of 7-5. and check record/reproduce level.
- 2) Record an input signal of -14 dBV/400 Hz on blank tape and play it back to measure the distortion of the output signal.

3) The value should be less than 1.0 % for any of the tapes used.

For the tapes to be used and the switch settings, refer to Table under paragraph 7-5. If satisfactory values are not obtained, check the bias setting again, also check the S/N ratio and the overall frequency response.

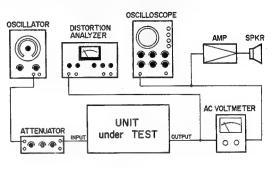


Fig. 7-4

#### 7-9. ERASURE

- 1) Connect the measuring instruments as shown in Fig. 7-5. To check that erasing is effective, use a 1-kHz bandpass filter.
- 2) Obtain the standard setting according to procedures 2) 5) of 7-5.
- 3) With a -4 dBV/1 kHz (saturation level) signal, increase the input signal level by 10 dB and record it on blank tape. Reproduce this to measure the OUTPUT terminal level decreasing the sensitivity of the VTVM by about 10 dB.
- 4) Rewind the tape to the start of the recording. Erase the recorded section with no input signal.
- 5) Play back the erased section and measure the output level, increasing the sensitivity of the VTVM.
- 6) Calculate the ratio of the signal output level to the output level obtained by playing the erased tape.
- 7) The value should be more than 65 dB for any of the tapes to be used.

For the tapes to be used and the switch settings, refer to Table under paragraph 7-5. If the erase effect is unsatisfactory, check whether the erase head is clean and the tape is running correctly.

NOTE: When checking erasure, make sure the blank tape used has been erased by a bulk eraser before using it. Correctly tune the frequency of the signal to be recorded to match the bandpass filter and compensate for measuring instrument loss.

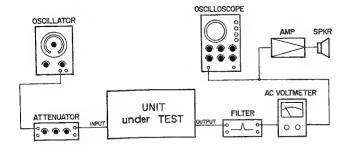


Fig. 7-5

#### 7-10. CHANNEL SEPARATION

- 1) Connect the measuring instruments as shown in Fig. 7-5.
  - For the right channel, connect only the VTVM. For the left channel, install a 1-kHz bandpass filter between the OUTPUT terminal and the VTVM.
- 2) With a 1-kHz input signal, obtain the standard setting according to procedures 2) 6) of 7-5, to check the record/reproduce level.
- 3) Make a stereo recording applying the input signal only to the left channel and no signal to the right channel.
- 4) Rewind the tape to the start of the recording and play it.
  - Measure the output levels of both channels. (The right channel will contain the recorded signal and the left channel will contain components which have leaked from the right channel.).
- 5) Calculate the difference in level between the two channels. This value should be more than 35 dB.

## 7-11. LED LIGHTING OF VU METER (PEAK indicator)

According to procedures 1) - 5) of 7-5., adjust until the VU meter indicates 0 VU.

- Confirm that the LED lights when the input level is increased by 8 dB from -14 dBV and does not light when the input level is increased by 7 dB from -14 dBV.
- 2) If the lighting level is not satisfactory, adjust semi-fixed resistors R72/R82.

#### 7-12. DOLBY NOISE REDUCTION EFFECT

- 1) Connect the measuring instruments as shown in Fig. 7-3.
- Set the EQ and BIAS switches to match the blank tape used and the MONITOR switch to SOURCE.


- 3) Load the blank tape and put the deck in the record/pause mode.
- 4) Apply a -14 dBV/1 kHz signal to the LINE 1 or 2 terminal.
- 5) Adjust the INPUT (LEFT/RIGHT) level control so that the VU meter indicates +3 VU. Also adjust the OUTPUT level control so that the OUTPUT terminal level is -7 dBV.
- 6) Set the MONITOR switch to TAPE. Record a -37 dBV/1 kHz signal on the blank tape, decreasing the input level by 23 dB and reproduce the signal.
- 7) While recording and reproducing, switch the NR SYSTEM switch between NR and OUT to check that the change in level is between 3 and 8 dB.
- 8) Check the level when a -47 dBV/10 kHz signal is recorded and reproduced. The values are shown in the following table.
  - Measure the OUTPUT terminal level, increasing the sensitivity of the VTVM by an amount equivalent to the decrease in the input signal level.

Input signal	Change in Output level
-37 dBV, 1 kHz	between 3 and 8 dB
-47 dBV, 10 kHz	between 8 and 12 dB

#### 7-13. DOLBY HX EFFECT

Follow the same procedures as in 7-12. DOLBY NR EFFECT up to item 3).

- 1) Apply a -14 dBV/400 Hz signal to the LINE 1 or 2 terminal.
- 2) Adjust the INPUT (LEFT/RIGHT) level control so that the VU meter indicates 0 VU. Also adjust the OUTPUT level control so that the OUTPUT terminal level is -10 dBV.
- Set the NR SYSTEM switch to HX and check the response, changing the input signal frequency.

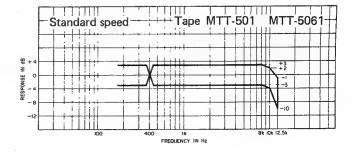

4) If the response decreases at high frequencies, adjust semi-fixed resistor R36 for NORMAL tape and R37 for Co (CrO<sub>2</sub>) tape.

#### 7-14. HEADPHONES OUTPUT LEVEL

- 1) Connect an 8-ohm load and a VTVM to the PHONES jack.
- 2) Load test tape MTT-150 and play it back to measure the headphones output level.
- 3) The value should be 0 dBV ±2 dB (100 mW) when the PHONES knob is set to maximum.

#### 7-15. BIAS TRAP ADJUSTMENT

Bias trap adjustment is only necessary when:

- \* the record/reproduce head is replaced,
- \* parts in the record amplifier circuit (especially the bias oscillator and trap coil) are replaced,
- \* too much bias leakage is observed.
- 1) Set the deck to the record/pause mode.
- 2) Connect the VTVM or oscilloscope's HOT terminal to T.P.3/T.P.4 (junction point between L104/L204 and R176/R276 of the bias trap) and its COLD terminal to TP (GND).
- 3) Adjust L104/L204 so that the level (bias leakage) reading is minimum.
- NOTE: After adjusting the bias trap, check the bias setting, record level and overall frequency response.

#### 7-16. BIAS/REC CALIBRATION CHECK

Prior to this check, set the deck as follows. The tape to be used for calibration is  $Co(CrO_2)$  MTT-5061.

- a. Set the EQ and BIAS switches to Co (CrO<sub>2</sub>).
- b. Set the INPUT switch to TEST.
- c. Set the ADJUST/PRESET switch to AD-JUST.
- d. BIAS/REC CALIBRATION: BIAS L/R (R35/R45)

fully counterclockwise REC LEVEL L/R (R30/R40)

fully clockwise

- Set the deck to the RECORD/PAUSE mode and the MONITOR switch to SOURCE.
- 2) Apply a -34 dBV/1 kHz signal to LINE 1, and adjust the INPUT (LEFT/RIGHT) level control so that the VU meter indicates 0 VU. (When observed at the OUTPUT terminal, adjust the OUTPUT level control so that the level is -30 dBV.)

Variable BIAS CAL. range

3) Record and play back a 1 kHz input signal, setting the MONITOR switch to TAPE.

- 4) While recording and reproducing the signal, turn the BIAS L/R (R35/R45) clockwise to obtain the maximum value (Lmax) of the VU meter. (When observed at the OUTPUT terminal, obtain the maximum level.)
- 5) Also obtain the indication value (L<sub>1</sub>) of the VU meter when the BIAS L/R (R35/R45) is turned fully clockwise. (When observed at the OUTPUT terminal, obtain the OUTPUT level at that time.).
- 6) Confirm that the variable range is  $Lmax L_1 \ge 4$  VU (or 4 dB at the OUTPUT terminal).

Variable REC CAL, range


- 7) As in the variable BIAS CAL. range, record and reproduce a 1 kHz signal, setting the MONITOR switch to TAPE.
- 8) While recording and reproducing this signal, turn the BIAS L/R (R35/R45) clockwise to obtain the maximum indication value (Lmax) of the VU meter (when observed at the OUTPUT terminal, obtain the maximum level value.)
- 9) Obtain indication value L<sub>2</sub> of the VU meter when REC LEVEL L/R (R30/R40) is turned fully counterclockwise. (Obtain the OUT-PUT level when observed at the OUTPUT terminal.).
- 10) Confirm that the variable range is Lmax  $L_2 \ge 10$  VU (or 10 dB at the OUTPUT terminal).

**BIAS/REC CALIBRATION setting** 

- 1) Set the deck to the RECORD/PAUSE mode and the MONITOR switch to SOURCE.
- 2) Apply a -34 dB/400 Hz signal to LINE 1. Adjust the INPUT (LEFT/RIGHT) level control so that the VU meter indicates 0 VU. (When observed at the OUTPUT terminal, adjust the OUTPUT level control to obtain -30 dBV;)
- Record and reproduce the input signal. Adjust REC LEVEL L/R (R30/R40) to obtain identical VU meter levels (or OUTPUT levels), switching the MONITOR switch between SOURCE and TAPE.
- 4) Record and reproduce the input signal with the MONITOR switch set to TAPE. Adjust BIAS L/R (R35/R45) to obtain the identical VU meter values (or OUTPUT levels), varying the input signal frequency between 400 Hz, 6.3 kHz and 12.5 kHz.

**NOTE:** After adjusting BIAS L/R, adjust the RECORD level again. Also check the overall distortion.

## 8. EXPLODED VIEWS AND PARTS LISTS

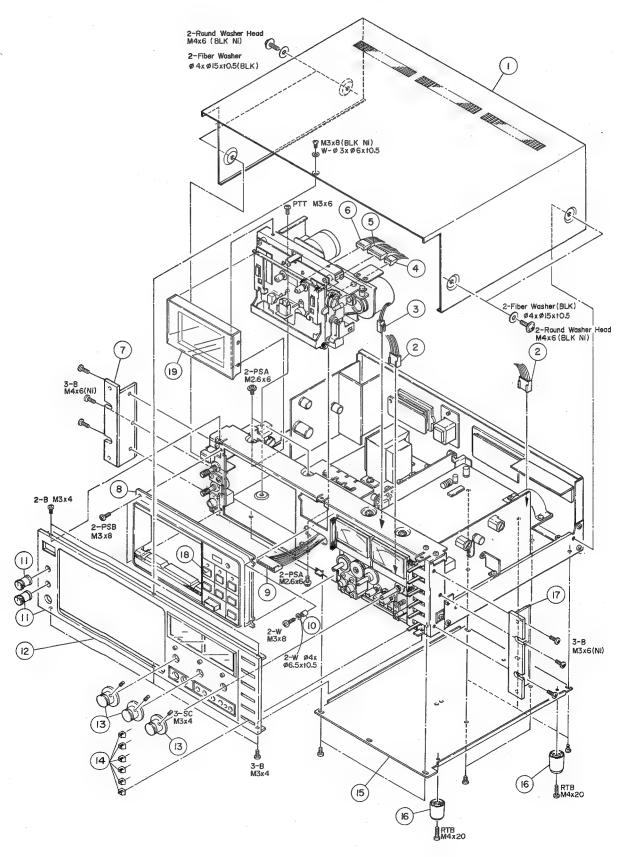



REF. NO.	PARTS NO.	DESCRIPTION
1 - 1	5800132000	Cover, Top
1 - 2	*5122168000	Connector, Socket; 6P
1 - 3	*5122165000	Connector, Socket; 3P
1 - 4	*5122166000	Connector, Socket; 4P
1 - 5	*5122172000	Connector, Socket; 10P
1 - 6	*5122167000	Connector, Socket; 5P
1 - 7	*5800059401	Bracket, Handle; L
1 - 8	*5800083400	Escutcheon Assy, Cassette
1 - 9	*5122174000	Connector, Socket; 12P
1 - 10	*5785603025	Spacer
1 - 11 1 - 12 1 - 13	5504712000 *5600038110 5543027100	Knob Assy, TIMER Panel Assy, Front 5504711000 Cover Assy, Meter 5533183002 Knob, Eject Knob, VR
1 - 14 1 - 15 1 - 16 1 - 17	5534521000 *5552340202 *5502229001 *5504676000 *5800059501	Knob, Lever Switch Chassis, Rear Chassis Assy, Rear Foot Bracket, Handle; R
1 18	*5138009000	Key Unit
1 - 19	*5800133600	Cover Assy, Cassette

REF. NO.	PARTS NO.	DESCRIPTION
2 - 1	↑ 5128034000 ↑ 5128075000 ↑ 5128017000 ↑ 5128036000 ↑ 5350008300	Cord, AC Power [GE] Cord, AC Power [U, C] Cord, AC Power [E] Cord, AC Power [UK] Cord, AC Power [A]
2 - 2 2 - 3 2 - 4	*5534660000 *5534661000 *5534118000 *5552381000	Strain Relief, AC Power Cord [All except UK] Strain Relief, AC Power Cord [UK] Rivet, Push Panel, Rear
2 - 5 2 - 6 2 - 7 2 - 8 2 - 9	*5555063000 5330505000 *5800088000 *5122225000 *5122282000	Washer, GND Plug, 2P; Shorting Cover, Shield Connector, Socket; 6P (BLK) Connector, Socket; 4P (RED)
2 - 10 2 - 11 2 - 12	*5122166000 *5122167000 *5200013400 *5200013410	Connector, Socket; 4P (WHT) Connector, Socket; 5P (WHT) PCB Assy, IN/OUTPUT [U] PCB Assy, IN/OUTPUT [All except U]
2 - 13	*5200013300 *5200013310	PCB Assy, IN/OUTPUT (DBX) [U] PCB Assy, IN/OUTPUT (DBX) [All except U]
2 - 14	*5200013500 *5200013510 *5620013700	PCB Assy, REMOTE [U] PCB Assy, REMOTE [All except U] Socket Assy, 6P
2 - 16 2 - 17 2 - 18	*5581038000 *5122169000 *5200013120 *5200013130	Clamper, Cord; A Connector, Socket; 7P (WHT) PCB Assy, REC-PLAY AMPL [U] PCB Assy, REC-PLAY AMPL [All except U]
2 - 19 2 - 20 2 - 21 2 - 22 2 - 23	*5122165000 *5122284000 *5555565200 *5122223000 *5122164000	Connector, Socket; 3P (WHT) Connector, Socket; 6P (RED) Angle, PCB Connector, Socket; 4P (BLK) Connector, Socket; 2P (WHT)

[U]:	U.S.A.
[A]:	AUSTRALIA
11.1	LIMITED AREA

REF. NO	. PARTS NO.	DESCRIPTION
2 - 24	△ 5134018000 △ 5134011000 △ 5134009000 △ 5052906000	Switch, Power [U, C] Switch, Power [E, UK, A] Switch, Power [GE, L] Spark Killer,
	<b>∆</b> 5052907000	0.033 μF + 120Ω/250V [U] Spark Killer,
	₫ 5052911000	0.01 μF + 300Ω/400V [GE, L] Spark Killer,
	<b>≜</b> 5267702500	0.033 μF + 120Ω/250V [C] Spark Killer 0.0047 μF/250V [E, UK, A]
2 - 26 2 - 27 2 - 28	*5555561000 *5240172000 5330506000	Bracket, Power Switch Carbon Resistor 39k 5% 1/4W Pin-Jack, IP
2 - 29 2 - 30 2 - 31 2 - 32 2 - 33	5150223000 *5553269101 5282406302 5300019500 *5200013900 *5200013910	Var. Res., $100k\Omega$ (A) Chassis, L Var. Res., $20k\Omega \times 2$ (A) Switch, Push; 6-2 PCB Assy, SW [U] PCB Assy, SW [All except U]
2 - 34 2 - 35 2 - 36 2 - 37 2 - 38	5282250201 5282250101 5504713000 *5800059300 *5555646000	Var. Res., $250 \text{k}\Omega$ (B) Var. Res., $50 \text{k}\Omega$ (B) Knob, Push Switch; K Bracket, SW PCB Bracket, Lever Switch
2 - 39 2 - 40 2 - 41 2 - 42 2 - 43 2 - 44 2 - 45	*5555913000 *5524082000 *5168899000 5504568000 *5504710001 *5504569200 *5555912000	Mask, C Spring, LED; B PCB Assy, LED Gear Assy, A Bracket, Var. Res. Gear Assy, Friction Mask, B
2 - 46 2 - 47 2 - 48 2 - 49 2 - 50	*5554653200 5296001900 *5524124000 *5800064900 *5800059201	Bracket, Meter VU Meter Spring, GND Chassis, Front Bracket, Switch
2 - 51 2 - 52	5124022000 *5200013700 *5200013710	Jack, PHONES PCB Assy, SW (MEMORY) [U] PCB Assy, SW (MEMORY) [All except U]
2 - 53	5133019000	Switch, Rotary; 2-3
2 - 54 2 - 55 2 - 56 2 - 57	5534431000 *5534422100 *5786360500 5282406802	Button, B Rod, Power Switch R Pin, φ5 Var, Res 50kA x 2
2 - 58 2 - 59	*5504676000 *5551031200	Foot Chassis, Fl
2 -60	*5200014002 *5200014012	PCB Assy, POWER SUPPLY [U] PCB Assy, POWER SUPPLY [All except U]
2 - 61 2 - 62 2 - 63 2 - 64 2 - 65	*5555951001 *5033291000 5231755100 *5317000300 5231755500	Heat Sink Plate, Insulating Transistor, 2SD880Y Plate, Insulating Transistor, 2SD985
2 - 66 2 - 67 2 - 68 2 - 69	*5033295000 *5553353100 *5555060000 *5168548100	Tube, Insulating Bracket, Transformer Bracket, B [GE] PCB Assy, VOLTAGE SELECTOR [GE, L]
2 - 70 2 - 71 2 - 72	≜*5152182100 ≜*5152184000 ≜*5152215000 *5555626000 *5168973200	Transformer, Power [U, C] Transformer, Power [E, UK, A] Transformer, Power [GE, L] Washer, Transformer PCB Assy, FUSE [E, UK, A]
2 - 73 2 - 74	*5534473000 *5200031500	T-Type Rivet PCB Assy, METER AMPL.

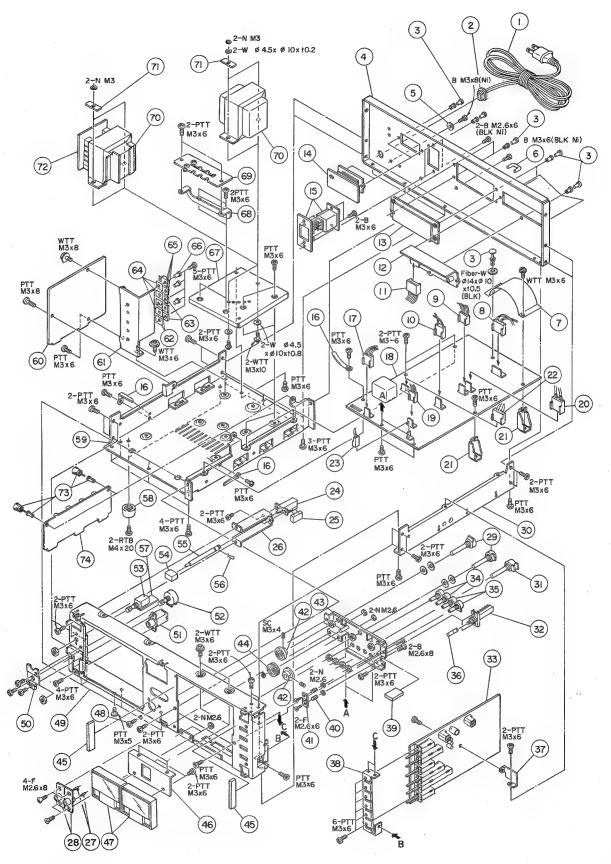

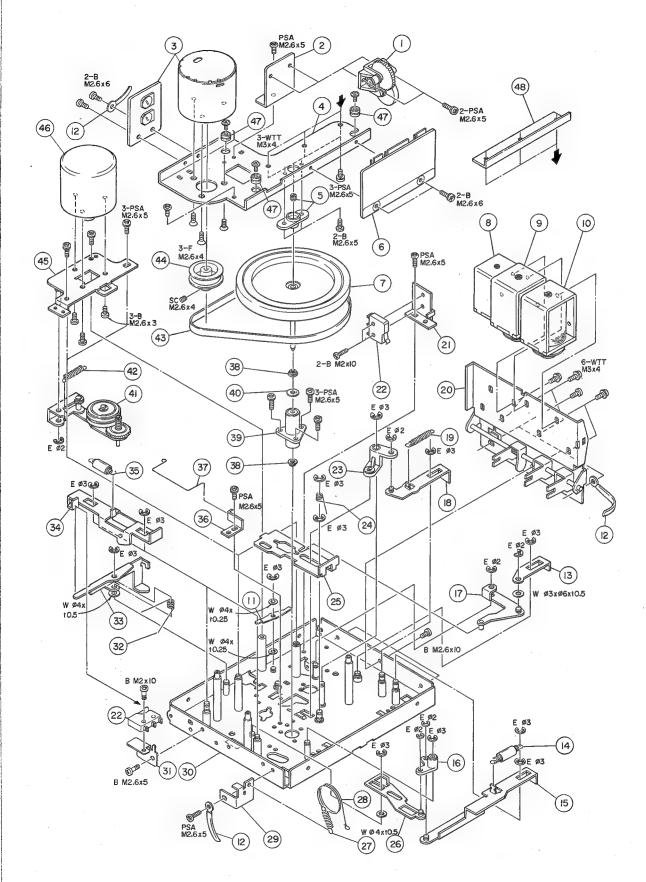


#### REF. NO. PARTS NO. DESCRIPTION \*5504673000 Holder Assy, Damper; C 3 2 \*555555000 Bracket, Damper - 3 - 4 Motor Assy, Capstan; DC Plate, Flywheel Base Bearing, Flywheel 5370000600 \*5800064601 3 - 5 \*5534277000 PCB Assy, JOINT [U] PCB Assy, JOINT [All except U] Flywheel Assy, Capstan 3 6 \*5200014101 \*5200014111 5504757000 - 7 - 8 - 9 3 5163040000 Solenoid, B 5163039100 Solenoid, A - 10 5313000500 Solenoid \*5555546000 Arm, Pressure; B - 11 - 12 Clamper, Cord; A Lever, Actuating \*5581038000 3 - 13 \*5800062600 - 14 \*5524195000 Spring, Lever Lever Assy, Pause Actuating Arm, Pause Actuating \*5504666000 - 15 - 16 - 17 - 18 - 19 \*5534611000 \*5800061900 Arm Assy, Actuating \*5504665000 Lever Assy, Actuating \*5524213000 Spring, Actuating; A - 20 \*5800065500 Bracket Assy, Solenoid; B - 21 - 22 \*5555543000 5130003000 Bracket, Switch Switch, Micro \*5534610000 Arm, Base Actuating - 23 3 - 24 \*5800062700 Spring, Pulley Guide Plate, Pulley Guide Lever Assy, Pause Spring, Damper String, Damper - 25 - 26 - 27 \*5800062900 \*5504667000 \*5524203000 - 28 - 29 \*5788202100 \*555556000 Angle, Spring - 30 \*5800060100 Chassis Assy, Mechanism - 31 - 32 - 33 - 34 \*5800062300 Bracket, Switch Spring, Cassette Pressure Arm, Cassette Pressure Lever Assy, Eject \*5800062800 33 \*5800061600 \*5504670000 - 35 - 36 - 37 - 38 - 39 \*5524199000 Spring, Eject Guide, Actuating Bar Bar, Brake Actuating Washer, Oil Retaining \*5800063000 \*5800062500 \*5534130000 5504091000 Housing Assy, Capstan - 40 \*5550031000 Washer Thrust Pulley Assy, Fast Wind Spring, Arm Belt, Capstan Drive - 41 - 42 5504808000 \*5524274000 333 - 43 - 44 5800063100 5800062400 Pulley, Motor - 45 \*5504807001 Plate Assy, Motor - 46 7105135000 Motor Assy, Reel; DC 333 - 47 - 48 Collar, Rubber \*5534537000 \*5800102100 Angle, Base

#### **EXPLODED VIEW-4**

4 - 1         *5553285001         Holder, Cassette           4 - 2         *5544958000         Shaft, Lock Plate           4 - 3         *5534613000         Guide, Cassette; L           4 - 6         *553665000         Plate, Cassette Holder           4 - 7         *5555652000         Tape, Adhesive           4 - 7         *55534638000         Lens, Lamp           4 - 9         *553444400         She, Brake           4 - 10         *5520333000         Plate Assy, Brake; B           4 - 11         *5504669002         Plate Assy, Brake; B           4 - 12         *5210010200         PCB, LAMP [U]           4 - 13         *5142026000         PCB, LAMP [U]           4 - 15         *5546666000         Shaft, Lever           4 - 16         *55424197000         Spring, Lever           4 - 16         *552535000         Spring, Lever           4 - 19         *553444000         Lever, Record Preventing; D           4 - 20         *553444300         Mounting Rubber           4 - 21         *550018400         PCB Assy, REED SW [U]           4 - 22         *553444400         Guide, Cassette           4 - 22         *5580098600         Holder Assy, Switch           4 - 26	REF. NO.	PARTS NO.	DESCRIPTION
4 - 2 *5544958000 Shaft, Lock Plate 4 - 3 *5534613000 Plate, Lock 4 - 4 *5534613000 Plate, Lock 4 - 7 *55555552000 Tape, Adhesive 4 - 7 *55555582000 Tape, Adhesive 4 - 8 *5534638000 Lens, Lamp 4 - 9 *5534444000 She, Brake 5 - 11 *5504669002 Plate Assy, Brake; B 7 - 12 *5210010200 PCB, LAMP [U] 5 *514022400 PCB, LAMP [U] 4 - 13 *5142026000 Lamp, DC 6V 65mA 5 *55544000 Shaft, Lever 5 *555544000 Lamp, DC 6V 65mA 5 *555544000 Shaft, Lever 6 * 15 *555544000 Lamp, DC 6V 65mA 6 * 16 *5524197000 Spring, Lever 8 *1 *5534617000 Belt, Counter Assy 6 *1 *1 *5504668001 Counter Assy 6 *1 *1 *5504660001 Counter Assy 6 *1 *1 *5504660001 Counter Assy 7 *1 *1 *5504660001 Counter Assy 8 *1 *1 *1 *1 *1 *1 *1 *1 *1 *1 *1 *1 *1	4 - 1	*5553285001	Holder, Cassette
4 - 4 *5534613000 Guide, Cassette; L Plate, Cassette Holder 4 - 6 *5534615000 Tape, Adhesive Lens, Lamp 5 *5534638000 Lens, Lamp 4 - 10 *5520333000 Plate Assy, Brake 5 - 11 *5504669002 Plate Assy, Brake; B PCB, LAMP [U] 5 *5210010200 PCB, LAMP [U] 5 *514022400 PCB, LAMP [U] 5 *514022400 PCB, LAMP [U] 6 *514002400 PCB, LAMP [U] 7 *514002400 PCB, LAMP [U] 7 *514002400 PCB, LAMP [U] 7 *5155553500 PCB, LAMP [U] 7 *5504669002 Plate Assy, Brake; B PCB, LAMP [U] 8 *514002400 PCB, LAMP [U] 8 *514002400 PCB, LAMP [U] 8 *514002400 PCB, LAMP [U] 9 *5140000 PCB, LAMP [U] 9 *5140000 PCB, LAMP [U] 9 *514000 PCB, LAMP [U] 9 *51400 PCB, LAMP [U] 9 *		*5544958000	
4 - 6 *5534615000 Plate, Cassette Holder  4 - 6 *5534615000 Spring, Cassette Pressure		*5534612000	
4 - 6 *5534615000 Spring, Cassette Pressure	4 - 4	*5534613000	Guide, Cassette; L
4 - 7 *5555582000 Tape, Adhesive 4 - 8 *553483000 Ens, Lamp 5 *5504669002 Plate Assy, Brake; B 5 *5210010200 PCB, LAMP [U]     *5210022400 PCB, LAMP [U]     *5524020000 PCB, LAMP [U]     *5524197000 PCB, LAMP [U]	4 - 5	*5555655000	Plate, Cassette Holder
4 - 8 *5534638000 Lens, Lamp 4 - 9 *5524844000 Shoe, Brake 4 - 11 *5504669002 Plate Assy, Brake; B			
4 - 10 *5534844000 Spring, Brake 4 - 11 *5504669002 Plate Assy, Brake; B 4 - 12 *5210010200 PCB, LAMP [U]			
4 -10 *5520333000 Spring, Brake 4 -11 *5504669002 Plate Assy, Brake; B *5210010200 PCB, LAMP [U] *5210022400 PCB, LAMP [All except U] 4 -13 *5142026000 Lamp, DC 6V 65mA 55404656000 Spring, Lever 4 -15 *5555544000 Lever, Record Preventing; D 57 *555554000 Spring, Lever 58 *555554000 Bracket, Counter Assy 59 Lamp, DC 6V 65mA 59 Lamp, DC 6V 6V 6V			
4 - 11 *5504669002 Plate Assy, Brake; B 4 - 12 *5210010200			
4 - 12	4 - 10	*5520333000	Spring, Brake
*5210022400 PCB_LAMP [Ail except U] 4 - 13 *5142026000 Shaft, Lever 4 - 15 *55555440000 Shaft, Lever 4 - 16 *5524197000 Spring, Lever 4 - 17 *5555535000 Bracket, Counter Assy 4 - 19 \$534617000 Belt, Counter 5 *520018410 Cunter Sasy 6 *520018410 PCB Assy, REED SW [Ail except U] 5 *138006000 Reed Switch 7 *520018400 PCB Assy, REED SW [U] 6 *520018400 PCB Assy, REED SW [U] 7 *5554448000 Arm, Eject 8 *5504444200 Guide, Cassette 9 *5534444200 Spring, Eject Arm 7 *24 *5555551000 Arm, Eject Actuating 1 *27 *5555552000 Arm, Eject Actuating 1 *28 *5800093600 Pulley Assy, Reel; R 7 *5555552000 Arm, Eject Actuating 1 *29 *5581055000 Screw, Shoulder 1 *30 \$800063700 Pulley Assy, Reel; L 1 *31 *5555540000 Arm, Eject Preventing 1 *32 *5524200000 Arm, Pieth Roller 1 *34 *5504828001 Arm, Pieth Roller 1 *35 *5800060100 Chassis Assy, Mechanism 1 *5555553000 Plate, Head Base; B 1 *5504717000 Plate Assy, Head Base 1 *4 *4 *55555533000 Plate, Head Base; A 2 *5524208000 Steel Ball, \$\phi 2\$ 4 *4 *55555533000 Plate, Head Base 1 *5524208000 Spring, Pinch Roller 2 *5534714000 Spring, Pinch Roller 3 *5500063000 Plate, Head Base; A 4 *55555533000 Plate, Pressure 5 *5500063000 Spring, Pinch Roller 5 *5500064400 Plate, Head Base; B 5 *5524208000 Spring, Pinch Roller 5 *5536171000 Plate Assy, Head Base 1 *5524208000 Spring, Pinch Roller 2 *55555533000 Plate, Pressure 3 *5800063000 Spring, Pinch Roller 4 *4 *55555533000 Plate, Pressure 5 *5524208000 Spring, Pinch Roller 5 *554141000 Spring, Height Adj. 5 *5524208000 Spring, Pinch Adj. 5 *5524208000 Spring, Pinch Adj. 5 *5536171000 Plate Assy, Reel; L 5 *553655658000 Plate, Passore; R 5 *554614000 Guide, Cassette; L 5 *55365658000 Plate, Assy, Head Mounting 5 *554614000 Guide, Cassette; R 5 *55404715000 Bracket Assy, Holder; L 5 *5504715000 Bracket Assy, Holder; R	1 '		
4 - 13 *5142026000 Lamp, DC 6V 65mA 4 - 14 *5544656000 Shaft, Lever  4 - 15 *5555544000 Lever, Record Preventing; D 5 *5555553000 Bracket, Counter Assy 5 *5544617000 Belt, Counter Assy 5 *5534448000 Mounting Rubber 6 *20 *5534444000 PCB Assy, REED SW [All except U] 5 *138006000 Reed Switch 7 *20 *5554444200 Syring, Eject Arm  4 - 22 *5554444200 Syring, Eject Arm  4 - 23 *55524201000 PCB Assy, REED SW [U] 6 *380008300 Arm, Eject 6 *5800098500 Cushion, Reel 7 *55545555000 Arm, Eject Actuating 8 *20 *55540003000 Pulley Assy, Reel; R  4 - 29 *5555555000 Arm, Eject Actuating 9 *20 *28 *360003700 Pulley Assy, Reel; R  4 - 29 *553460000 Screw, Shoulder 8 - 30 *5654080000 Arm, Pinch Roller 9 *5534606000 Arm, Pinch Roller 1 - 34 *5555530000 Spring, Arm 1 - 35540828001 Arm, Assy, Pinch Roller 1 - 35 *5800060100 Arm, Pinch Roller 2 - 37 *5555531000 Arm, Pinch Roller 3 *56504717000 Plate Assy, Head Base 1 - 41 *5540055000 Plate, Head Base; B 1 - 42 *555533000 Plate, Pressure 3 *5800064400 Plate, Head Base 4 - 44 *5569613000 Plate, Pressure 5 *5524280000 Arm, Pinch Roller 6 *5524280000 Plate, Head Base 7 *5504717000 Plate Assy, Head Base 8 *5524141000 Spring, Height Adj, 8 *552428000 Spring, Tension 8 *5524280000 Arm, Tension 9 *5534683100 Arm, Pinch Roller 9 *553174000 Arm, Pinch Roller 9 *553174000 Arm, Pinch Roller 9 *55346405000 Arm, Pinch Roller 9 *55346405000 Plate, Head Base; B 9 *5540717000 Plate Assy, Head Base 1 - 44 *5569613000 Arm, Tension 1 - 48 *555533000 Arm, Tension 2 - 48 *5580063200 Table Assy, Reel; L 3 - 50 *580063200 Table Assy, Reel; L 4 - 50 *580063200 Table Assy, Reel; R 7 *5534716000 Plate Assy, Head Mounting 9 Plate, Tension Adj.  4 - 54 *5504715000 Bracket Assy, Holder; R 8 *5504715000 Bracket Assy, Holder; R	4 - 12		
4 - 14 *5544656000 Shaft, Lever  4 - 15 *555544000 Lever, Record Preventing; D			
4 - 15  *5555544000 Lever, Record Preventing; D 4 - 16  *5524197000 Spring, Lever 4 - 17  *55555535000 Bracket, Counter Assy 5504660001 Counter Assy 4 - 18  5504660001 Belt, Counter 5504617000 Belt, Counter 4 - 20  *5534448000 Mounting Rubber 4 - 21  *5200018410 PCB Assy, REED SW [All except U] 5138006000 Reed Switch PCB Assy, REED SW [U] 4 - 22  *5534444200 Guide, Cassette Spring, Eject Arm 4 - 24  *5555551000 Arm, Eject 4 - 25  *580009600 Holder Assy, Switch 4 - 26  *5800098500 Cushion, Reel 4 - 27  *5555552000 Arm, Eject Actuating 5500063800 Pulley Assy, Reel; R 5500063800 Pulley Assy, Reel; R 5504200000 Arm, Pinch Roller 5504200000 Arm, Pinch Roller 5504228001 Arm Assy, Pinch Roller 5504228001 Arm Assy, Pinch Roller 55  *580060100 Arm, Pinch Roller 55  *58555531000 Plate, Head Base; B 5504717000 Plate, Head Base 5504717000 Plate, Head Base 5504717000 Plate, Pressure 5504050000 Arm, Pinch Roller 5504050000 Plate, Pressure 5504050000 Plate, Pressure 5504050000 Arm, Pinch Roller 5504050000 Plate, Pressure 5504050000 Plate, Pressure 5504050000 Plate, Pressure 5504050000 Arm, Pinch Roller 5504050000 Plate, Pressure 5504716000 Plate Assy, Reel; R 55048063000 Table Assy, Reel; R 55048063000 Table Assy, Reel; R 55048063000 Plate, Pressure 55049714000 Plate Assy, Reel; R 55048640000 Plate, Tension 5504683100 Plate, Tension 5504683100 Plate, Tension 5504683100 Plate, Tension Adj. 5504683100 Plate, Tension Adj. 5504683100 Plate, Tension Adj. 5504683100 Plate, Tension Adj. 5504714000 Plate Assy, Holder; L 5506714000 Bracket Assy, Holder; L 5606 *5504714000 Bracket Assy, Holder; L			
4 - 16         *5554197000         Spring, Lever           4 - 17         *5555553000         Bracket, Counter Assy           4 - 19         5534617000         Belt, Counter           4 - 20         *5534448000         Mounting Rubber           4 - 21         *5200018410         PCB Assy, REED SW [U]           *5200018400         *5200018400         PCB Assy, REED SW [U]           4 - 22         *5534444200         Guide, Cassette           4 - 23         *5554201000         Spring, Eject Arm           4 - 24         *5555551000         Arm, Eject           4 - 26         *5800098500         Holder Assy, Switch           4 - 28         *5800098500         Cushion, Reel           4 - 27         *5555552000         Arm, Eject Actuating           4 - 28         *5800063800         Pulley Assy, Reel; R           4 - 29         *5581055000         Screw, Shoulder           4 - 31         *555555000         Arm, Eject Preventing           4 - 32         *5524200000         Spring, Arm           4 - 32         *5540250000         Arm, Pinch Roller           4 - 33         *55542850000         Arm, Pinch Roller           4 - 36         *55542850000         Plate, Head Base; B	4 15	*FFFF44000	
4 - 17         *555553000         Bracket, Counter Assy           4 - 18         5504660001         Counter Assy           4 - 19         5534617000         Belt, Counter           4 - 20         *5534448000         Mounting Rubber           4 - 21         *5200018410         PCB Assy, REED SW [All except U]           538006000         Reed Switch           PCB Assy, REED SW [U]         Guide, Cassette           4 - 23         *5554201000         Arm, Eject Arm           4 - 24         *5555551000         Arm, Eject Arm           4 - 26         *5800098600         Cushion, Reel           4 - 27         *5555552000         Arm, Eject Actuating           4 - 28         *5800063800         Pulley Assy, Reel; R           4 - 29         *5581055000         Arm, Eject Preventing           4 - 31         *5555420000         Arm, Eject Preventing           4 - 31         *555540000         Arm, Arm, Pinch Roller           4 - 33         *554220000         Arm, Pinch Roller           4 - 34         *504288001         Arm Assy, Pinch Roller           4 - 35         *580066000         Spring, Pinch Roller           4 - 38         *5555531000         Plate, Head Base; A           4 - 39			
4 - 18			Procket Counter Assu
4 - 19			
4 - 20 *5534448000 Mounting Rubber			
4 - 21	4 - 19	5534617000	Beit, Counter
#5200018400 #CB Assy, REED SW [U]  4 - 22			
*5200018400 PCB Assy, REED SW [U] 4 - 22 *5534444200 Guide, Cassette 5534444200 Spring, Eject Arm  4 - 24 *5555551000 Arm, Eject 55800090600 Holder Assy, Switch 6 - 26 *5800098500 Cushion, Reel 7 - 27 *5555552000 Arm, Eject Actuating 8 - 28 *5800063800 Pulley Assy, Reel; R  4 - 29 *5581055000 Screw, Shoulder 9 - 30 *5504063700 Pulley Assy, Reel; L 10 - 31 *5555549000 Arm, Eject Preventing 11 - 32 *5524200000 Spring, Arm 12 - 33 *5534606000 Arm, Pinch Roller 13 - 34 *555402000 Arm, Pinch Roller 14 - 34 *5504828001 Arm Assy, Pinch Roller 15 - 38 *5555531000 Plate, Head Base; B 16 - 38 *55555531000 Plate, Head Base; B 17 - 38 *5555553000 Plate, Pressure 18 - 40 *5581062000 Clamper, Cord; E 18 - 41 *5540055000 Spring, Pinsion 19 - 42 *5555533000 Plate, Pressure 10 - 42 *55533174000 Arm, Tension 10 - 48 *553174000 Arm, Pinsion 11 - 48 *553174000 Arm, Pinsion 12 - 49 *580063200 Spring, Height Adj. 13 - 49 *5504716000 Arm, Tension 14 - 55 *5504716000 Arm, Pinsion 15 - 50 *580063200 Arm, Pinsion 16 - 50 *5504716000 Arm, Pinsion 17 - 50 *5534683100 Arm, Pinsion 18 - 50 *5504716000 Arm, Pinsion 19 - 50 *5504716000 Plate Assy, Reel; L 20 *5556658000 Arm, Pinsion 21 - 51 *5534683100 Arm, Pinsion 22 *555565688000 Arm, Pinsion 23 *5556688000 Arm, Pinsion 24 - 52 *5504716000 Plate Assy, Head Mounting 25 *5504716000 Plate Assy, Head Mounting 26 *5504714000 Plate Assy, Head Mounting 27 *5504715000 Bracket Assy, Holder; Pinsion 28 *5504715000 Bracket Assy, Holder; Pinsion 29 *5504715000 Bracket Assy, Holder; Pinsion 20 *5504715000 Bracket Assy	4 -21	5200010410	
4 - 22 *5534444200 Guide, Cassette \$		*5200018400	
4 - 23 *5524201000 Spring, Eject Arm  4 - 24 *5555551000 Arm, Eject 4 - 25 *5800098500 Cushion, Reel 4 - 27 *5555552000 Arm, Eject Actuating 4 - 28 *580063800 Pulley Assy, Reel; R  4 - 29 *5581055000 Screw, Shoulder 4 - 30 \$800063700 Pulley Assy, Reel; L 4 - 31 *5555549000 Arm, Eject Preventing 5 *5524200000 Arm, Eject Preventing 5 *5534606000 Arm, Eject Preventing 5 *5534606000 Arm, Eject Preventing 5 *5504828001 Arm Assy, Pinch Roller 6 - 34 \$5504828001 Arm Assy, Pinch Roller 7 - 35 *5800060100 Chassis Assy, Mechanism 7 *5555531000 Plate, Head Base; B 7 - 38 *5555531000 Plate, Head Base; B 7 - 39 *5504717000 Plate Assy, Head Base 7 - 40 *5581062000 Clamper, Cord; E 7 - 41 \$540055000 Steel Ball, φ2 7 - 42 *5555533000 Plate, Pressure 7 - 42 *5555533000 Plate, Pressure 7 - 43 *5800064400 Spring, Tension 7 - 44 *5569613000 Arm, Tension 7 - 48 *5540056000 Steel Ball, φ3 7 - 49 \$800063300 Table Assy, Reel; R 7 - 50 \$800063200 Table Assy, Reel; C 8 - 51 \$534683100 Guide, Cassette; L 9 - 52 *5504716000 Plate, Cassette; L 9 - 53 *556568000 Plate, Prension Adj. 9 - 54 \$556668000 Plate, Tension Adj. 9 - 55 \$5504716000 Plate, Cassette; R 9 - 56 *5504715000 Bracket Assy, Holder; R	4 - 22		
4 - 25  *5800090600 Holder Assy, Switch 4 - 26  *5800098500 Cushion, Reel 4 - 27  *5555552000 Arm, Eject Actuating 9  Holder Assy, Reel; R  4 - 29  *5581055000 Screw, Shoulder 1 - 30  \$800063700 Pulley Assy, Reel; L 1 - 31  *5555549000 Arm, Eject Preventing 2  *5524200000 Spring, Arm 3  *5534606000 Arm, Pinch Roller  4 - 34  \$504828001 Arm Assy, Pinch Roller 4 - 35  *5800060100 Chassis Assy, Mechanism 4 - 36  *5524285000 Spring, Pinch Roller 4 - 37  *5555531000 Plate, Head Base; B 4 - 38  *5655530000 Plate, Head Base; A  4 - 39  *5504717000 Plate Assy, Head Base Clamper, Cord; E 2  *5555533000 Plate, Pressure 3  *5800064400 Spring, Height Adj. 5  *569613000 Head, Erase 4 - 44  \$569613000 Head, Erase 4 - 45  *5524208000 Spring, Tension 5  *5540056000 Arm, Tension 5  *5540056000 Arm, Tension 5  *5540056000 Table Assy, Reel; R 7  *5534683100 Plate, Pressure 7  *5534683100 Plate, Pressure 8  *5524141000 Spring, Height Adj. 9  *5540056000 Arm, Tension 9  *5540056000 Arm, Tension 1  *5540056000 Plate Assy, Reel; L 2  *5504716000 Plate Assy, Reel; L 3  *555668000 Plate, Tension Adj. 9  *5534614000 Guide, Cassette; R 1  *5504714000 Bracket Assy, Holder; R 9  *5504715000 Bracket Assy, Holder; R			
4 - 25       *5800090600       Holder Assy, Switch         4 - 26       *5800098500       Cushion, Real         4 - 27       *5555552000       Arm, Eject Actuating         4 - 28       5800063800       Pulley Assy, Reel; R         4 - 29       *5581055000       Screw, Shoulder         4 - 30       5800063700       Pulley Assy, Reel; L         4 - 31       *5555549000       Arm, Eject Preventing         4 - 32       *5524200000       Spring, Arm         4 - 33       *5534606000       Arm, Pinch Roller         4 - 35       *5800060100       Chassis Assy, Mechanism         4 - 36       *5524285000       Spring, Pinch Roller         Plate, Head Base; B       Plate, Head Base; B         Plate, Head Base; B       Plate, Head Base; B         Plate, Head Base; B       Plate, Pressure         Steel Ball, φ2       Steel Ball, φ2         4 - 41       *5540056000       Steel Ball, φ2         4 - 43       *580064400       Spring, Tension         4 - 44       *556953174000       Arm, Fiest Head         4 - 45       *5524141000       Spring, Tension         4 - 47       *5533174000       Arm, Fiest Head         4 - 49       *800063200       Table As	4 - 24	*5555551000	Arm, Eject
4 - 27  *5555552000 Arm, Eject Actuating 4 - 28  5800063800 Pulley Assy, Reel; R  4 - 29  *5581055000 Screw, Shoulder 4 - 30  5800063700 Pulley Assy, Reel; L 4 - 31  *5555549000 Arm, Eject Preventing 5800063700 Arm, Eject Preventing 5800063700 Pulley Assy, Reel; L 6  Arm, Eject Preventing 7  Spring, Arm 7  Arm, Eject Preventing 7  Spring, Arm 8  Arm, Eject Preventing 8  Arm, Eject Actuating 9  Pulley Assy, Reel; L 8  Arm, Eject Actuating 9  Arm, Eject Preventing 9  Ar	4 - 25	*5800090600	
4 - 28		*5800098500	Cushion, Reel
4 - 29 *5581055000 Screw, Shoulder 4 - 30 \$800063700 Pulley Assy, Reel; L 4 - 31 *5555549000 Arm, Eject Preventing 5 Spring, Arm 4 - 32 *5524200000 Spring, Arm 6 - 33 *5534606000 Arm, Pinch Roller  4 - 34 \$504828001 Arm Assy, Pinch Roller  4 - 35 *5800060100 Chassis Assy, Mechanism 7 *5555531000 Plate, Head Base; B 7 *10 Plate, Head Base; B 7 *10 Plate, Head Base; B 7 *10 Plate, Head Base; B 8 *10 Plate, Head Base; B 9 *10 Plate, Head Base 10 Clamper, Cord; E 11 S540056000 Steel Ball, φ2 11 S540056000 Plate, Pressure 12 *555553000 Plate, Pressure 13 *5800064400 Spring, Height Adj. 14 *1 \$569613000 Head, Erase 15 *10 Spring, Tension 16 *10 Spring, Tension 17 *10 Spring, Tension 18 *10 Spring, Tension 19 *10 Spring, Tension 10 Arm, Tension 10 Spring, Tension 11 *10 Spring, Tension 12 *10 Spring, Tension 13 *10 Spring, Tension 14 *10 Spring, Tension 15 *10 Spring, Tension 16 *10 Spring, Tension 17 *10 Spring, Tension 18 *10 Spring, Tension 19 Spring, Tension 10 Arm, Tension 11 Spring, Tension 11 Spring, Tension 12 Spring, Tension 13 Spring, Tension 14 *10 Spring, Tension 15 Spring, Tension 16 Table Assy, Reel; R 17 Table Assy, Reel; R 18 Table Assy, Reel; R 19 Spring, Tension Adj. 19 Spring, Tension Adj. 10 Spring, Tension Adj. 10 Spring, Tension Adj. 10 Spring, Tension Adj. 11 Plate, Tension Adj. 12 Spring, Tension Adj. 13 Spring, Tension Adj. 14 *10 Spring, Tension Adj. 15 Spring, Tension Adj. 16 Spring, Tension Adj. 17 Spring, Tension Adj. 18 Spring, Tension Adj. 19 Spring, Tension Adj. 19 Spring, Tension Adj. 19 Spring, Tension Adj. 10 Spring, Tension Adj. 10 Spring, Tension Adj. 11 Spring, Tension Adj. 11 Spring, Tension Adj. 12 Spring, Tension Adj. 13 Spring, Tension Adj. 14 Spring, Tension Adj. 14 Spring, Tension Adj. 15 Spring, Tension Adj. 16 Spring, Tension Adj. 17 Spring, Tension Adj. 18 Sp	4 - 27	*5555552000	Arm, Eject Actuating
4 - 30	4 - 28	5800063800	Pulley Assy, Reel; R
4 - 30	4 - 29	*5581055000	Screw, Shoulder
4 - 32 *5524200000 Spring, Arm 4 - 33 *5534606000 Arm, Pinch Roller  4 - 34 5504828001 Arm Assy, Pinch Roller 4 - 35 *5800060100 Chassis Assy, Mechanism 5 *5524285000 Spring, Pinch Roller 9 Plate, Head Base; B 9 Plate, Head Base; B 1 - 38 *555553000 Plate, Head Base; B 1 - 39 *5504717000 Plate, Head Base; B 2 - 41 5540056000 Steel Ball, φ2 3 - 42 *5555533000 Plate, Pressure 4 - 43 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 4 - 45 *5524141000 Spring, Height Adj. 5 - 46 *5524208000 Arm, Tension 5 - 47 *5533174000 Arm, Tension 5 - 48 550063200 Table Assy, Reel; L 6 - 51 5534683100 Plate, Assy, Reel; L 7 - 52 *5504716000 Plate Assy, Reel; L 8 - 52 *5504716000 Plate Assy, Head Mounting 9 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY 1 - 55 5534614000 Guide, Cassette; R 1 - 56 *5504714000 Bracket Assy, Holder; R	4 - 30	5800063700	
4 - 33 *5534606000 Arm, Pinch Roller  4 - 34 5504828001 Arm Assy, Pinch Roller  4 - 35 *5800060100 Chassis Assy, Mechanism  4 - 36 *5524285000 Spring, Pinch Roller  4 - 37 *5555531000 Plate, Head Base; B  4 - 38 *565553000 Plate, Head Base; A  4 - 39 *5504717000 Plate Assy, Head Base  4 - 40 *5581062000 Clamper, Cord; E  5540055000 Plate, Pressure  4 - 41 *5540055000 Plate, Pressure  4 - 42 *5555533000 Plate, Pressure  4 - 43 *5800064400 Spring, Height Adj.  5 *5524141000 Spring, Height Adj.  5 *5524141000 Arm, Tension  4 - 46 *5524208000 Arm, Tension  5 *56006000 Steel Ball, φ3  4 - 49 \$800063300 Arm, Tension  5 *56006000 Steel Ball, φ3  4 - 49 \$800063200 Arm, Tension  5 *5540056000 Plate Assy, Reel; R  7 *5534683100 Guide, Cassette; L  9 *5555658000 Plate, Tension Adj.  4 - 54 \$56966100 Head, REC-PLAY  4 - 55 \$534614000 Guide, Cassette; R  4 - 56 *5504716000 Bracket Assy, Holder; R	4 - 31	*5555549000	Arm, Eject Preventing
4 - 34		*5524200000	
4 - 35  *5800060100  Chassis Assy, Mechanism	4 - 33	*5534606000	Arm, Pinch Roller
4 - 36       *5524285000       Spring, Pinch Roller         4 - 37       *5555531000       Plate, Head Base; B         4 - 38       *5555530000       Plate, Head Base; A         4 - 39       *5504717000       Plate, Head Base; A         4 - 40       *5581062000       Clamper, Cord; E         4 - 41       5540056000       Steel Ball, φ2         4 - 42       *555553000       Plate, Pressure         4 - 43       *5800064400       Spacer, Erase Head         4 - 44       5569613000       Head, Erase         4 - 45       *5524141000       Spring, Height Adj.         5 - 46       *5524208000       Spring, Tension         4 - 47       *5533174000       Arm, Tension         5 - 48       5540056000       Table Assy, Reel; R         7 - 50       5800063200       Table Assy, Reel; L         6 - 51       5534683100       Guide, Cassette; L         7 - 52       *5555658000       Plate, Tension Adj.         8 - 55       5534614000       Guide, Cassette; R         8 - 56       *5504714000       Bracket Assy, Holder; L         8 - 56       *5504715000       Bracket Assy, Holder; R	4 - 34	5504828001	
4 - 36       *5524285000       Spring, Pinch Roller         4 - 37       *5555531000       Plate, Head Base; B         4 - 38       *5555530000       Plate, Head Base; A         4 - 39       *5504717000       Plate, Head Base; A         4 - 40       *5581062000       Clamper, Cord; E         4 - 41       5540056000       Steel Ball, φ2         4 - 42       *555553000       Plate, Pressure         4 - 43       *5800064400       Spacer, Erase Head         4 - 44       5569613000       Head, Erase         4 - 45       *5524141000       Spring, Height Adj.         5 - 46       *5524208000       Arm, Tension         4 - 47       *5533174000       Arm, Tension         4 - 48       5800063300       Table Assy, Reel; R         4 - 50       5800063200       Table Assy, Reel; L         4 - 51       5534683100       Guide, Cassette; L         4 - 52       *5504716000       Plate Assy, Head Mounting         4 - 53       *5555658000       Plate, Tension Adj.         4 - 55       5534614000       Guide, Cassette; R         4 - 56       *5504714000       Bracket Assy, Holder; L         4 - 56       *5504715000       Bracket Assy, Holder; R	4 - 35	*5800060100	Chassis Assy, Mechanism
4 - 38 *555530000 Plate, Head Base; A  4 - 39 *5504717000 Plate Assy, Head Base 4 - 40 *5581062000 Clamper, Cord; E 4 - 41 5540055000 Steel Ball, φ2 4 - 42 *5555533000 Plate, Pressure 5 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 5 *5524141000 Spring, Height Adj. 5 *6524208000 Spring, Tension 6 *4 - 47 *5533174000 Arm, Tension 7 *5533174000 Arm, Tension 8 *5540056000 Steel Ball, φ3  4 - 49 \$800063300 Table Assy, Reel; R 7 *55 *5504716000 Plate Assy, Head Mounting 8 *5555658000 Plate, Tension Adj. 9 *5555658000 Plate Assy, Head Mounting 9 *10 *10 *10 *10 *10 *10 *10 *10 *10 *10	4 - 36	*5524285000	Spring, Pinch Roller
4 - 39 *5504717000 Plate Assy, Head Base 4 - 40 *5581062000 Clamper, Cord; E 4 - 41 5540055000 Steel Ball, φ2 4 - 42 *5555533000 Plate, Pressure 4 - 43 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 4 - 45 *5524141000 Spring, Height Adj. 5 *5524141000 Spring, Tension 5 *5524208000 Arm, Tension 6 * 47 *5533174000 Arm, Tension 7 * 5533174000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 7 * 55046183100 Guide, Cassette; L 7 * 552 *554614000 Plate Assy, Head Mounting 7 * 5534614000 Guide, Cassette; R 7 * 5504714000 Bracket Assy, Holder; R 7 * 5504715000 Bracket Assy, Holder; R			
4 - 40 *5581062000 Clamper, Cord; E 4 - 41 5540055000 Steel Ball, φ2 4 - 42 *5555533000 Plate, Pressure 4 - 43 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 4 - 45 *5524208000 Spring, Height Adj. 5 - 46 *5524208000 Arm, Tension 5 - 48 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 5 - 50 5800063200 Table Assy, Reel; L 6 - 51 5534683100 Guide, Cassette; L 7 - 52 *5504716000 Plate Assy, Head Mounting 7 - 53 *555658000 Plate, Tension Adj.  4 - 54 556966100 Head, REC-PLAY 7 - 55 5534614000 Guide, Cassette; R 7 - 56 *5504714000 Bracket Assy, Holder; L 7 - 57 *5504715000 Bracket Assy, Holder; R	4 - 38	*5555530000	Plate, Head Base; A
4 -41 5540055000 Steel Ball, φ2 4 -42 *5555533000 Plate, Pressure 4 -43 *5800064400 Spacer, Erase Head  4 -44 5569613000 Head, Erase 4 -45 *5524141000 Spring, Height Adj. 5 -46 *5524208000 Spring, Tension 4 -47 *5533174000 Arm, Tension 5 -48 5540056000 Table Assy, Reel; R 7 -50 5800063200 Table Assy, Reel; L 7 -51 5534683100 Guide, Cassette; L 7 -52 *5504716000 Plate, Tension Adj. 7 -54 5599606100 Head, REC-PLAY 7 -55 5534614000 Guide, Cassette; R 7 -56 *5504714000 Bracket Assy, Holder; L 7 -57 *5504715000 Bracket Assy, Holder; R			
4 - 42 *5555533000 Plate, Pressure 4 - 43 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 4 - 45 *5524141000 Spring, Height Adj. 5524208000 Spring, Tension 4 - 47 *5533174000 Arm, Tension 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 5500063200 Table Assy, Reel; L 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *555668000 Plate, Tension Adj.  4 - 54 5599606100 Head, REC-PLAY 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 57 *5504715000 Bracket Assy, Holder; R			
4 - 43 *5800064400 Spacer, Erase Head  4 - 44 5569613000 Head, Erase 4 - 45 *5524141000 Spring, Height Adj. 4 - 46 *5524208000 Spring, Tension 4 - 47 *5533174000 Arm, Tension 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 7 - 50 5800063200 Table Assy, Reel; L 9 - 51 5534683100 Guide, Cassette; L 1 - 52 *5504716000 Plate Assy, Head Mounting 1 - 53 *5555658000 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY 5 5534614000 Guide, Cassette; R 5 5504714000 Bracket Assy, Holder; L 5 *5504715000 Bracket Assy, Holder; R			
4 - 44 5569613000 Head, Erase 4 - 45 *5524141000 Spring, Height Adj. 4 - 46 *5524208000 Spring, Tension 4 - 47 *5533174000 Arm, Tension 5540056000 Table Assy, Reel; R 5500063200 Table Assy, Reel; L 51 5534683100 Guide, Cassette; L 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  4 - 54 556966100 Head, REC-PLAY 556 *5504714000 Guide, Cassette; R 56 *5504714000 Guide, Cassette; R 56 *5504714000 Bracket Assy, Holder; L 57 *5504715000 Bracket Assy, Holder; R			
4 - 45 *5524141000 Spring, Height Adj. 4 - 46 *5524208000 Spring, Tension 4 - 47 *5533174000 Arm, Tension 4 - 48 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 4 - 50 5800063200 Table Assy, Reel; L 4 - 51 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 57 *5504715000 Bracket Assy, Holder; R	4 - 43	~5800064400	Spacer, Erase mead
4 - 46 *5524208000 Spring, Tension 4 - 47 *5533174000 Arm, Tension 4 - 48 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 4 - 50 5800063200 Table Assy, Reel; L 4 - 51 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  -4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R		5569613000	
4 - 47 *5533174000 Arm, Tension 4 - 48 5540056000 Steel Ball, φ3  4 - 49 5800063300 Table Assy, Reel; R 4 - 50 5800063200 Guide, Cassette; L 4 - 51 5534683100 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			Spring, Height Adj.
4 - 47 *5533174000 Arm, Tension 4 - 48 5540056000 Steel Ball, φ3 4 - 49 5800063300 Table Assy, Reel; R 4 - 50 5800063200 Guide, Cassette; L 4 - 51 5534683100 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj. - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			Spring, Tension
4 - 49 5800063300 Table Assy, Reel; R 4 - 50 5800063200 Table Assy, Reel; L 4 - 51 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			Arm, Tension
4 - 50 5800063200 Table Assy, Reel; L 4 - 51 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *555658000 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R	4 - 48	5540056000	Steel Ball, $\phi 3$
4 - 51 5534683100 Guide, Cassette; L 4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj.  -4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			
4 - 52 *5504716000 Plate Assy, Head Mounting 4 - 53 *5555658000 Plate, Tension Adj. -4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			
4 - 53 *5555658000 Plate, Tension Adj.  4 - 54 5569606100 Head, REC-PLAY  4 - 55 5534614000 Guide, Cassette; R  4 - 56 *5504714000 Bracket Assy, Holder; L  4 - 57 *5504715000 Bracket Assy, Holder; R			
.4 - 54 5569606100 Head, REC-PLAY 4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			
4 - 55 5534614000 Guide, Cassette; R 4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			
4 - 56 *5504714000 Bracket Assy, Holder; L 4 - 57 *5504715000 Bracket Assy, Holder; R			
4 - 57 *5504715000 Bracket Assy, Holder; R			
7 - 50 "5524202000 Spring, Holder			
	7 - 58	0024202000	oping, noide


[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA [C]: CANADA [E]: EUROPE

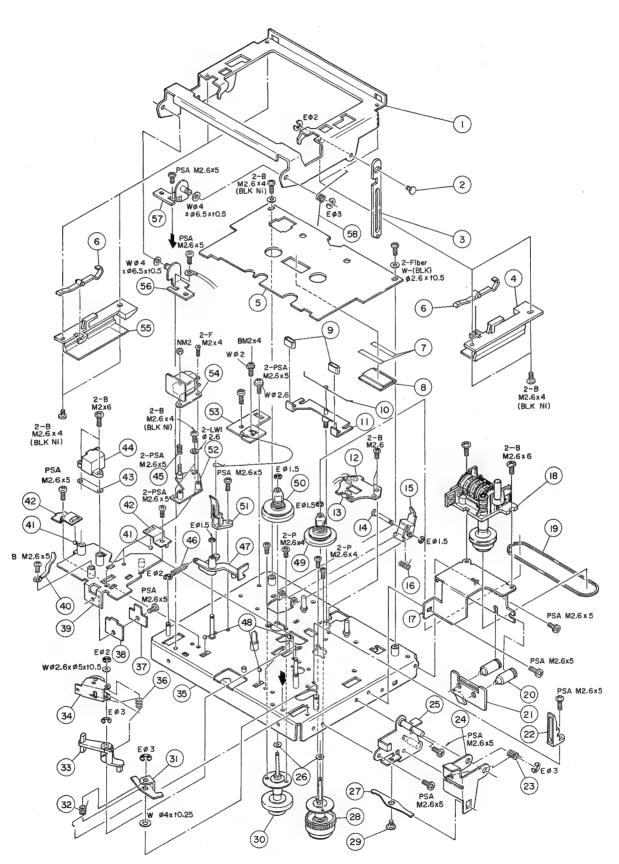


## 9. PC BOARDS AND PARTS LISTS

PC Boards shown viewed from foil side.

#### LEVER SWITCH PCB ASSY

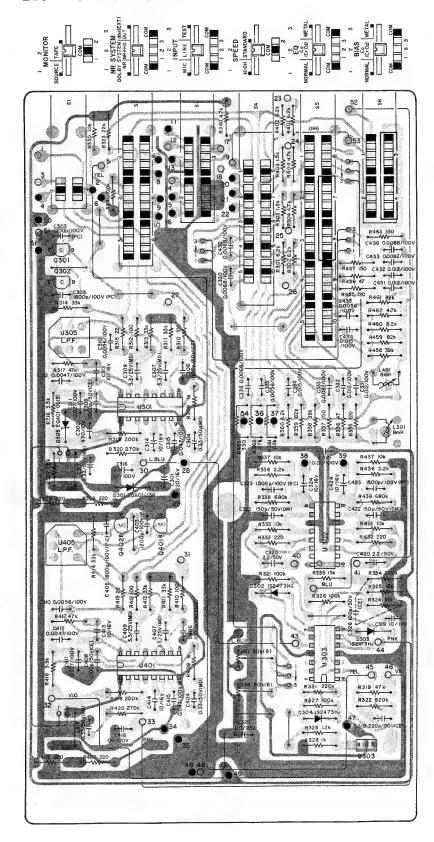

#### REC/PLAY AMPL PCB ASSY

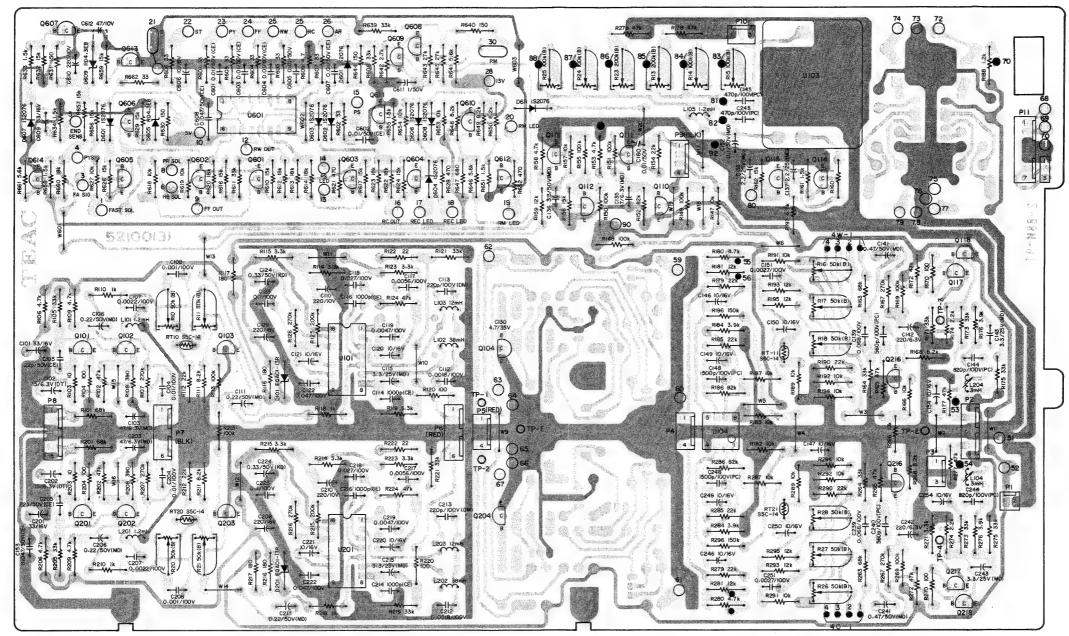

- NOTES


  1. PC Boards shown viewed from foil side.
  2. The colors used on the PCB illustrations have the following significance:

  : +B power supply circuit
  : -B power supply circuit
  : GND
  : Other


  3. Resistor values are in ohms (k = 1,000 ohms).

  4. All capacitor values are in microfarads (p = picofarads).


#### JOINT PCB ASSY

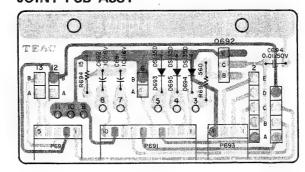

#### POWER SUPPLY PCB ASSY

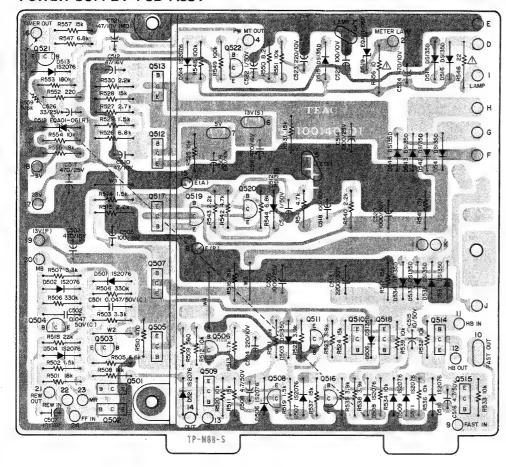

#### METER AMPL PCB ASSY

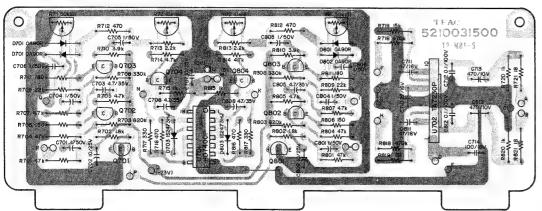

Parts marked with \*require longer delivery time than regular parts.

#### LEVER SWITCH PCB ASSY

REF. NO.		DESCRIPTION
	5200013900 5200013910	PCB Assy [U] PCB Assy [All except U]
	5210013900 5210022000	PCB [U] PCB [All except U]
	IC's	
U301,U401 U302 U303	5147040000 5220405200 5220405300	NE645B LM13600 LM324
	TRANSISTO	OR\$
Q301, Q401 Q302, Q402 Q303	5145178000 5145178000 5231755500	2SC1684S 2SC1684S 2SD985
	DIODES	
D301 D302~D304 D305	5143118000	Zener, EQA01-13R 1S2473HJ Zener, EQA01-06S
All resiste		I RESISTORS ±5% tolerance and 1/4 watt.
R301, R401	5183101000	6.2kΩ
R302, R402 R303, R403	5183101000 5183086000	6.2kΩ 1.5kΩ
R304, R404 R305, R405	5183101000 5183101000 5183086000 5183098000 5183066000	4.7kΩ 220Ω
R307 R309 R409	5183086000 5183082000	1.5kΩ 1kΩ
R310, R410 R311, R411	5183066000 5183086000 5183082000 5183058000 5183118000	100Ω 33kΩ
R313, R413 R314 R414	5183118000 5183118000	33kΩ 33kΩ
R315, R415	5183058000 5183118000 5183118000 5183042000 5183094000	22Ω
R317, R417 R318, R418	5183122000 5173136000 5183122000 5183140000 5183130000	4/kΩ 200kΩ
R319 R320 R420	5183122000	47kΩ 270kΩ
R321	5183130000	100kΩ
R322	5183152000	820kΩ
R323 R324, R325	5183152000 5183114000 5183106000	22kΩ 10kΩ
R326, R327 R328	5183130000 5183082000	100kΩ 1kΩ
R329	5183084000	1.2kΩ
R330 R331	5183098000 5183138000	4.7kΩ 220kΩ
R332, R432	5183066000	220Ω
	5183106000	10kΩ
R334 R335	5183138000 5183110000	220kΩ 15kΩ
	5183090000	2.2kΩ
	5183150000	10kΩ 680kΩ
R340	5183098000	4.7kΩ
	5183130000	100kΩ
R341 R355, R455	5183060000 5183050000 5183062000	120Ω 47Ω

REF. NO.	PARTS NO.	DESCRIPTION
R358, R458 R359, R459 R360, R460 R361, R461 R362, R462 R363, R463	5183120000 5183128000 5183104000 5183128000 5183098000 5183070000	39kΩ 82kΩ 8.2kΩ 82kΩ 4.7kΩ 330Ω
	CAPACITO	RS
C301 C302 C303, C403 C304, C404 C305, C405	5173054800 5173071800 5173733000 5173553800 5173735000	Elec. 220µF 16V Elec. 470µF 10V Polypro. 0.0012µF 100V 5% Elec. 0.33µF 50V Polypro. 0.0018µF 100V 5%
C306, C406 C307, C407 C308, C408 C309, C409 C310, C410	5172324000 5173561800 5172324000 5173561800 5170419000	Ceramic         0.001µF         50V         10%           Elec.         3.3µF         25V           Ceramic         0.001µF         50V         10%           Elec.         3.3µF         25V           Mylar         0.0056µF         100V         5%
C311 C411 C312 C412 C313 C413 C314 C414 C315 C415	5170435000 5170417000 5173010800 5173010800 5170441000	Mylar 0.027μF 100V 5% Mylar 0.0047μF 100V 5% Elec. 10μF 16V Elec. 10μF 16V Mylar 0.047μF 100V 5%
C316, C416 C317, C417 C318 C319 C320, C420	5170449000 5260225812 5172316000 5173010800 5172996800	Mylar         0.1μF         100V         5%           Elec.         0.33μF         50V         10%           Ceramic         220pF         50V         10%           Elec.         10μF         16V         16V           Elec.         2.2μF         50V         10
C321 C322, C422 C323, C423 C324, C424 C325	5170425000 5054330000 5173734000 5173010800 5173046800	Mylar 0.01μF 100V 5% Dip. Mica 150pF 50V 10% Polypro. 0.0015μF 100V 5% Elec. 10μF 16V Elec. 100μF 25V
C326 C330, C430 C331, C431 C332, C432 C333, C433	5172312000 5170421000 5170427000 5170427000 5170423000	Ceramic Mylar         100pF 0.0068µF 100V 5%           Mylar Mylar         0.012µF 100V 5%           Mylar 0.012µF 100V 5%           Mylar 0.0082µF 100V 5%
C334, C434 C335, C435 C336, C436	5170429000 5170419000 5170421000	Mylar 0.015µF 100V 5% Mylar 0.0056µF 100V 5% Mylar 0.0068µF 100V 5%
	VARIABLE	RESISTORS
R36, R37	5280004002	Semi-fixed 50 k $\Omega(B)$
	COILS	
L301, L401	5286000400	Choke, 8mH; Variable
	SWITCHES	
\$1 \$2 \$3 \$4 \$5 \$6	5300510200 5300510700 5300510600 5300511500 5300511600 5300510600	Lever, 2-2 Lever, 6-3 Lever, 4-3 Lever, 10-2 Lever, 10-3 Lever, 4-3
	MISCELLA	NEOUS
U305, U405	5292802600	Filter, Low-pass

[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA

[C]: CANADA [E]: EUROPE

## REC/PLAY AMPL PCB ASSY

Т	REF. NO.	PARTS NO.	DESCRIPTION
f		5200013211 5200013131	PCB Assy [U] PCB Assy [All except U]
		5210013100 5210021200	PCB [U] PCB [All except U]
		IC's	
ı	U101, U201 U104 U601	5147040000 5147024000 5147047000	JRC4558DF
		TRANSISTO	DRS
	Q101, Q201 Q102, Q202 Q103, Q203 Q104, Q204 Q110	5145119000 5042461000 5145185000 5145086000 5145132000	2SC1327T 2SD655E 2SC1636-2
	Q111 Q112 Q113 Q114 Q115	5145178000 5145132000 5145178000 5145082000 5145178000	2SA933LNS 2SC1684S 2SC2060Q
	Q117, Q217	5145185000 5145178000 5145132000 5230770700 5145091000	25C1841E
	Q605 Q606~Q609 Q610 Q611~Q614	5230770700 5145091000 5042553000 5145091000	2SC945AK 2SA733P
		DIODES	
	D101, D201 D601 ~ D604 D605 D606 ~ D608 D609	5224012510 5143143000	Zener, RD4.3E 1S2076
	D610, D611	5224012510	1S2076
	All resist	CARBOI ors are rated:	N RESISTORS ±5% tolerance and 1/4 watt.
	R101, R201 R102, R202 R103, R203 R104, R204 R105, R205	5183122000	68kΩ 47kΩ 10Ω 100Ω 33kΩ
	R106, R206 R107, R207 R108, R208 R109, R209 R110, R210	5183098000 5183140000 5183072000 5183098000 5183082000	4.7kΩ 270kΩ 390Ω 4.7kΩ 1kΩ
	R111, R211 R112, R212 R113, R213 R114, R214 R115, R215	5183104000 5183114000 5183130000 5183094000 5183094000	8.2kΩ 22kΩ 100kΩ 3.3kΩ 3.3kΩ
	R116, R216 R117, R217 R118, R218 R119, R219 R120, R220	5183064000 5183064000 5183082000 5183118000 5183058000	180Ω 180Ω 1kΩ 33kΩ 100Ω
	1		

REF. NO.	PARTS NO.	DESCRIPTION
R121, R221 R122, R222 R123, R223 R124, R224 R125, R225	5183042000 5183094000	33kΩ 22Ω 3.3kΩ 47kΩ 200kΩ
R126, R226	5183140000	270kΩ
R127, R227	5183066000	220Ω
R128, R228	5183082000	1kΩ
R147	5183106000	10kΩ
R148~R151	5183130000	100kΩ
R152	5183128000	82kΩ
R153	5183098000	4.7kΩ
R154	5183114000	22kΩ
R155	5183130000	100kΩ
R156	5183110000	15kΩ
R157	5183106000	10kΩ
R158	5183098000	4.7kΩ
R159	5183114000	22kΩ
R160	5183010000	1Ω
R161	5183086000	1.5kΩ
R162	5183110000	15kΩ
R163, R263	5183126000	68kΩ
R164, R264	5183118000	33kΩ
R165, R265	5183122000	47kΩ
R166, R266	5183106000	10kΩ
R167, R267	5183138000	220kΩ
R168, R268	5183104000	8.2kΩ
R169, R269	5183130000	100kΩ
R170, R270	5183058000	100Ω
R171, R271	5183094000	3.3kΩ
R172, R272	5183122000	47kΩ
R173, R273	5183118000	33kΩ
R174, R274	5183090000	2.2kΩ
R175, R275	5183118000	33kΩ
R176, R276	5183096000	3.9kΩ
R177, R277	5183122000	47kΩ
R178, R278	5183122000	47kΩ
R179, R279	5183114000	22kΩ
R180, R280	5183098000	4.7kΩ
R181, R281	5183108000	12kΩ
R182, R183	5183106000	10kΩ
R184, R284	5183096000	3.9kΩ
R185, R285	5183114000	22kΩ
R186, R286	5183128000	82kΩ
R187, R287	5183106000	10kΩ
R188	5183084000	1.2kΩ
R189, R289	5183106000	10kΩ
R190, R290	5183114000	22kΩ
R191, R291	5183106000	10kΩ
R192, R292	5183106000	10kΩ
R193, R293	5183108000	12kΩ
R194, R294	5183106000	10kΩ
R195, R295	5183108000	12kΩ
R196, R296	5183134000	150kΩ
R197	5183098000	4.7kΩ
R601~R607	5183046000	33 Ω
R608	5183118000	33kΩ
R609	5183026000	4.7Ω
R610	5183110000	15kΩ
R611	5183118000	33kΩ

[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA [C]: CANADA [E]: EUROPE

REF. NO.	PARTS NO.	DESCRIPTION	
R612~R614	5183112000	18kΩ	·
R616, R617	5183110000	15kΩ	
R618, R619	5183106000	10kΩ	
R620	5183112000	18kΩ	
R621	5183074000	470Ω	
R622, R623	5183112000	18kΩ	
R624	5183110000	15kΩ	
R626	5183086000	1.5kΩ	
R627	5183106000	10kΩ	
R628	5183074000	470Ω	
I B 632	5183110000 5183062000 5183110000 5183086000 5183118000	15kΩ 150Ω 15kΩ 1.5kΩ 33kΩ	
R640	5183062000	150Ω	
R641	5183100000	5.6kΩ	
R642	5183092000	2.7kΩ	
R643	5183116000	27kΩ	
R644	5183062000	150Ω	
R645	5183116000	27kΩ	
R646	5183100000	5.6kΩ	
R647	5183078000	680Ω	
R648~R650	5183104000	8.2kΩ	
R651	5183086000	1.5kΩ	
R652	5183074000	470Ω	
R653, R654	5183106000	10kΩ	
R655	5183086000	1.5kΩ	
R656, R657	5183110000	15kΩ	
R658	5183086000	1.5kΩ	
R659 R660 R661 R662	5183110000 5183112000 5183100000 5183046000	18kΩ 5.6kΩ	
	CAPACITO	RS	
C101, C201 C102, C202 C103, C203 C104, C204 C105, C205	5173027800 5171684000 5173587800 5170425000 5172304000	Din Tent 15uE	6.3V 6.3V 100V 5%
C106, C206	5173552800	Elec. 0.22µF Mylar 0.0022µF Mylar 0.001µF Elec. 220µF Elec. 220µF	50V
C107, C207	5170409000		100V 5%
C108, C208	5170401000		100V 5%
C109, C209	5173054800		16V
C110, C210	5173053800		16V
C111, C211	5173552800	Elec. 0.22 µF	50V
C112, C212	5170407000	Mylar 0.0018 µF	100V
C113, C213	5054745000	Dip, Mica 220 pF	50V 10%
C114, C214	5172324000	Ceramic 0.001 µF	50V 10%
C115, C215	5173561800	Elec. 3.3 µF	25V
C116, C216	5172324000	$\begin{array}{ccc} \text{Ceramic} & 0.001\mu\text{F} \\ \text{Mylar} & 0.0056\mu\text{F} \\ \text{Mylar} & 0.027\mu\text{F} \\ \text{Mylar} & 0.0047\mu\text{F} \\ \text{Elec.} & 10\mu\text{F} \end{array}$	50V 10%
C117, C217	5170419000		100V 5%
C118, C218	5170435000		100V 5%
C119, C219	5170417000		100V 5%
C120, C220	5173010800		16V
C121, C221	5173010800	Elec. 10μF	16V
C122, C222	5170441000	Mylar 0.047μF	100V 5%
C123, C223	5170449000	Mylar 0.1μF	100V 5%
C124, C224	5260225812	Elec. 0.33μF	50V 10%

REF. NO.	PARTS NO.	DESCRIPTION
C135 C136 C137 C138 C139, C239	5173507800 5173563800 5173554800 5173560800 5170455000	Elec. 0.47µF 50V
C140, C240 C141, C241 C142, C242 C143, C243 C144, C244	5173729000 5173554800 5173052800 5173481800 5173731000	Polypro. 560pF 100V 5% Elec. 0.47µF 50V Elec. 220µF 6.3V Elec. 3.3µF 25V Polypro. 820pF 100V 5%
C145, C245 C146, C246 C147 C148, C248 C149, C249	5173728000 5173010800 5173010800 5173734000 5173010800	Polypro. 470pF 100V 5% Elec. 10µF 16V Elec. 10µF 16V Polypro. 0.0015µF 100V 5% Elec. 10µF 16V
C150, C250 C151, C251 C152 C153 C154, C254	5173010800 5170411000 5173550800 5172344000 5173010800	Elec. $10\mu F$ $16V$ Mylar $0.0027\mu F$ $100V$ $5\%$ Elec. $0.1\mu F$ $50V$ Ceramic $0.047\mu F$ $50V$ $10\%$ Elec. $10\mu F$ $16V$
C160 C601~C605 C606 C607 C608	5172336000 5172336000 5173010800 5172336000 5054230000	
C609 C610 C611 C612	5173027800 5173053800 5172992800 5173035800	
	THERMIST	ORS
RT10, RT20 RT11, RT21	5143127000 5143127000	S5C14 S5C14
	VARIABLE	RESISTORS
R10, R20 R11, R21 R13, R23 R14, R24 R15, R25	5280004002 5280004002 5280004302 5280004202 5280004202	$\begin{array}{lll} \text{Semi-fixed} & 50 k \Omega (\text{B}) \\ \text{Semi-fixed} & 50 k \Omega (\text{B}) \\ \text{Semi-fixed} & 200 k \Omega (\text{B}) \\ \text{Semi-fixed} & 100 k \Omega (\text{B}) \\ \text{Semi-fixed} & 100 k \Omega (\text{B}) \\ \end{array}$
R16, R26 R17, R27 R18, R28	5280004002 5280004002 5280004002	$ \begin{array}{ll} \text{Semi-fixed} & 50 k \Omega(\text{B}) \\ \text{Semi-fixed} & 50 k \Omega(\text{B}) \\ \text{Semi-fixed} & 50 k \Omega(\text{B}) \\ \end{array} $
	COILS	
L101, L201 L102, L202 L103, L203 L104, L204 L105	5160107000 5286001100 5286001200 5286001000 5160151000	Choke, 1200µH Choke, 38mH Trap, 12mH Choke, 3.1mH; Variable Choke, 1.2mH
	MISCELLA	NEOUS
U103 P1 P2 P3 P4	5292200300 5122126000 5122130000 5122127000 5122128000	OSC Unit, 100kHz Connector Plug, 2P (WHT) Connector Plug, 6P (WHT) Connector Plug, 3P (WHT) Connector Plug, 4P (WHT)
P5 P6 P7 P8 P9	5122301000 5122303000 5122187000 5122130000 5122185000	Connector Plug, 4P (RED) Connector Plug, 6P (RED) Connector Plug, 6P (BLK) Connector Plug, 6P (WHT) Connector Plug, 4P (BLK)
P10 P11	5122127000 5122131000	Connector Plug, 3P (WHT) Connector Plug, 7P (WHT)

[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA

[C]: CANADA [E]: EUROPE

## JOINT PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
		PCB Assy [U] PCB Assy [All except U]
	5210014100 5210022300	PCB [U] PCB [All except U]
	TRANSIST	OR .
Q692	5231756800	2SD826EFG
	DIODES	
D693~D695	5224013210	DS135D
	CARBON R	ESISTORS
R693 R694		560Ω 5% ¼W 15Ω 5% ¼W
	CAPACITO	RS
C691, C692	5173010800 5172324000	Elec. 10μF 16V Ceramic 0.001μF 50V 10%
	MISCELLANEOUS	
P691 P692 P693	5122153000 5122148000 5122147000	Connector Plug, 5P (WHT)

### POWER SUPPLY PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	5200014002 5200014012	PCB Assy (C) PCB Assy (All except C)
	5210014001 5210022101	PCB (C) PCB (All except C)
	TRANSIST	
Q501, Q502 Q503, Q504 Q505 Q506 Q507	5231755500 5145085000 5231755100 5145091000 5231755500	2SD985 2SA934R 2SD880Y 2SC945AK 2SD985
Q509, Q510 Q511 Q512, Q513	5042553000 5230505300 5230770700 5231755500 5230505300	2SB750 2SC1841E 2SD985
Q518	52307,70700 5231755100 5230505300 5145091000 5042553000	2SB750
	DIODES	
D501, D502 D503 D504, D505 D506 D507~D511	5224012510 5224013210 5224012510 5224013210 5224012510	1S2076 DS135D 1S2076 DS135D 1S2076
D513, D514 D515~D517 D518, D519	5143059000 5224012510 5224013210 5143153000 5224012510	1S2076 DS135D Zener, EQA01-06R
	5224013210 5224013210	

REF. NO.	PARTS NO.	DESCRIPTION
All resiste	CARBON ors are rated ±	RESISTORS 5% tolerance and 1/4 watt.
R501 R502 R503 R504 R505	5183112000 5183086000 5183094000 5183142000 5183100000	1.5kΩ 3.3kΩ 330kΩ
R506 R507 R508 R509 R510	5183142000 5183094000 5183112000 5183076000 5183074000	18k0
R511 R512 R513 R514 R515	5183110000 5183106000 5183098000 5183086000 5183090000	15kΩ 10kΩ 4.7kΩ 1.5kΩ 2.2kΩ
R516, R517 R518 R519 R520, R521 R522, R523	5183110000 5183114000 5183086000 5183106000 5183096000	15kΩ 22kΩ 1.5kΩ 10kΩ 3.9kΩ
R524 R525 R526 R527 R528	5183106000 5183110000 5183102000 5183092000 5183110000	10kΩ 15kΩ 6.8kΩ 2.7kΩ 15kΩ
I R530	5183086000 5183090000 5183110000 5183106000 5183110000	2.2kΩ 15kΩ 10kΩ
R535 R536 R537 R538 R539	5183096000 5183106000 5183110000 5183096000 5183106000	10kΩ 15kΩ 3.9kΩ 10kΩ
R540 R541, R542 R543 R544 R545	5183090000 5183098000 5183090000 5183102000 5183110000	2.2kΩ 4.7kΩ 2.2kΩ 6.8kΩ 15kΩ
R546 R547	5184233000 5183102000 5183130000 5183104000 5183106000	
R552 R553 R554 R555 R556	5183066000 5183136000 5183106000 5183112000 5184225000	$220\Omega$ $180 k\Omega$ $10 k\Omega$ $18 k\Omega$ $10 \Omega$ , Non Flammable
R557 R559	5183110000 5183310000	15kΩ 5.6kΩ
	CAPACITO	RS
C501, C502 C503 C504 C505 C506	5054230000 5173072800 5173053800 5173045800 5173082800	Ceramic         0.047μF         50V         10%           Elec.         470μF         16V           Elec.         220μF         10V           Elec.         100μF         16V           Elec.         1000μF         25V
C507 C508 C509 C510 C511	5173010800 5173006800 5173044800 5173035800 5173072800	Elec. 10μF 16V Elec. 4.7μF 50V Elec. 100μF 10V Elec. 47μF 10V Elec. 470μF 16V

[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA [C]: CANADA [E]: EUROPE

REF. NO.	PARTS NO.	DESCR	IPTION	
C512 C513 C514 C515 C516 C517 C517 C518 C519 C520 C520	5173036800 5173084800 5173082800 5173013800 5173006800 5173073800 5173048800 5173084800 5173084800 5173084800 5173588800	Elec. Elec. Elec. Elec. Elec. Elec. Elec. Elec. Elec.	47µF 1000µF 1000µF 10µF 4.7µF 470µF 100µF 1µF 1000µF 47µF	16V 50V 25V 50V 50V 25V 50V 50V 50V 50V
C522 C523 C524 C525 C526	5172992800 5173053800 5173071800 5173044800 5173028800	Elec. Elec. Elec. Elec. Elec.	1μF 220μF 470μF 100μF 33μF	50 V 10 V 10 V 10 V 25 V

REF. NO.	PARTS NO.	DESCRI	PTION		
	CAPACITO	RS			
C701, C801 C702, C802 C703, C803 C704, C804 C705, C805	5172992800 5173011800 5173005800 5172992800 5172992800	Elec.	1μF 10μF 4.7μF 1μF 1μF	35V 50V	
C706, C806 C707 C708, C808 C710 C711, C811	5172992800 5173011800 5173005800 5173018800 5173036800	Elec.	1μF 10μF 4.7μF 22μF 47μF	25V 35V 16V	
C712, C812 C713, C813 C714	5170449000 5173071800 5173081800	Mylar Elec. Elec.	0.1μF 470μF 1000μF	10V	±5%
	VARIABLE	RESISTO	RS		
R71, R81 R72, R82	5150156000 5150154000				

#### METER AMPL PCB ASSY.

REF. NO.	PARTS NO.	DESCRIPTION
	5200031500 5210031500	PCB Assy PCB
	IC's	
U701 U702	5147056000 5220406800	HD-7400P Analog, TA7230P
	TRANSIST	ORS
Q701, Q801 Q702, Q802 Q703, Q803 Q704, Q804	5145178000	2SC-1684S
	DIODES	
D701, D801 D702, D802 D703, D803	5224012800 5224012800 5143118000	0A90R 0A90R 1S2473HJ
A 11	CARBON R	
All resist	ors are rated	±5% tolerance and 1/4 watt.
R701, R801 R702, R802 R703, R803 R704, R804 R705, R805	5183152000 5183122000	47kΩ 1.8kΩ 820kΩ 47kΩ 4.7kΩ
R706, R806 R707, R807 R708, R808 R709, R809 R710, R810	5183098000 5183142000 5183114000	150Ω 4.7kΩ 330kΩ 22kΩ 3.9kΩ
R711, R811 R712, R812 R713, R813 R714, R814 R715, R815	5183564000 5183074000 5183090000 5183098000 5183082000	100Ω 470Ω 2.2kΩ 47kΩ 1kΩ
R716, R816 R717, R817 R718, R818 R719, R819 R720, R820	5183148000	470Ω 330Ω 560kΩ 15kΩ 1kΩ
R721, R821	5183040000	18Ω

#### IN/OUTPUT TERMINAL PCB ASSY (DBX) (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION
	5200013300 5200013310	PCB Assy [U] PCB Assy [All except U]
	5210013300 5210021400	PCB [U] PCB [All except U]
R365, R465	5183118000	Resistor, Carbon 33kΩ 5% ¼W

#### IN/OUTPUT TERMINAL PCB ASSY (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION
	5200013400 5200013410	PCB Assy [U] PCB Assy [All except U]
	5210013400 5210021500	PCB [U] PCB [All except U]
R379, R479 P13	5183120000 5122129000	Resistor, Carbon 39k $\Omega$ 5% $^{1}$ W Connector Plug, 5P (WHT)

#### SWITCH PCB ASSY (MEMORY) (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION				
	5200013700 5200013710	PCB Assy (Memory) [U] PCB Assy (Memory) [All except U]				
	5210013700 5210021800	PCB (Memory) [U] PCB (Memory) [All except U]				
Q691 R691 R692 S691	5145091000 5183086000 5183076000 5133019000	Transistor, 2SC945AK Resistor, Carbon 1.5k $\Omega$ 5% ¼W Resistor, Carbon 560 $\Omega$ 5% ¼W Switch, Rotary; 2-3				

[U]: U.S.A. [A]: AUSTRALIA [L]: LIMITED AREA

[C]: CANADA [E]: EUROPE

## REMOTE CONNECTOR PCB ASSY (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION		
		PCB Assy [U] PCB Assy [All except U]		
	5210013500 5210021600	PCB [U] PCB [All except U]		
	5122336000	Connector Socket, 12P		

#### REED SWITCH PCB ASSY (PC Board Omitted)

REF. NO.	PARTS NO.	DESCRIPTION				
	5200018400 5200018410	PCB Assy [U] PCB Assy [All except U]				
	5210018400 5210022500	PCB [U] PCB [All except U]				
S693 C693	5138006000 5054802400	Switch, Reed Capacitor, Mylar 0.01µF 100V 10%				

## 10. SEMICONDACTORS LISTS


JRC4558DF (TOP VIEW)	HD74000P (TOP VIEW)	LM13600 (TOP VIEW)	LM324 (TOP VIEW)	M54410P (TOP VIEW)	NE645B (TOP VIEW)		
1 5 8 1 1 5 5 4 4 5 5	1 0 14 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1 d°	1 0° 0 114 0 0 0 0 0 0 0 0 0 0 0 0 7 0 0 98	1 0 16	1 do p 16		
2SA733P 2SA933LNS	2SC1327T 2SC1684S 2SC1841E	2SA934R	2SC2060Q	2SB750 2SD880Y			
В	2SC1844F 2SC945AK 2SD655E C	B C	В — С	B — E	₿		
EC	E C B		E C B		B C		
2SC1636-2 2SC1636	2SC2270A-B 2SD985 C	TA7230P	1S2076 1S2473HJ 0A90R	-	DS135D  RD4.3EB RD13EB  DS135D		
B E	B E		-(6-				
	8	1000000	EQA01-06R EQA01-06S EQA01-13RF	-			
E C B	E C B	10	——————————————————————————————————————	_	SLP-114B		


## 11. ASSEMBLING HARDWARE CODING LISTS

All screws conform to ISO standards, and have crossrecessed heads, unless otherwise noted.

ISO screws have the head inscribed with a point as in the figure to the right.

#### FOR EXAMPLE:






<sup>\*</sup>Inner dia. for washers and nuts

	Code	Name	Туре		Code	Name	Туре
MACHINE SCREW	R	Round Head Screw		TAPPING SCREW	ВТА	Binding Head Tapping Screw(A Type)	
	P	Pan Head Screw	<b>(1)</b>		втв	Binding Head Tapping Screw(B Type)	
	Т	Stove Head Screw (Truss)	<b>8</b>		RTA	Round Head Tapping Screw(A Type)	
	В	Binding Head Screw	(3)		RTB	Round Head Tapping Screw(B Type)	
	F	Flat Countersunk Head Screw	<b>X</b>	SETSCREW	SF	Hex Socket Setscrew(Flat Point)	
	0	Oval Countersunk Head Screw			sc	Hex Socket Setscrew(Cup Point)	
WOOD SCREW	RW	Round Head Wood Screw			ss	Slotted Socket Setscrew(Flat Point)	
TAPTITE SCREW	PTT	Pan Head Taptite Screw	(X)	WASHER	E	E-Ring (Retaining Washer)	$\bigcirc$
	WTT	Washer Head Taptite Screw			w	Flat Washer (Plain)	
SEMS SCREW	BSA	Binding Head SEMS Screw(A Type)			sw	Lock Washer (Spring)	
	BSB	Binding Head SEMS Screw(B Type)			LWI	Lock Washer (Internal Teeth)	(2/2/2/2)
	BSF	Binding Head SEMS Screw(F Type)			LWE	Lock Washer (External Teeth)	Ş
	PSA	Pan Head SEMS Screw(A Type)			TW	Trım Washer (Countersunk)	0
	PSB	Pan Head SEMS Screw(B Type)		NUT	N	Hex Nut	<b>(2)</b>

## 12. BLOCK-DIAGRAM

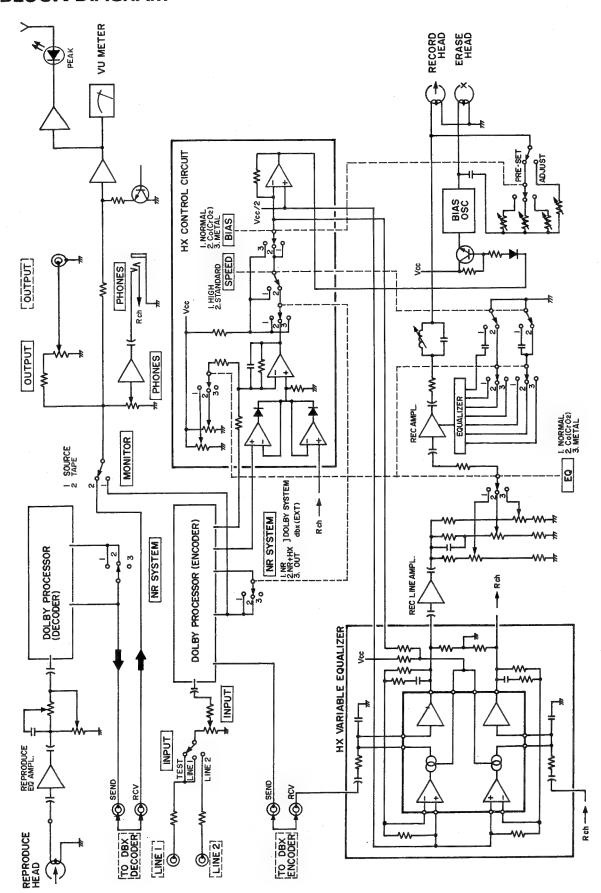

# 122 MASTER CASSETTE DECK

# TASCAM TEAC Production Products

TEAC CORPORATION

3-7-3 NAKA-CHO MUSASHINO TOKYO PHONE (0422) 53-1111

TEAC CORPORATION OF AMERICA

7733 TELEGRAPH ROAD MONTEBELLO CALIFORNIA 90640 PHONE (213) 726-0303

TEAC AUSTRALIA PTY., LTD.

165-167 GLADSTONE STREET SOUTH MELBOURNE VICTORIA 3205 PHONE 699-6000

# TEAC


## TECHNICAL INFORMATION

Change of Power Supply Transistor


NO. 8314 DATE 26 May 1983


This information is applicable to the TASCAM 122, TASCAM 133, C-3X, C-3XX, C-4X, V-9OR, V-95XX Cassette decks.

In order to increase the capacity of DC Power Supply circuit, the kind of transistor used in this circuit has been changed from 2SD985 to 2SD1022. These former and new transistors are interchangeable electrically. When excess heat of 2SD985 transistor is experienced, replacing it by 2SD1022 is suggested. On replacing it, care must be taken to the position of Emitter and Base electrodes. As shown in the figure below, these former and new transistors are different each other in the order of electrode number for Emitter and Base.

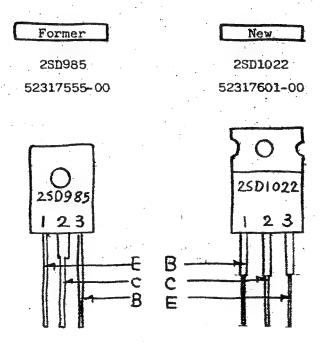

Two times aprox real size.

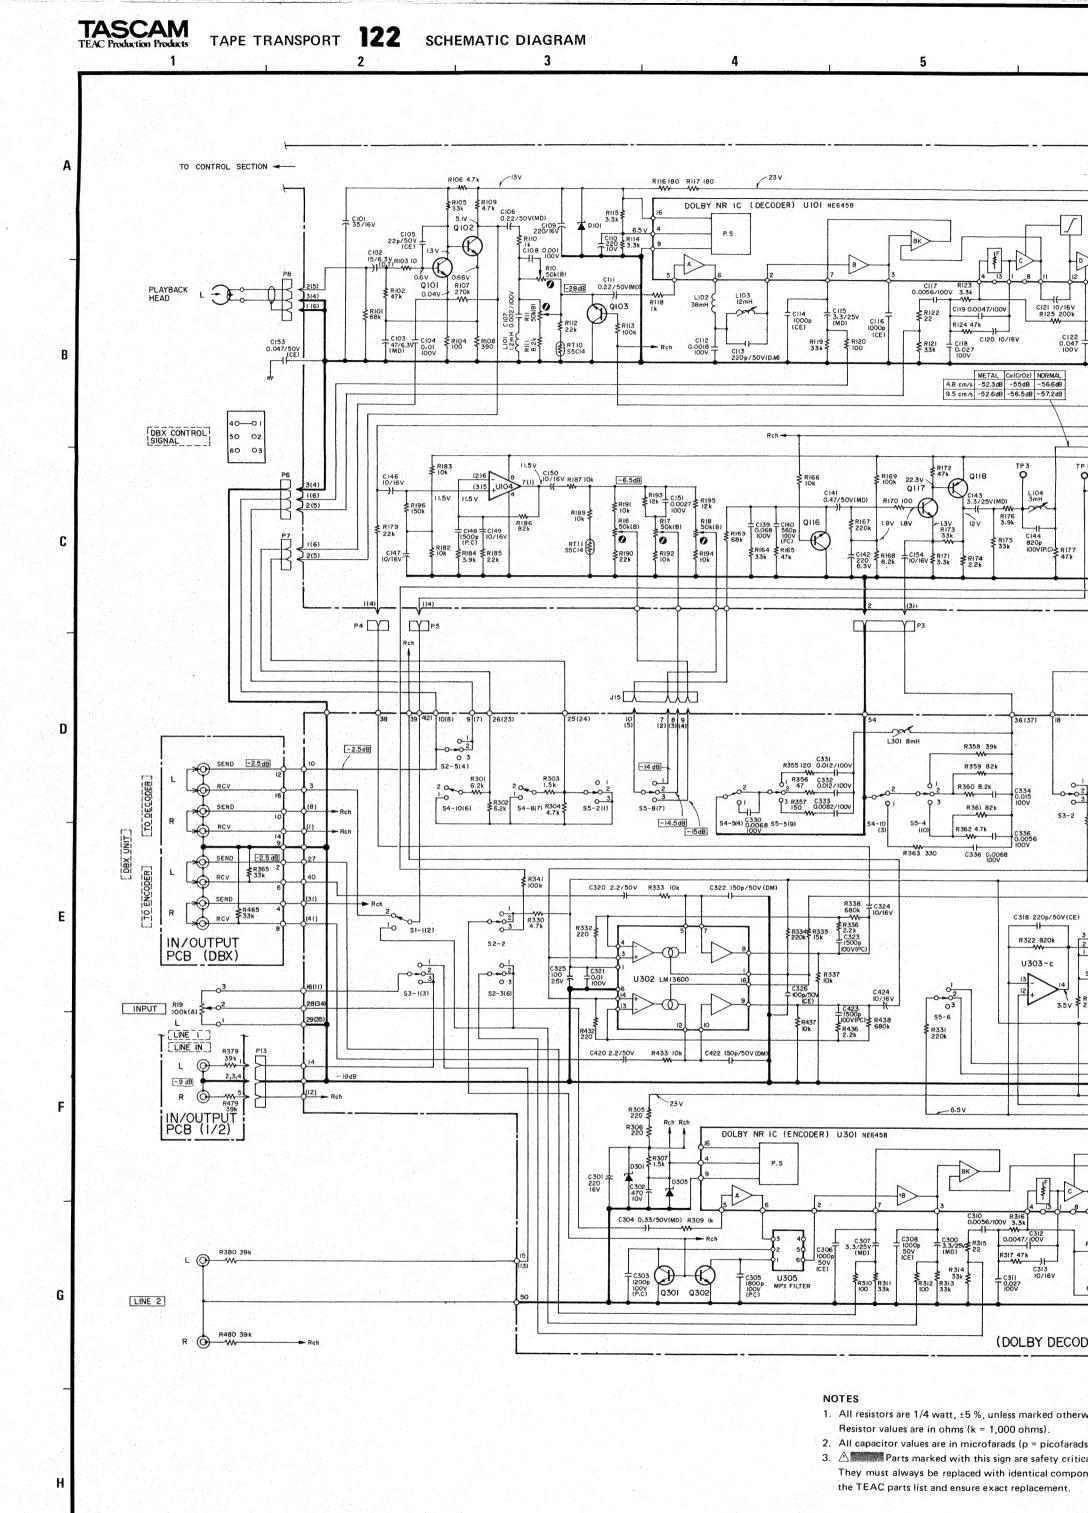

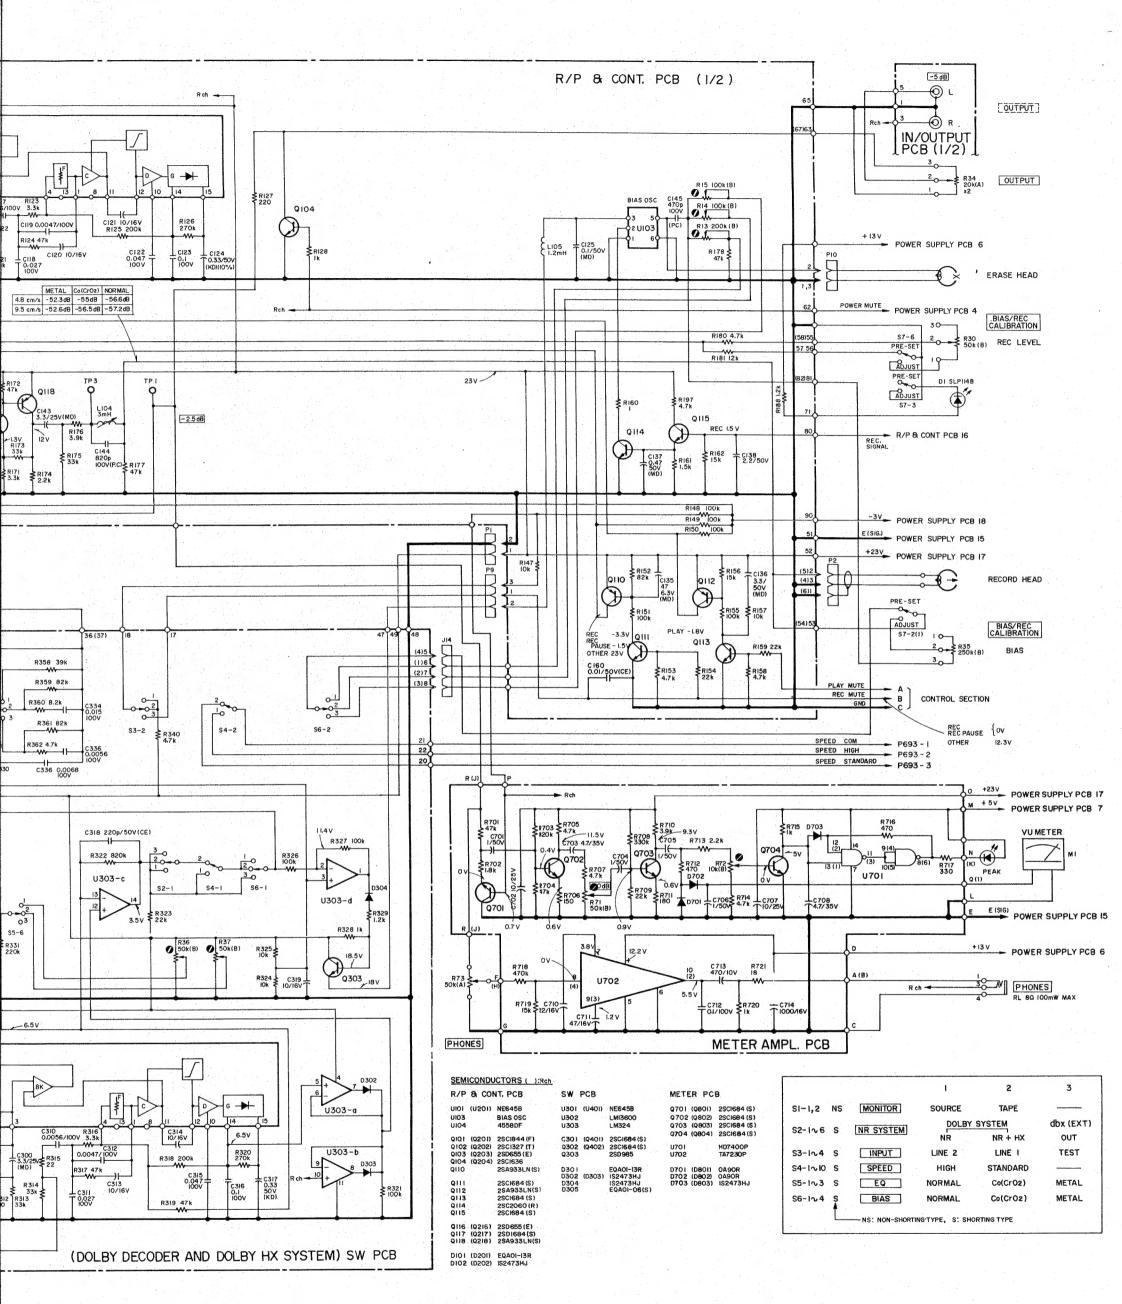

9

10

4 watt, ±5 %, unless marked otherwise. in ohms (k = 1,000 ohms). s are in microfarads (p = picofarads). rked with this sign are safety critical components. be replaced with identical components — refer to t and ensure exact replacement.

6


4. \_\_\_\_\_: front panel indication 5. \_\_\_\_\_: rear panel indication


6. +B power supply circuit
-B power supply circuit


7. DC voltage measurement conditionsMeasure with DC volt meter

Mode REC/PAUSE

122

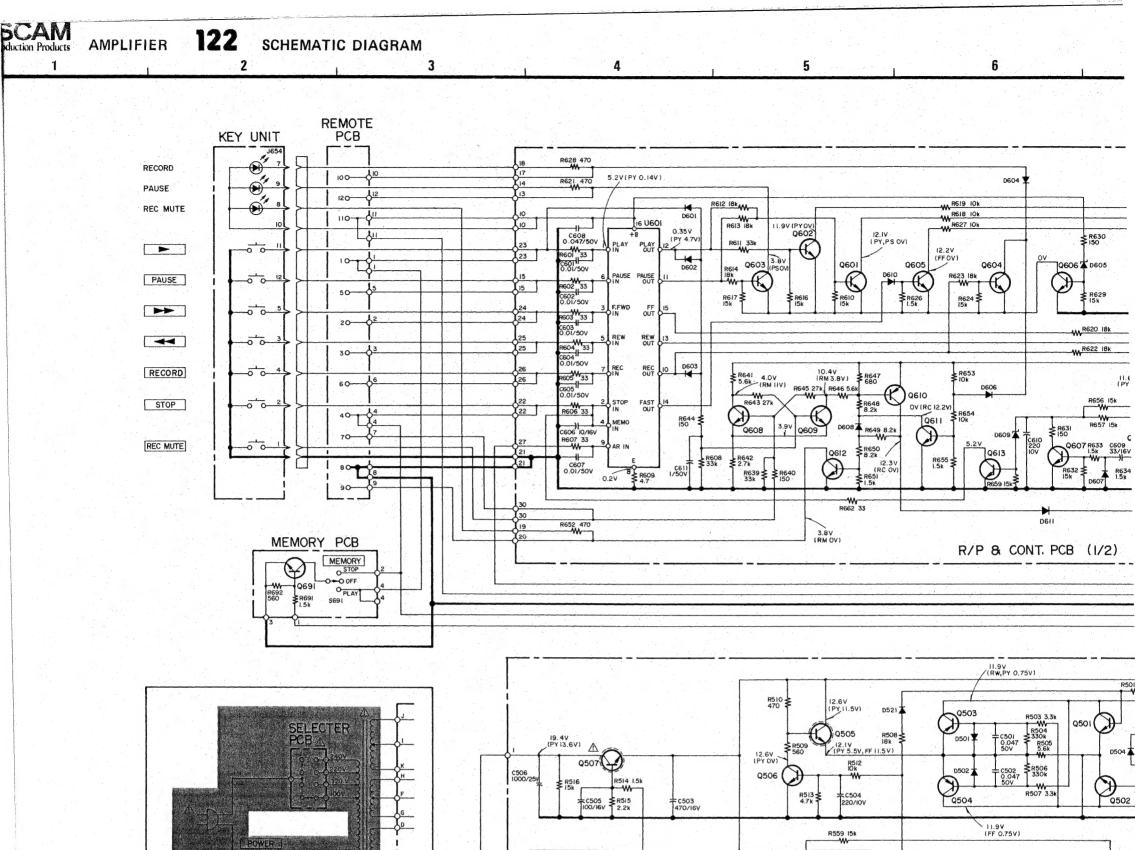

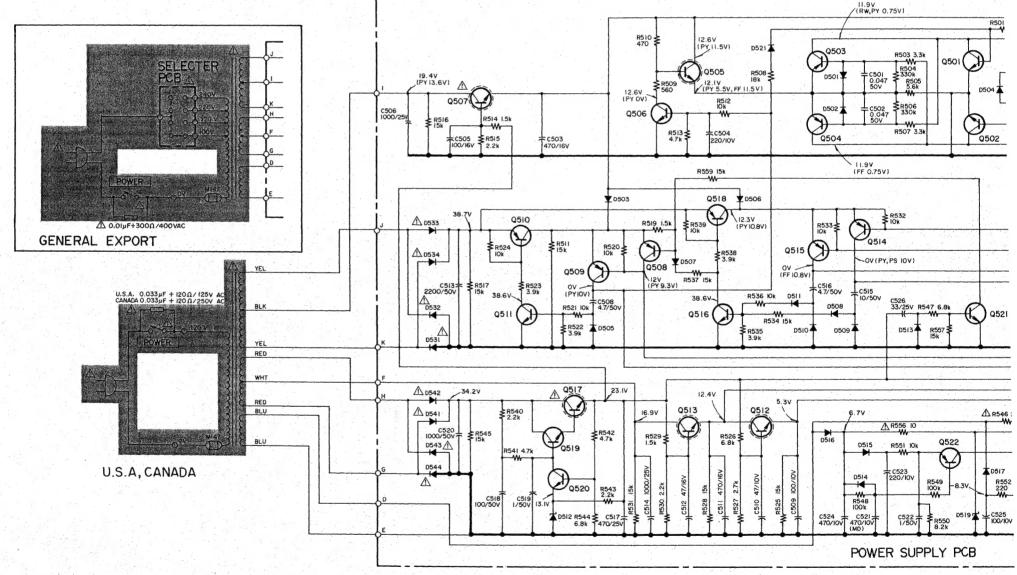

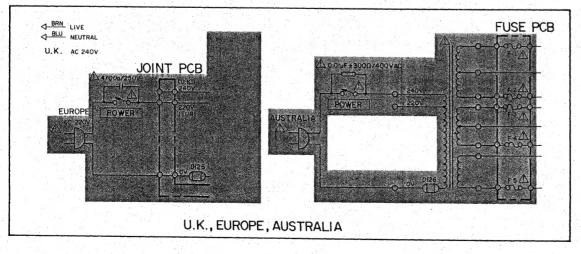

R/P B CONT PCB POWER SUPPLY PCB U601 M54410P Q501,Q502 0503,0504 25A934(R) 0601,0602 25CI84IA Q505 Q505 Q506 Q507 Q508 Q509,Q510 Q511 Q512,Q513 Q514,Q515 Q516 Q517 0603,0604 0605 2SC945A(K) 25C945A(K) 25CI84IA \* 250985 25A733(P) \* 25B750(R) 25C1841A \* 25D985 \* 25B750(R) 25C1841(A) 25D880(Y) 2SC945A(K) 2SA733(P) 2SC945A(K) D601 ~ D604 D605 D606 ~ D608 IS2076 R04.3EB IS2076 \* 258750 (R) RD4.3EB Q518 D610, D611 152076 Q519 ~ Q521

D501, D502 9691 DS1350 DS03 DS135D DS035D DS04 DS04 DS05 DS07 DS11 IS2076 DS12 DS135D DS135D DS135D DS135D DS135D DS18 DS14 DS20 (Not used DS21 DS14 DS14 DS14 DS14 DS14 DS15D DS14 DS14 DS14 DS14 DS15D DS14 DS14 DS14 DS15D DS14 DS14 DS15D D503 CONECTOR PCB 152076 RD13EB 152076 DS135D EQA01-06F (Not used) 152076 0692 2SC D693 ~ D695 DSI ( \* DARLINGTON PA 2SC945A(K) 2SA733(P)

#### NOTES


- 1. All resistors are 1/4 watt, ±5 %, unless marked otherwise. Resistor values are in ohms (k = 1,000 ohms).
- 2. All capacitor values are in microfarads (p = picofarads).
- 3. A Parts marked with this sign are safety critical components. They must always be replaced with identical components - refer to the TEAC parts list and ensure exact replacement.

6.

MEMORY PCB

25

7. DC v • Me • Mo

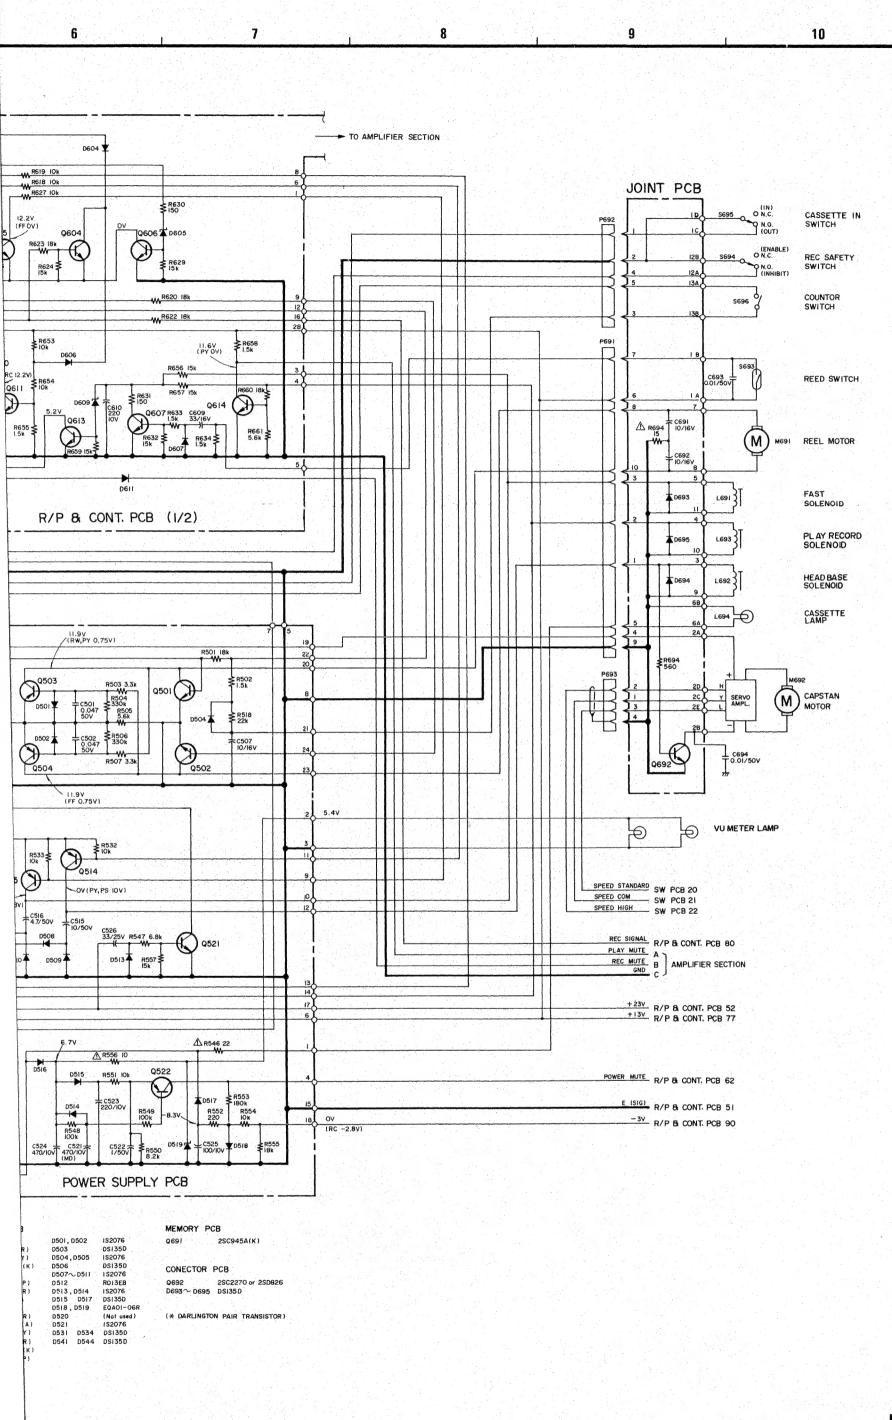

narked otherwise.

phms).

p = picofarads).

e safety critical components.

ntical components — refer to placement.

4. : front panel indication
5. : rear panel indication

. +B power supply circuit
-B power supply circuit

7. DC voltage measurement conditionsMeasure with DC volt meter

Mode REC/PAUSE

122
MASTER CASSETTE DECK

11